

How to Exchange GT Profile

This tool exchanges Color Profiles in GT-541 Printer Driver by selecting Yellow Ink GC-50Y / GC-51Y (new) you are going to use. At the same time, GT Firing Adjustment is upgraded too.

Note:

Before exchanging the Color Profiles, make sure that the target Yellow Ink cartridge is inserted to GT-541 and the ink inside is already exchanged by Initial Head Cleaning or "used up".

- GT Profile Exchanger

Execute GT Profile Exchanger by double-click in PC where GT-541 Printer Driver is installed. The following window appears.



The radio button shows the present Color Profiles installed. (The above shows that installed Color Profiles are for GC-50Y.) Select your Yellow Ink (either **GC-50Y** or "new" **GC-51Y**) by clicking the radio button and then click [Close to setup] button. The confirmation window will appear to tell you that Color Profiles are exchanged.

Note:

If you use more than one GT-541s and use only one PC for making print data, please be aware that Color Profiles are all COMMON for every GT-541. GT Profile Exchanger is available before you go into [Print] menu in application software.

- GT Firing Adjustment

GT Firing Adjustment is also updated automatically when you first click [Close to setup] button. The new version improves the process of adjusting so that you can do more quickly and easily in adjusting firing of four heads.

When operating, read through the instructions on each window of the wizard.