




BES-941,1241,961,1261,963,1263 Quick Ref.


For Technical Assistance Please Call Toll Free 1-877-4BROTHER

LOADING A DESIGN FROM A FLOPPY DISK


Insert floppy disk into the disk drive

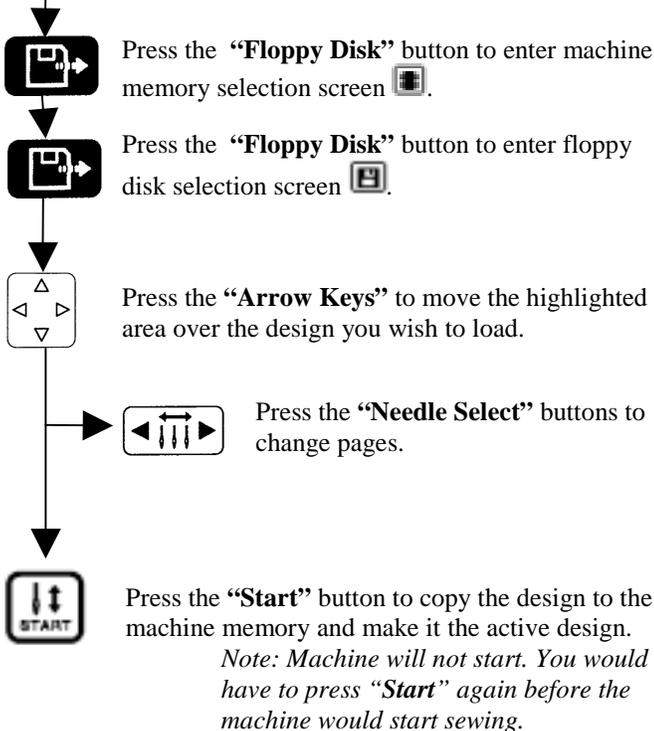


SETTING THE COLOR SEQUENCE

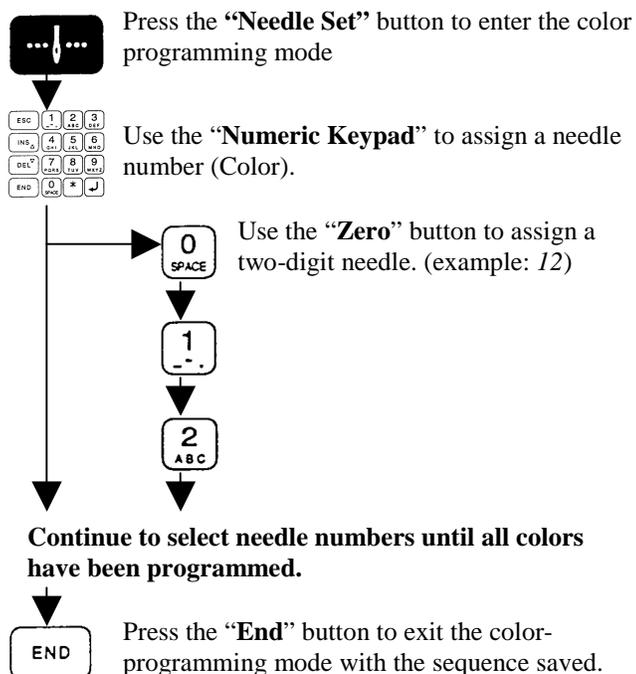

POSITIONING AND SEWING THE DESIGN

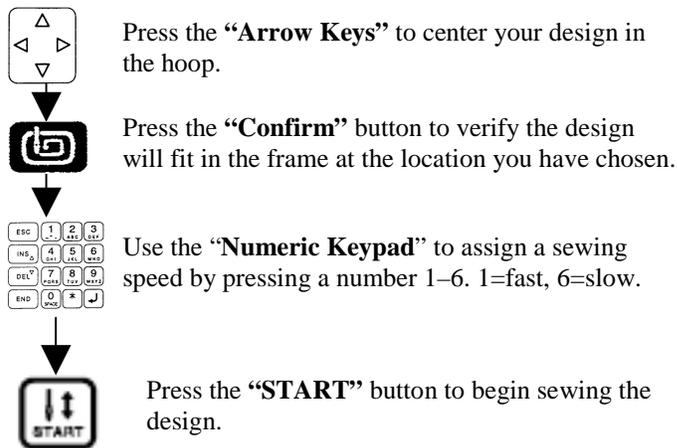


ENTER A DESIGN FROM THE MACHINE MEMORY

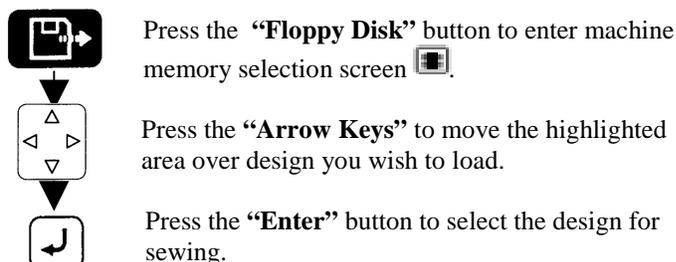


Set the color sequence for the design.

Position and Sew the design


ROTATE A DESIGN

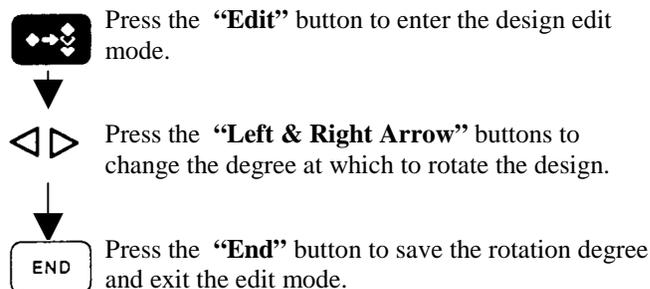

LOADING A DESIGN FROM COMPUTER

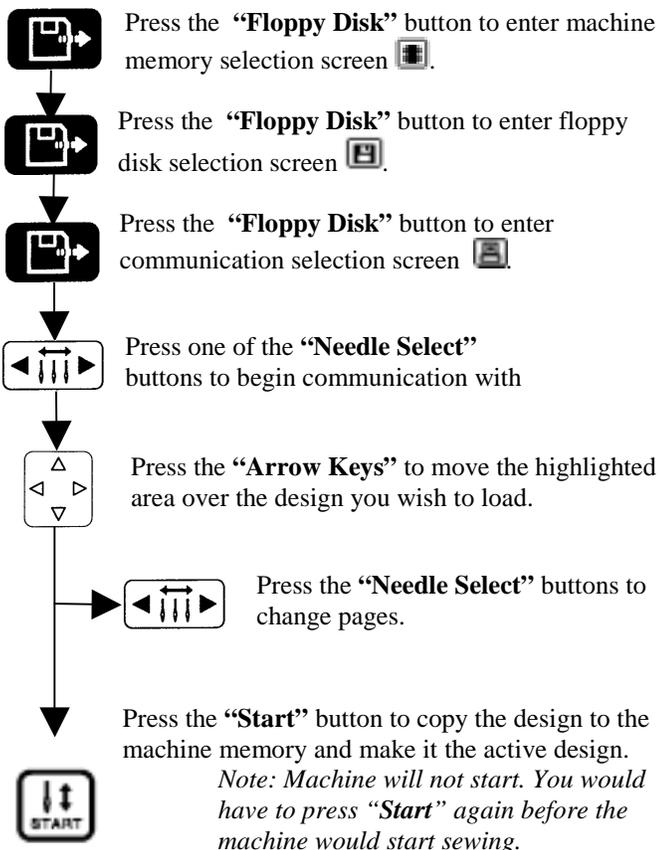


ERASING A STORED DESIGN FROM MEMORY

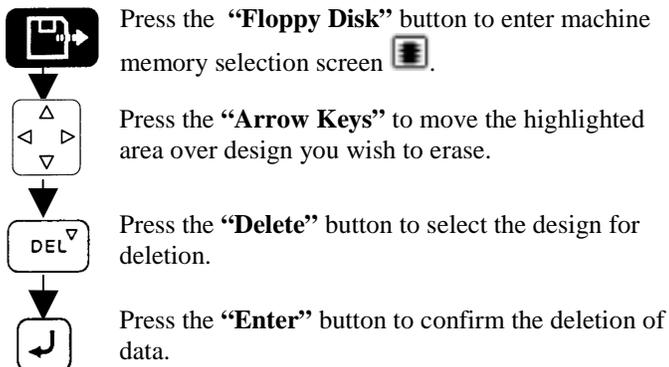

DELETE ALL DESIGNS STORED


Turn the power of the machine to the OFF position.

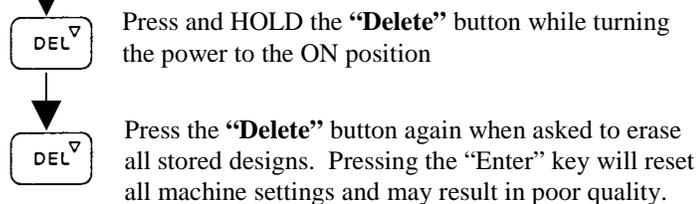

“FLOATING” THROUGH A DESIGN




From the **“Stand-By Screen”** (Above).

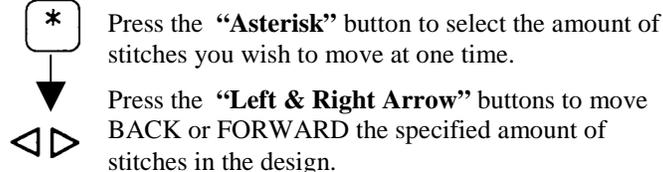


“FLOATING” TO A SPECIFIC STITCH NUMBER

From the **“Stand-By Screen”** (Above).

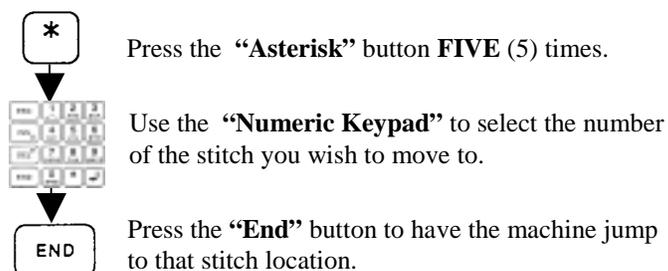


MOVING THE NEEDLE CASE

 

MANUALLY TRIMMING THE THREAD



 CANCELLING SEWING



From the **“Stand-By Screen”** (Above) and the machine stopped.

