

SEWING CHART

CATEGORY	NAME OF PATTERN	PATTERN	TYPE OF PRESSER FOOT	USE	REINFORCEMENT STITCHING	STITCH ADJUSTMENT BY STITCH WIDTH KEYS	STITCH ADJUSTMENT BY STITCH LENGTH KEYS	TWIN NEEDLE POSSIBILITY
UTILITY STITCH	STRAIGHT STITCH (LEFT)			General sewing, gathering, pintuck, etc.	R	★	★	NO
	STRAIGHT STITCH (MIDDLE)				R	—	★	OK (J)
	ZIGZAG STITCH			Overcasting, patchwork	R	★	★	OK (J)
	3 STEP ELASTIC ZIGZAG			Overcasting (medium, heavyweight and stretch fabrics) Tape attaching, darning	△	★	★	NO
	TRIPLE STRETCH STITCH			General sewing for reinforcement	△	★	★	NO
	OVERCASTING STITCH			Reinforcement of stretch fabric	△	★	★	NO
				Reinforcing of light and medium fabric	△	★	★	NO
				Reinforcing of thick fabric	△	★	★	NO
	BLIND HEM STITCH			Hemming woven fabrics	△	★	★	NO
	BLIND HEM STITCH STRETCH			Hemming stretch fabrics	△	★	★	NO
	ROUNDED BUTTONHOLE			Buttonholes for blouses and shirts		★	★	NO
	SQUARED BUTTONHOLE			Buttonholes for pajamas and shirts		★	★	NO
	STRETCH BUTTONHOLE			Buttonholes for stretch fabric		★	★	NO
	HEIRLOOM BUTTONHOLE			Buttonholes for stretch		★	★	NO
	KEYHOLE BUTTONHOLE			Buttonholes for suits and overalls		★	★	NO
	BLANKET STITCH			Appliqués	△	★	★	NO
	FEATHER STITCH			Smocking, decorative stitching	△	★	★	NO
	FAGOTING CROSS STITCH			Fagoting, decorative stitching	△	★	★	NO

CONTENTS

BEFORE USE

SEWING

UTILITY STITCHES

MAINTENANCE

SEWING CHART

PATTERNS (PROGRAMMED IN MACHINE)

CATEGORY	NAME OF PATTERN	PATTERN	TYPE OF PRESSER FOOT	USE	REINFORCEMENT STITCHING	STITCH ADJUSTMENT BY STITCH WIDTH KEYS	STITCH ADJUSTMENT BY STITCH LENGTH KEYS	TWIN NEEDLE POSSIBILITY
UTILITY STITCH	SCALLOP STITCH	19 		Decorating collar of blouse, edge of handkerchief	△	★	★	OK (J)
	EYELET	20 		For making eyelet on belt, etc		★	★	NO
DECORATIVE STITCH	SATIN STITCH	21 		For decoration, etc.	△	★	★	NO
		22 			△	★	★	NO
		23 			△	★	★	NO
		24 			△	★	★	NO
	CROSS STITCH	25 		For decoration etc.	△	★	★	NO
		26 			△	★	★	NO
HEIRLOOM	HEMSTITCHING	27 		Decorative and heirloom stitching	△	★	★	NO
		28 			△	★	★	NO
		29 			△	★	★	NO
		30 			△	★	★	NO
DECORATIVE STITCH	DECORATIVE STITCH	31 		Decorative topstitching	△	★	★	NO
		32 		For decoration, etc.	△	★	★	NO
		33 		For decoration, etc.	△	★	★	NO
		34 			△	★	★	NO
		35 			△	★	★	NO
		36 			△	★	★	NO

CATEGORY	NAME OF PATTERN	PATTERN	TYPE OF PRESSER FOOT	USE	REINFORCEMENT STITCHING	STITCH ADJUSTMENT BY STITCH WIDTH KEYS	STITCH ADJUSTMENT BY STITCH LENGTH KEYS	TWIN NEEDLE POSSIBILITY
DECORATIVE STITCH	DECORATIVE STITCH	³⁷		For decoration, etc.	△	★	★	NO
		³⁸			△	★	★	NO
		³⁹			△	★	★	NO
		⁴⁰			△	★	★	NO

R : The machine sews in reverse while the “REVERSE STITCH” button is pushed.

△ : The machine sews three reinforcement stitches and stops when the “REVERSE STITCH” button is pushed.

★ : Adjustments can be made.

— : Adjustments cannot be made.

CAUTION

Make sure to use the correct presser foot for each stitch pattern. Otherwise, the needle may strike the presser foot and bend or break, causing injury.