




BE-101,916,901,1216,1201 Quick Ref.


For Technical Assistance Please Call Toll Free 1-877-4BROTHER

LOADING A DESIGN FROM A FLOPPY DISK


Insert floppy disk into the disk drive

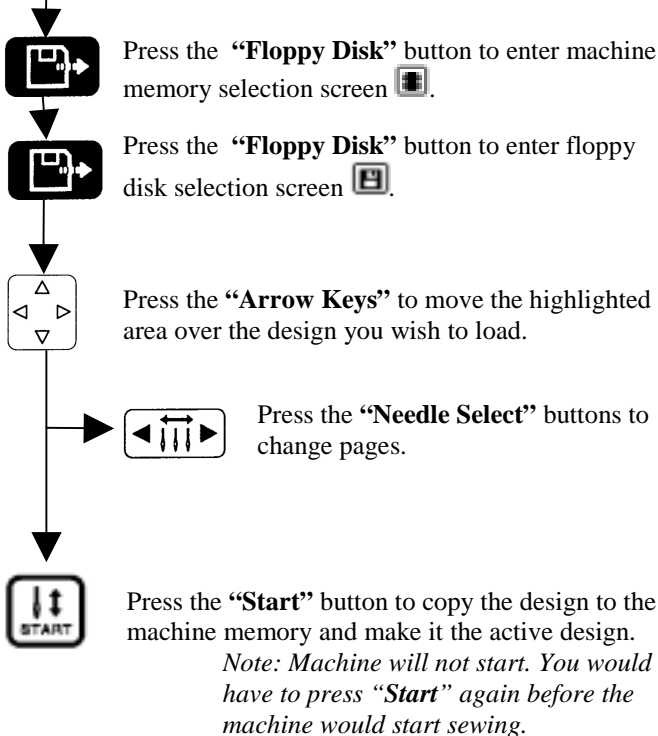

POSITIONING AND SEWING THE DESIGN

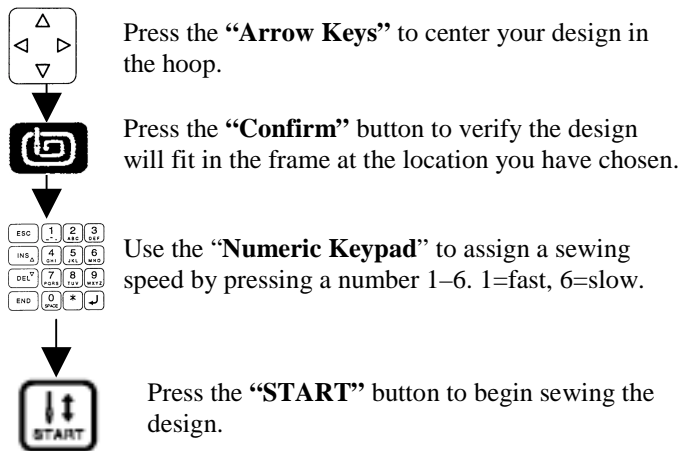


ENTER A DESIGN FROM THE MACHINE MEMORY

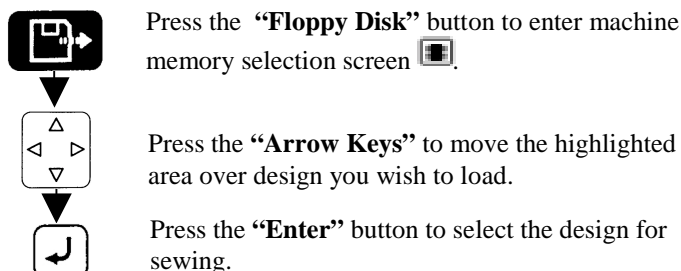


Set the color sequence for the design.

Position and Sew the design


SETTING THE COLOR SEQUENCE

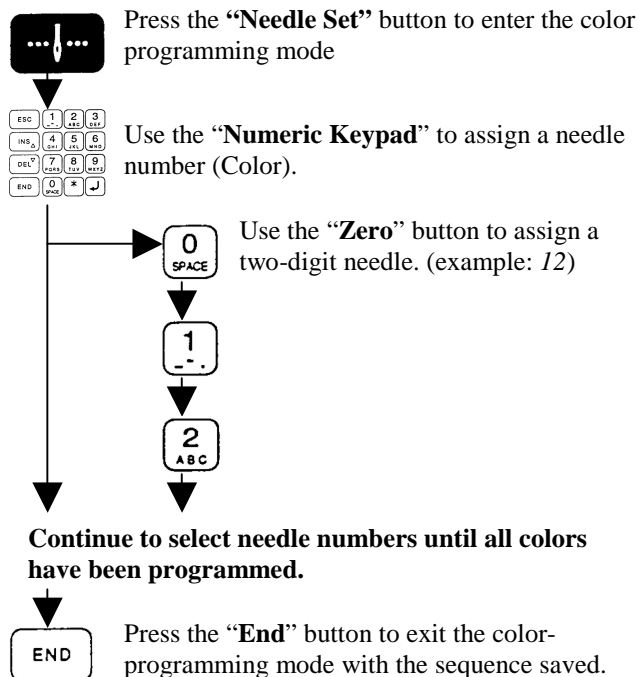


ROTATE A DESIGN

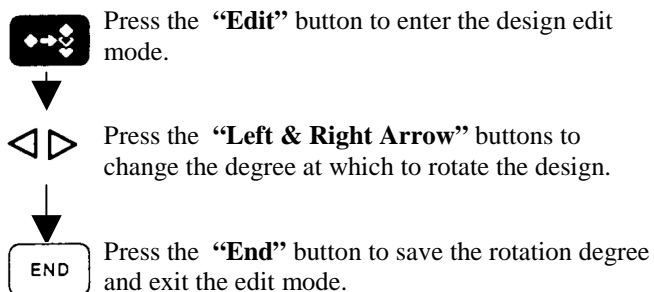

LOADING A DESIGN FROM COMPUTER

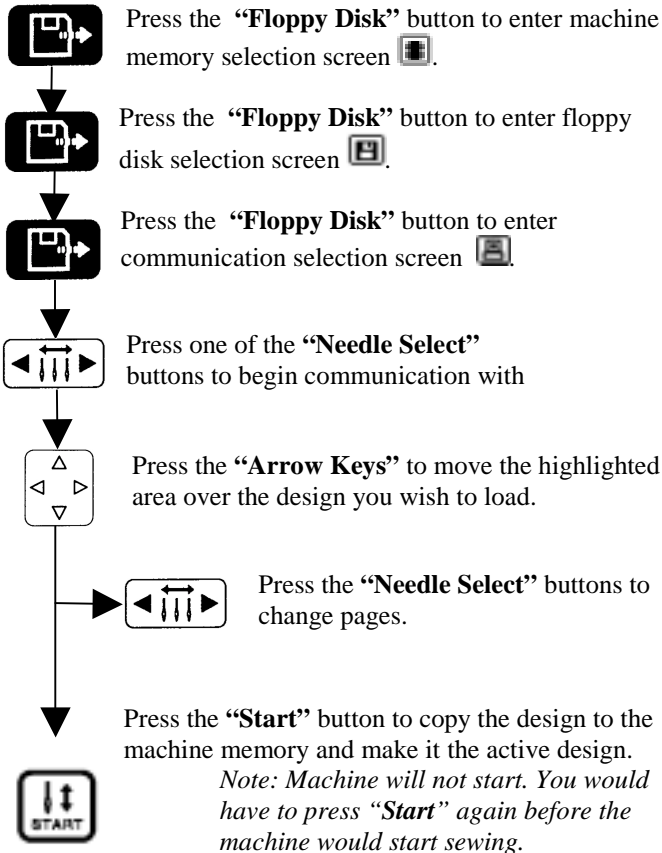


ERASING A STORED DESIGN FROM MEMORY

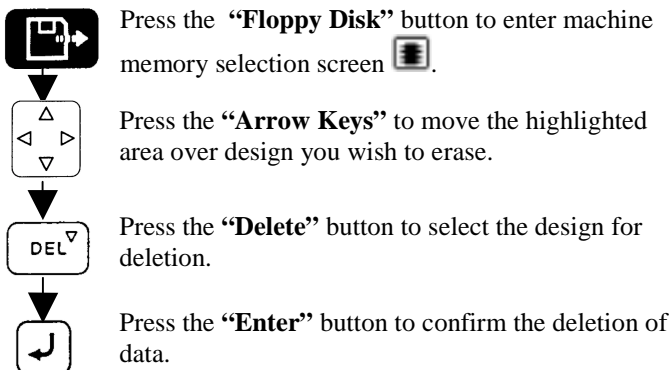


DELETE ALL DESIGNS STORED


Turn the power of the machine to the OFF position.

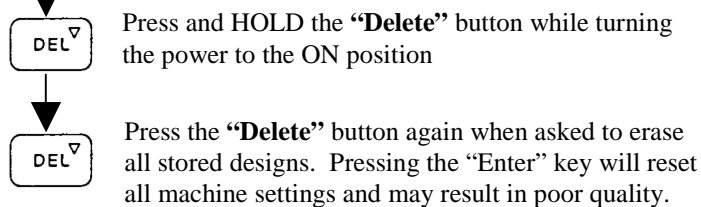

“FLOATING” THROUGH A DESIGN

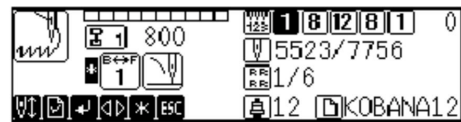


From the **“Stand-By Screen”** (Above).

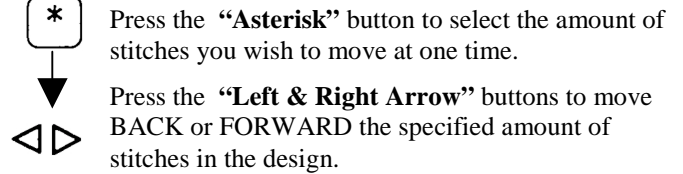


“FLOATING” TO A SPECIFIC STITCH NUMBER

From the **“Stand-By Screen”** (Above).

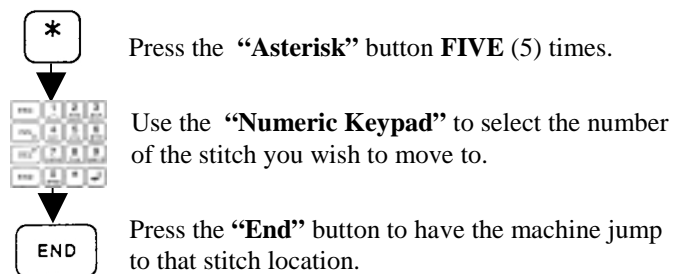

MOVING THE NEEDLE CASE

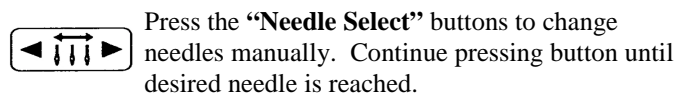 

MANUALLY TRIMMING THE THREAD



CANCELLING SEWING



From the **“Stand-By Screen”** (Above) and the machine stopped.

