

Brother MFC 4300 StartCard

If you cannot solve a problem:

Refer to **Frequently Asked Questions (FAQs)** on Brother World Wide Web;

URL: <http://www.brother.com>

Call Brother Customer Service at:

In USA: 1-800-284-4329

1-800-284-3238 (TTY service for the hearing-impaired)

In Canada: 1-800-853-6660

1-514-685-6464 (within Montreal)


THANK YOU!

CONGRATULATIONS ON PURCHASING THE ULTIMATE BROTHER MACHINE. WE ARE SURE YOU WILL BE THRILLED WITH THE CONVENIENT WAY YOUR NEW MACHINE PERFORMS SO MANY TASKS WITH DAZZLING RESULTS!

Follow these simple instructions in numerical order.

For more details, press **Help** or your machine or see your Operations Manual.


1 Packing List

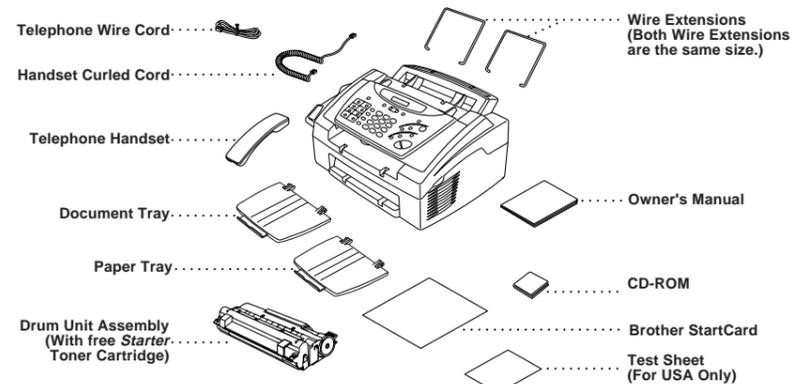

Keep the packing materials for possible future transport. If you do not pack the machine properly, it may void your warranty.


2 Install the Drum Unit

A. Unpack the drum unit assembly, and gently rock it from side to side five or six times to distribute the toner evenly.

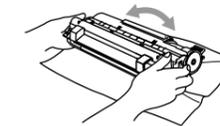


To prevent damage to the drum, do not expose it to light for longer than a few minutes.

 
Do NOT remove the starter sheet—this will be ejected while the MFC is warming up.



B. Open the top cover of the machine.

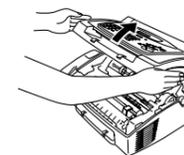


C. Holding the drum unit by its handles, insert it into the MFC.

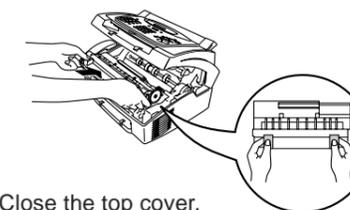


D. Close the top cover.

3 Install Handset, Power Cord and Phone Line

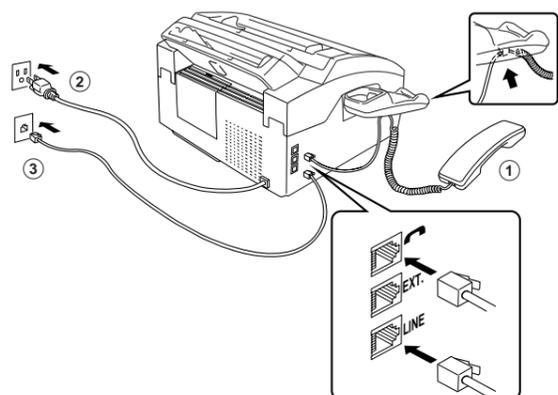

4 Attach Wire Extensions and Document/Paper Trays

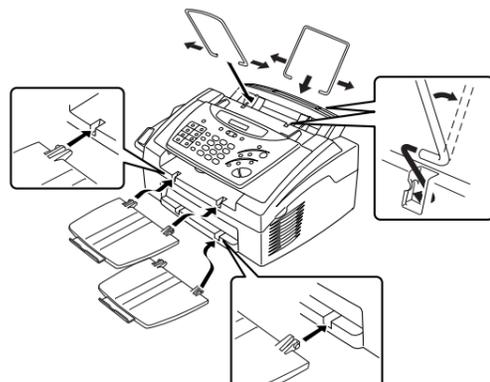


5 Load Paper

A. Open the multi-purpose sheet feeder cover.

B. Fan the paper well.


C. Adjust the guides to fit the paper, to help prevent paper jams.

Load the paper, making sure that the print side is toward the fax machine and the paper level is stacked below the paper mark.

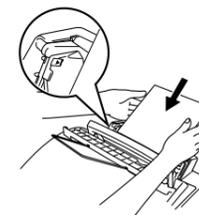

Press and Slide.

6 If you are sharing one phone line with an external telephone answering device, connect it now to the external jack.

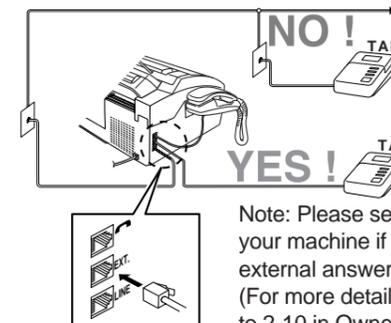

Note: Please select "TAD" on your machine if you have an external answering machine. (For more details, see pages 2-9 to 2-10 in Owner's Manual.)

7 Select an Answer Mode

Choose the mode that best suits your needs by pressing **Receive Mode** repeatedly until the screen displays the setting you want to use.

MANUAL

You must answer every call yourself.

The Brother machine must be started manually to receive.

FAX ONLY

For use with a dedicated fax line.

Every call is answered as a fax.

FAX/TEL

For receiving fax and voice calls on one line.

The MFC answers every call and receives a fax or double rings for you to pick up a voice call.

TAD: ANSWER MACH.

For use with an answering device.

The TAD answers every call and stores voice messages.

Fax messages are printed.

Make sure that TAD is connected to external jack.

8 Set Date and Time

A. Press **Function, 1, 1, 1**.

ENTER YEAR:XX

B. Enter the last two digits of the year and press **Set**.

ENTER MONTH:XX

C. Enter two digits for the month and press **Set**.

ENTER DAY:XX

D. Enter two digits for the day and press **Set**.

ENTER TIME:XX:XX

E. Enter the time in 24-hour format and press **Set**.

F. Press **Stop** to exit.

9 Set Station ID

A. Press **Function, 1, 1, 2**.

FAX:

B. Enter your fax number, then press **Set**.

TEL:

C. Enter your telephone number, then press **Set**.

NAME:

D. Enter your name using the dial pad and the chart below, then press **Set**. Use the right arrow to create spaces.

E. Press **Stop** to exit.

For more details, see pages 4-2 to 4-3 in Owner's Manual.

Key	once	twice	three times	four times	five times
2	A	B	C	2	A
3	D	E	F	3	D
4	G	H	I	4	G
5	J	K	L	5	J
6	M	N	O	6	M
7	P	Q	R	7	P
8	T	U	V	8	T
9	W	X	Y	9	W

10 For the USA, complete the Warranty Registration and Test Sheet...



...and fax it to Brother at: 1-877-268-9575

That's all you need to start using your Brother machine.

Brother MFC 4300 MFL StartCard

For Windows Users Only

1 Check your Computer

The following are the minimum Computer requirements you need to set up and operate the MFC.

Note If you are using Windows® 3.1x, Windows NT® Workstation Version 4.0 and Windows® 2000 Professional, see Owner's Manual Chapter 11.

Windows® Operating System

3.1, 3.11, 95, 98, 98SE, Me, NT® Workstation Version 4.0 or 2000 Professional

CPU

486/66MHz or higher for Windows® 3.1, 3.11, 95, 98, 98SE

Pentium 75MHz or higher for Windows NT® Workstation Version 4.0

Pentium 133MHz or higher for Windows® 2000 Professional

Pentium 150MHz or higher for Windows® Me

RAM

8MB or higher for Windows® 3.1, 3.11

(16MB recommended)

24MB or higher for Windows® 95, 98, 98SE

(32MB recommended)

32MB or higher for Windows NT® Workstation Version 4.0 or Windows® Me

(64MB recommended)

64MB or higher for Windows® 2000 Professional

(128MB recommended)

Hard Disk Space for MFC drivers

40MB for Windows® 3.1, 3.11

50MB for Windows® 95, 98, 98SE, Me, 2000 Professional and Windows NT® Workstation Version 4.0

Please see Owner's Manual for more information.

2 Connect the MFC to the PC

Before you can connect the MFC to your computer, you must purchase a bi-directional IEEE 1284-compliant parallel cable that is no longer than 6 feet.

A. Unplug the MFC.



B. Turn off the PC.




C. Connect one end of the parallel cable to the parallel port of the MFC, and then the other end to the parallel port of the PC.

D. Plug in the MFC.



E. Turn on the PC.

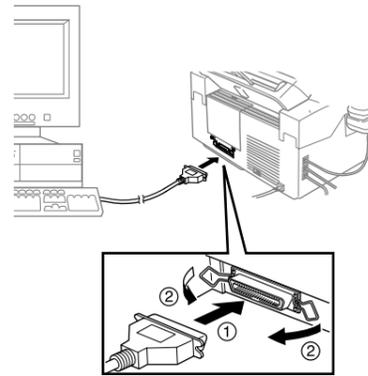

3a Install the Scanner and Printer drivers

Note Each operating system has a different dialog box. Some text may be different depending on which operating system you are using. The instructions in steps 3b to 3i are for Windows® 98SE.

For Windows® 95 user:

Select "Driver from disk provided by hardware manufacturer," and then click **OK**.



For Windows® 95OSR2, 98, 98SE user:

When the Add New Hardware Wizard screen appears, click **Next**.



For Windows® Me user:

Select "Specify the location of the driver (Advanced)," and then click **Next**.



3b

Select **(Recommended)** and click **Next**.



3c

- Insert the **MFL Pro CD-ROM** into your CD-ROM drive.
- Select **Specify a location** and remove the other check marks, and then click **Browse** to locate the file.
- Double-click on the CD icon and click on the "X:\w9x\para" folder. (X: is the drive letter for your CD-ROM drive), and then click **OK**.

3d

Make sure **Specify a location** is selected, and then click **Next**.




3e

Make sure your printer driver name is displayed, and click **Next**.



3f

You can type a name for this printer, or you can use the name supplied on the screen. When you have finished, click **Finish**.

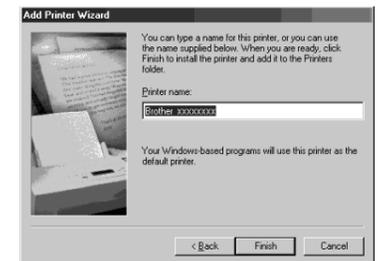

3g

When the Add New Hardware Wizard appears, click **Finish**.



3h

- After the Setup window appears and the status bar reaches 100%, the remaining drivers will be copied.
- Click **OK**.



3i

All the drivers are now installed. Now you can print and scan. If you want to install PaperPort® or MFL Pro, go to Step 4.

4 Install the Remote Setup and True Type Fonts

A. Insert the Brother CD-ROM into your CD-ROM drive.

A window appears listing the following options: (If this window does not appear, please use Windows Explorer to run the setup.exe program from the root directory of the Brother CD.)

Note Please note that the software will automatically detect the operating system you are using and it will be displayed at the bottom of the screen.

Note If you are using Windows® 2000 Professional or Windows NT® 4.0, you must be logged on as the Administrator, before you can install the software.

B. Click on the first button "Install MFL-Pro", and follow instructions.

