

Mobile Print/Scan Guide for Brother iPrint&Scan



Definitions of notes

We use the following note style throughout this user's guide:

NOTE	Notes tell you how you should respond to a situation that may arise, or give tips about how the operation works with other features.
-------------	--

Trademarks

The Brother logo is a registered trademark of Brother Industries, Ltd.

Brother is a trademark of Brother Industries, Ltd.

Google, Android, Android Market, Gmail and Google Play are trademarks of Google Inc. Use of these trademarks is subject to Google Permissions.

Apple, OS X, iCloud, iPhone, iPod touch, iPad, iTunes and Safari are trademarks of Apple Inc., registered in the U.S. and other countries.

Microsoft, Windows, SkyDrive, Excel and PowerPoint are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Wi-Fi is a registered trademark of the Wi-Fi Alliance.

Wi-Fi Direct is a trademark of the Wi-Fi Alliance.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Brother Industries, Ltd. is under license.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

©2011-2013 Brother Industries, Ltd. All rights reserved.

Table of Contents

Section I For Android™ Devices

1	Introduction	2
	Overview	2
	Hardware requirement	3
	Supported operating systems	3
	Device connections	3
	Downloading Brother iPrint&Scan from the Google Play™ (Android Market™)	6
2	Printing	7
	Printing from the mobile device's memory card	7
	Printing photos	7
	Printing documents	10
	Printing from a web browser	14
	Printing web pages	14
	Printing email messages	19
	Printing from other applications	23
	Printing photos or documents	23
	Printing web pages	27
	Print Settings	30
3	Scanning	31
	Scanning documents	31
	Scanning directly to your mobile device's memory card	31
	Opening scanned images in other applications	35
	Scan Settings	40

Section II For iOS Devices

4	Introduction	42
	Overview	42
	Hardware requirement	43
	Supported devices and operating systems	43
	Device connections	43
	Downloading Brother iPrint&Scan from the App Store	46

5 Printing 47

Printing photos from your mobile device's photo album	47
For iPhone and iPod touch	47
For iPad and iPad mini	48
Printing from the document file list.....	51
For iPhone and iPod touch	51
For iPad and iPad mini	51
Printing from a web browser	52
For iPhone and iPod touch	52
For iPad and iPad mini	57
Printing data from the Clipboard.....	62
For iPhone and iPod touch	62
For iPad and iPad mini	64
Printing photos taken with Brother iPrint&Scan	66
Printing photos or documents from other applications.....	68
For iPhone and iPod touch	68
For iPad and iPad mini	70
Print Settings	72

6 Scanning 73

Scanning documents	73
Scanning documents and saving them in your mobile device's photo album	73
Sending by email	77
Scanning documents and saving them to iCloud	82
Opening scanned images in other applications or uploading to online services	86
Scan Settings	91

Section III For Windows® Phone Devices

7 Introduction 93

Overview	93
Hardware requirement.....	94
Supported operating systems	94
Device connections	94
Downloading Brother iPrint&Scan from the Windows® Phone Store (Windows® Phone Marketplace).....	96

8 Printing 97

Printing images stored in your mobile device	97
Printing photos taken with Brother iPrint&Scan	99
Printing photos or documents from Microsoft® SkyDrive®	101
Printing photos from other applications	103
Print Settings	105

9 Scanning 106

Scanning and saving documents to your mobile device or Microsoft® SkyDrive®	106
Scan Settings	108



For Android™ Devices

Introduction	2
Printing	7
Scanning	31

Overview

Brother iPrint&Scan allows you to use features of your Brother machine directly from your Android™ device, without using a computer.

Brother iPrint&Scan supports the following functions:

■ Printing

Even if your machine is not connected to your computer, you can print photos, documents, web pages and email messages directly from your mobile device (see *Printing* on page 7).

■ Scanning

Photos and documents scanned with your Brother machine can be saved directly to the memory card of your mobile device and opened with other applications. Additionally, if an email application that supports JPEG and PDF files is installed on your mobile device, scanned images can be attached to outgoing email messages and sent using your mobile device (see *Scanning* on page 31).

NOTE

- For a list of models supported by Brother iPrint&Scan, please visit the Brother website at <http://www.brother.com/apps/android/>.
- If your machine does not have a printer or scanner, you cannot use the related print functions or scan functions of Brother iPrint&Scan.

Hardware requirement

Supported operating systems

For information about the supported operating systems, please refer to the Brother iPrint&Scan web page on Google Play™ (Android Market™).

Device connections

To use Brother iPrint&Scan, connect your mobile device to your Brother machine using one of the following connection methods:

- Wi-Fi®
- Wi-Fi Direct™
- Bluetooth
- NFC (Near Field Communication)

To configure your mobile device for each connection method, please refer to your mobile device's user's guide.

NOTE


Depending on your Brother machine and mobile device, the supported connection methods may vary.

Wi-Fi connection

Brother iPrint&Scan supports wireless connections that use infrastructure mode; ad-hoc mode is not supported.


To configure your Brother machine for a Wi-Fi connection, please refer to your machine's Quick Setup Guide.

- When the Brother machine is connected to the wireless access point/router using Wi-Fi:

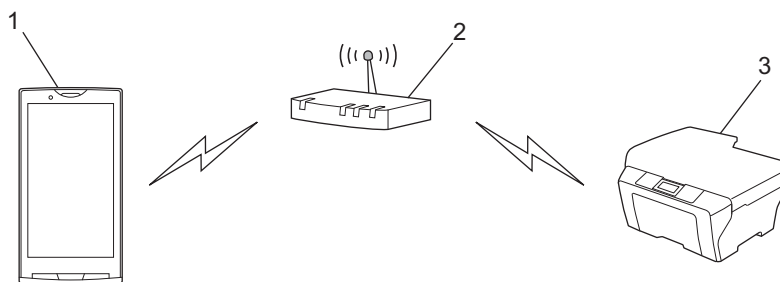

- 1 Mobile device**
- 2 Wireless access point/router**
- 3 Wireless network machine (your machine)**

- When the Brother machine is connected to the wireless access point/router using a network cable:

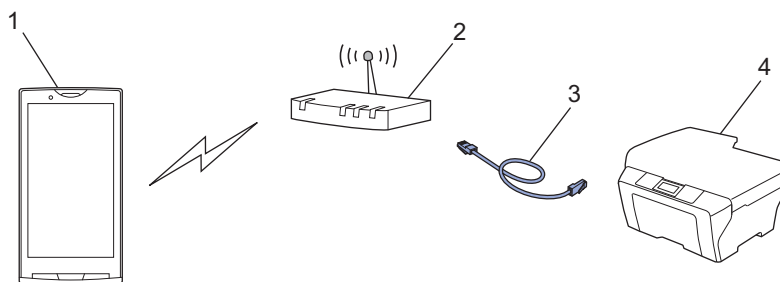


- 1 Mobile device
- 2 Wireless access point/router
- 3 Network cable
- 4 Network machine (your machine)

Wi-Fi Direct™ connection

Connect your mobile device to your Brother machine using Wi-Fi Direct™. Wi-Fi Direct™ allows you to configure a secured wireless network between your Brother machine and a mobile device without using an access point.

If your Brother machine supports Wi-Fi Direct™ and you want to configure your Brother machine for a Wi-Fi Direct™ network, please download the Wi-Fi Direct™ Guide from the Brother Solutions Center at <http://solutions.brother.com/>.

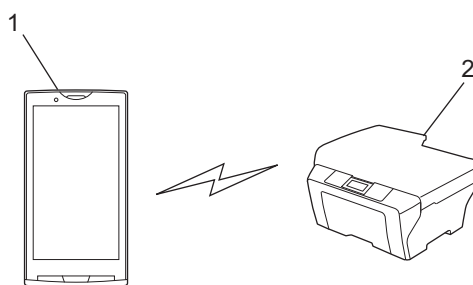


- 1 Mobile device
- 2 Your Brother machine

Bluetooth connection

Connect your mobile device to your Brother machine using Bluetooth.

To configure your Brother machine for a Bluetooth connection, please refer to your Brother machine's User's Guide.

1

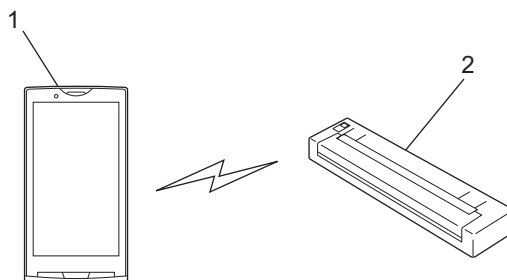

1 Mobile device


2 Your Brother machine

NFC (Near Field Communication)

If you use NFC, you can print and scan by holding your mobile device against the NFC logo on your Brother machine. A network connection is not necessary.

Make sure your Brother machine's NFC function is turned on. You can confirm your machine's NFC setting in the Network menu on the control panel of your machine.

Your mobile device must also support NFC.

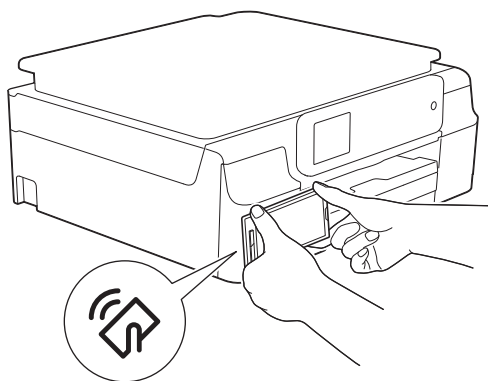

Downloading Brother iPrint&Scan from the Google Play™ (Android Market™)

1

You can download and install Brother iPrint&Scan from the Google Play™ (Android Market™). To take advantage of all the features supported by Brother iPrint&Scan, make sure you are using the latest version. To download and install or uninstall Brother iPrint&Scan, please refer to the user's guide for your mobile device.

Printing from the mobile device's memory card

Printing photos


You can print JPEG images that are saved on your mobile device's memory card.

- 1 Make sure the memory card has been inserted into the mobile device.
- 2 Open the Launcher on the mobile device.
- 3 Tap the Brother iPrint&Scan icon.

NOTE

When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 4 Tap **Photo Print**.
- 5 Thumbnail photos are displayed. Tap the desired photo.
- 6 Confirm the image on the Print Preview screen.

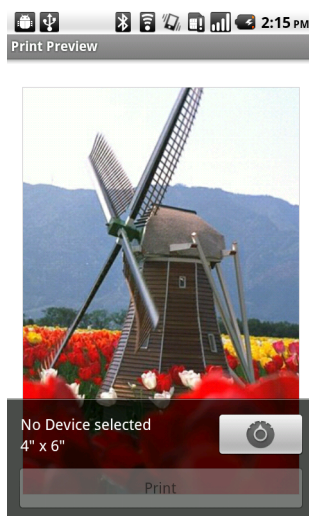

NOTE

Tap the screen to hide or show the operation buttons.


- 7 Tap .

- 8 To print using the NFC function, follow these steps:

NOTE

To change the print options, see *Print Settings* on page 30. After changing the print options, press the Back button to exit the Print Settings screen.

- 1 When the Print Preview screen is displayed, hold your mobile device against the NFC logo on your Brother machine.
When the mobile device is connected to the Brother machine, you will hear a sound and **Touch to beam** will be displayed on the mobile device's screen.

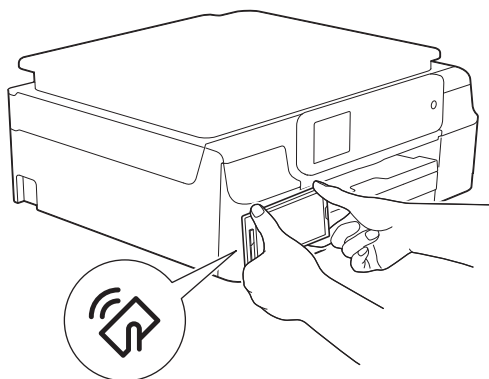


- 2 Hold your mobile device against the NFC logo, and tap the center of the screen on your mobile device.
The machine will start printing.

NOTE

If your mobile device is not recognized, reposition your mobile device over the NFC logo and try again.

- 9 To print using the Wi-Fi connection or Bluetooth connection, follow these steps:
 - 1 Make sure your machine is selected. The machine that is selected for the Wi-Fi connection is displayed under **Printer**. The machine that is selected for the Bluetooth connection is displayed under **Bluetooth Printer**.
If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on, and then tap **Printer** or **Bluetooth Printer**. Select your machine from the available machine list.

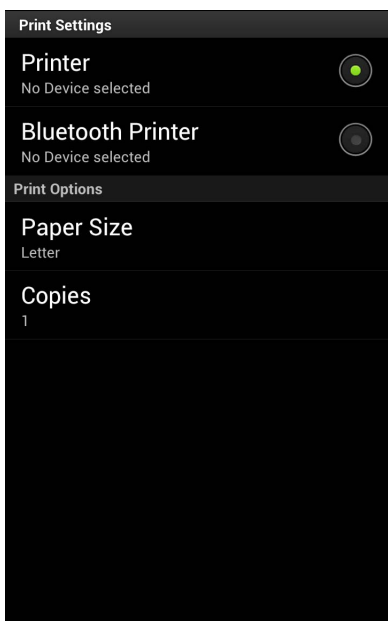

- 2 To change print options, see *Print Settings* on page 30. After changing the print options, press the Back button to exit the Print Settings screen.
- 3 Tap **Print**.
The machine will start printing.

Printing documents

You can print documents saved on your mobile device's memory card.

The following file formats are supported:

- PDF
- Microsoft® Word (DOC/DOCX)
- Microsoft® Excel® (XLS/XLSX)
- Microsoft® PowerPoint® (PPT/PPTX)
- Text

NOTE


- Password-protected documents cannot be printed.
- Some encrypted PDF files cannot be printed.
- When printing a PDF file that uses fonts that are not embedded in the file, characters may be replaced with characters of a different font or may be garbled.
- When printing a PDF that includes transparent objects, the transparency setting will be ignored and the file will be printed with that setting off.

- 1 Make sure the memory card has been inserted into the mobile device.
- 2 Open the Launcher on the mobile device.
- 3 Tap the Brother iPrint&Scan icon.

NOTE


When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 4 Tap **Document Print**.
- 5 The document list is displayed. Tap the name of the document that you want to print.

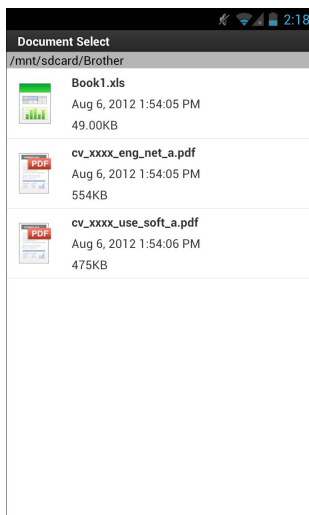

- 6 When printing a Microsoft® Excel® file, a list of the worksheets appears. Select the worksheet that you want to print.
- 7 Confirm the image on the thumbnail Print Preview screen.
Pages marked with a check mark will be printed. Tap a page and remove the check mark if you do not want to print that page.

 2

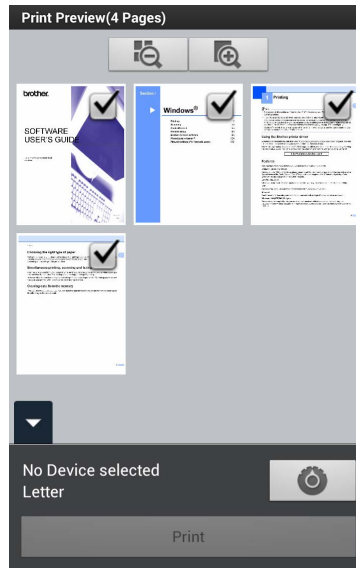

NOTE

To select or deselect all pages, press the Menu button, and then tap  to select or  to deselect.


- 8 Tap .

- 9 To print using the NFC function, follow these steps:

NOTE

To change the print options, see *Print Settings* on page 30. After changing the print options, press the Back button to exit the Print Settings screen.

- 1 When the Print Preview screen is displayed, hold your mobile device against the NFC logo on your Brother machine.
When the mobile device is connected to the Brother machine, you will hear a sound and **Touch to beam** will be displayed on the mobile device's screen.

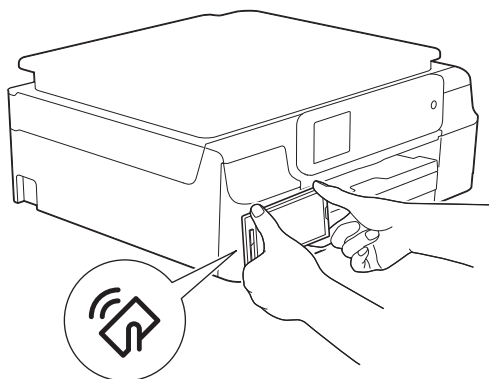


- 2 Hold your mobile device against the NFC logo, and tap the center of the screen on your mobile device.
The machine will start printing.

NOTE

If your mobile device is not recognized, reposition your mobile device over the NFC logo and try again.

- 10 To print using the Wi-Fi connection or Bluetooth connection, follow these steps:
- 1 Make sure your machine is selected. The machine that is selected for the Wi-Fi connection is displayed under **Printer**. The machine that is selected for the Bluetooth connection is displayed under **Bluetooth Printer**.
If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on, and then tap **Printer** or **Bluetooth Printer**. Select your machine from the available machine list.

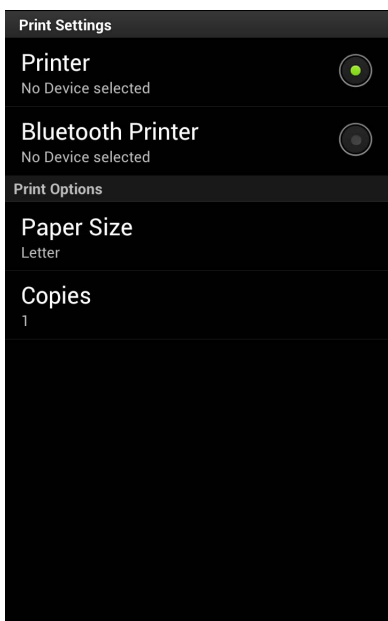

- 2 To change print options, see *Print Settings* on page 30. After changing the print options, press the Back button to exit the Print Settings screen.
- 3 Tap **Print**.
The machine will start printing.

Printing from a web browser

Printing web pages

2


You can print web pages using the web browser that is installed in Brother iPrint&Scan.

- 1 Open the Launcher on the mobile device.
- 2 Tap the Brother iPrint&Scan icon.

NOTE

When the license agreement screen appears, carefully read and accept the terms of the agreement.


- 3 Tap **Web Page Print**.
- 4 The web browser is displayed.

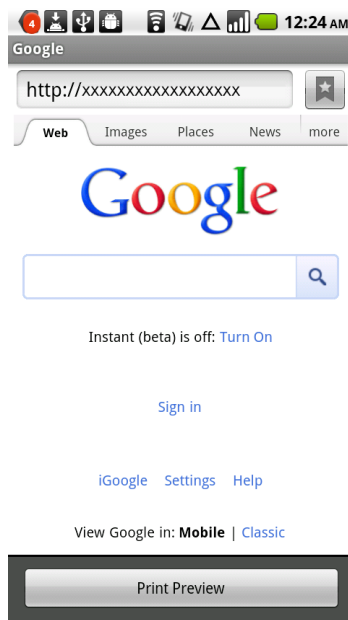

You can view a web page using one of the following methods:


- Enter the URL directly

Tap the address field, and then enter the URL of the web page that you want to view.

Tap  next to the address field, and then go to step 5.

- Search for keywords

Tap the address field, and then enter the keywords that you want to search for.

Tap  next to the address field.

The search results are displayed in the web browser.


Tap the web page that you want to view, and then go to step 5.

- Tap a bookmark

Tap .

Tap the bookmark of the web page that you want to view, and then go to step 5.

- Tap the history

If you have viewed a web page previously, tap .

Tap **History**, and then tap the web page that you want to view.

Go to step 5.

- 5 The web page is displayed.

Tap **Print Preview**.

- 6 Confirm the image on the thumbnail Print Preview screen.

Pages marked with a check mark will be printed. Tap a page and remove the check mark if you do not want to print that page.



NOTE

To select or deselect all pages, press the Menu button, and then tap  to select or  to deselect.


- 7 Tap .

- 8 To print using the NFC function, follow these steps:

NOTE

To change the print options, see *Print Settings* on page 30. After changing the print options, press the Back button to exit the Print Settings screen.

- 1 When the Print Preview screen is displayed, hold your mobile device against the NFC logo on your Brother machine.
When the mobile device is connected to the Brother machine, you will hear a sound and **Touch to beam** will be displayed on the mobile device's screen.

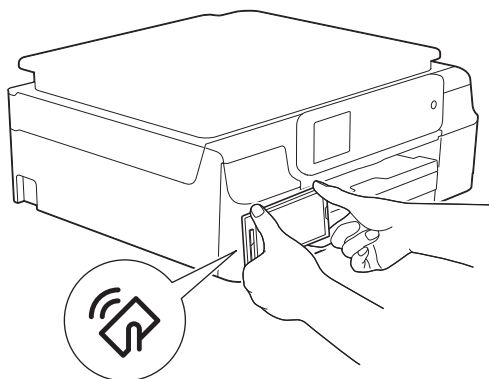


- 2 Hold your mobile device against the NFC logo, and tap the center of the screen on your mobile device.
The machine will start printing.

NOTE

If your mobile device is not recognized, reposition your mobile device over the NFC logo and try again.


- 9 To print using the Wi-Fi connection or Bluetooth connection, follow these steps:
 - 1 Make sure your machine is selected. The machine that is selected for the Wi-Fi connection is displayed under **Printer**. The machine that is selected for the Bluetooth connection is displayed under **Bluetooth Printer**.
If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on, and then tap **Printer** or **Bluetooth Printer**. Select your machine from the available machine list.

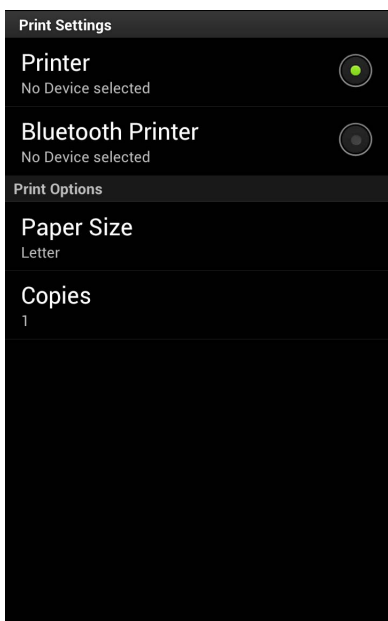

- 2 To change print options, see *Print Settings* on page 30. After changing the print options, press the Back button to exit the Print Settings screen.
- 3 Tap **Print**.
The machine will start printing.

Deleting the browsing history

You can delete the browsing history.

- 1 Tap .
- 2 Tap **History**.
- 3 Do one of the following:
 - To delete a browsing history, touch the record and hold it until the pop-up screen appears.
A message will appear to confirm if you want to delete the browsing history.
Tap **OK**.
The browsing history will be cleared.
 - To delete all of the browsing history, press the Menu button, and then tap **Clear history**.
A message will appear to confirm if you want to delete the browsing history.
Tap **OK**.
All of the browsing history will be cleared.

NOTE

If you delete the browsing history, it is not available when using other web browsers.

Printing email messages

You can use Brother iPrint&Scan to view and print email messages from your Gmail™ account (Google account). To print the email messages, your mobile device must be configured to access the Gmail™ account (Google account).

 
2

- 1 Open the Launcher on the mobile device.
- 2 Tap the Brother iPrint&Scan icon.

NOTE

When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 3 Tap **Email Print**.
If your mobile device has been configured for multiple Gmail™ accounts (Google accounts), choose the account that you want to access.
- 4 The email list is displayed. Choose the email message that you want to print.

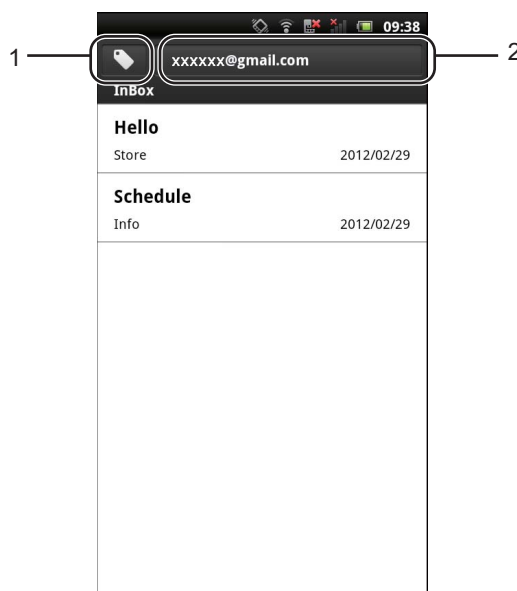

- 1 **Label button**
Tap this button to display other label messages.

- 2 **Account button**
Tap this button to change the account.

- 5 The email message is displayed. Tap **Print Preview**.

- 6 Confirm the image on the thumbnail Print Preview screen.
Pages marked with a check mark will be printed. Tap a page and remove the check mark if you do not want to print that page.



NOTE

To select or deselect all pages, press the Menu button, and then tap  to select or  to deselect.


- 7 Tap .

- 8 To print using the NFC function, follow these steps:

NOTE

To change the print options, see *Print Settings* on page 30. After changing the print options, press the Back button to exit the Print Settings screen.

- 1 When the Print Preview screen is displayed, hold your mobile device against the NFC logo on your Brother machine.
When the mobile device is connected to the Brother machine, you will hear a sound and **Touch to beam** will be displayed on the mobile device's screen.

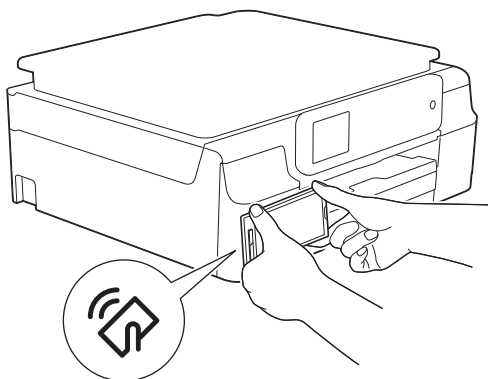


- 2 Hold your mobile device against the NFC logo, and tap the center of the screen on your mobile device.
The machine will start printing.

NOTE

If your mobile device is not recognized, reposition your mobile device over the NFC logo and try again.

- 9 To print using the Wi-Fi connection or Bluetooth connection, follow these steps:
 - 1 Make sure your machine is selected. The machine that is selected for the Wi-Fi connection is displayed under **Printer**. The machine that is selected for the Bluetooth connection is displayed under **Bluetooth Printer**.
If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on, and then tap **Printer** or **Bluetooth Printer**. Select your machine from the available machine list.

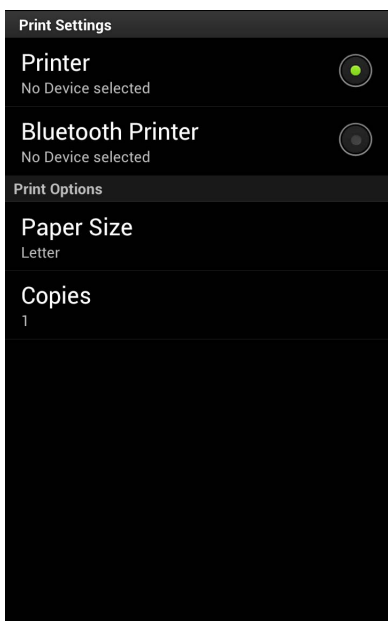

- 2 To change print options, see *Print Settings* on page 30. After changing the print options, press the Back button to exit the Print Settings screen.
- 3 Tap **Print**.
The machine will start printing.

Printing from other applications

Documents can also be printed directly from other applications installed on your mobile device using Brother iPrint&Scan. For example, you can print photos that are attached to email messages from your mobile device.

Printing photos or documents

The following file formats are supported:

- PDF
- Microsoft® Word (DOC/DOCX)
- Microsoft® Excel® (XLS/XLSX)
- Microsoft® PowerPoint® (PPT/PPTX)
- Text
- Images (JPEG/PNG/GIF/BMP)

NOTE

- Password-protected documents cannot be printed.
- Some encrypted PDF files cannot be printed.
- When printing a PDF file that uses fonts that are not embedded in the file, characters may be replaced with characters of a different font or may be garbled.
- When printing a PDF that includes transparent objects, the transparency setting will be ignored and the file will be printed with that setting off.

- 1 Use the desired application to select the file that you want to print, and share the file with Brother iPrint&Scan. For example, in some applications you can share the file by tapping the share icon (🔗). If the list of applications appears, select Brother iPrint&Scan.


NOTE

- When the license agreement screen appears, carefully read and accept the terms of the agreement.
- If the text contains URLs, a web page for the URL or the text preview screen will appear. Tap **Print Preview** and go to step ③.

- 2 When printing a Microsoft® Excel® file, a list of the worksheets appears. Select the worksheet that you want to print.

- 3 Depending on the data, a Print Preview screen (A) or thumbnail Print Preview screen (B) appears. Confirm the image.
If screen (B) is displayed, make sure the pages that you want to print are marked with a check mark. Tap a page and remove the check mark if you do not want to print that page.

(A)

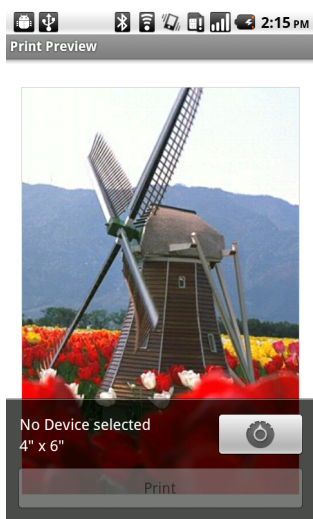

(B)



NOTE

(For thumbnail Print Preview screen)

To select or deselect all pages, press the Menu button, and then tap  to select or  to deselect.


- 4 Tap .

- 5 To print using the NFC function, follow these steps:

NOTE

To change the print options, see *Print Settings* on page 30. After changing the print options, press the Back button to exit the Print Settings screen.

- 1 When the Print Preview screen is displayed, hold your mobile device against the NFC logo on your Brother machine.
When the mobile device is connected to the Brother machine, you will hear a sound and **Touch to beam** will be displayed on the mobile device's screen.

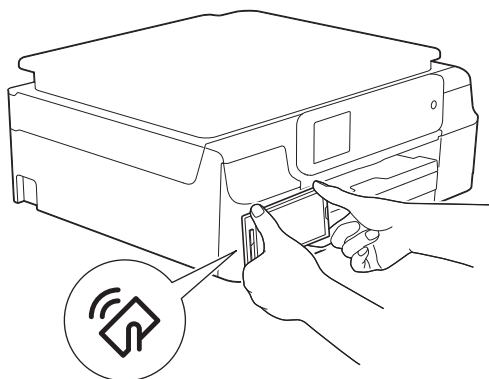


- 2 Hold your mobile device against the NFC logo, and tap the center of the screen on your mobile device.
The machine will start printing.

NOTE

If your mobile device is not recognized, reposition your mobile device over the NFC logo and try again.

- 6 To print using the Wi-Fi connection or Bluetooth connection, follow these steps:
 - 1 Make sure your machine is selected. The machine that is selected for the Wi-Fi connection is displayed under **Printer**. The machine that is selected for the Bluetooth connection is displayed under **Bluetooth Printer**.
If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on, and then tap **Printer** or **Bluetooth Printer**. Select your machine from the available machine list.

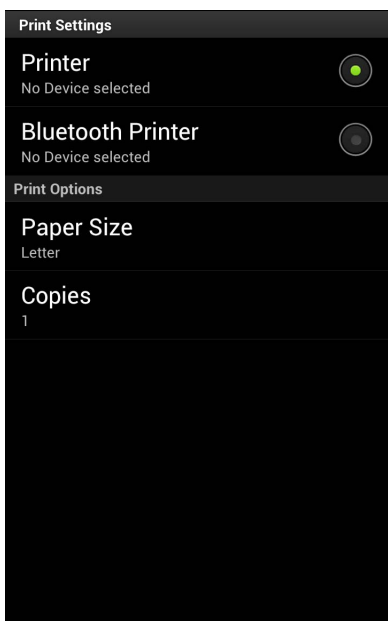

- 2 To change print options, see *Print Settings* on page 30. After changing the print options, press the Back button to exit the Print Settings screen.
- 3 Tap **Print**.
The machine will start printing.

Printing web pages

You can print web pages from other web browsers.

- 1 Use the desired web browser to select the web page that you want to print, and share the page with Brother iPrint&Scan. For example, in some applications you can share the page by pressing the Menu button, and then tap **More**, **Share page**. If the list of applications appears, select Brother iPrint&Scan.

NOTE

When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 2 The web page is displayed. Tap **Print Preview**.
- 3 Confirm the image on the thumbnail Print Preview screen. Pages marked with a check mark will be printed. Tap a page and remove the check mark if you do not want to print that page.



NOTE

To select or deselect all pages, press the Menu button, and then tap  to select or  to deselect.


- 4 Tap .

- 5 To print using the NFC function, follow these steps:

NOTE

To change the print options, see *Print Settings* on page 30. After changing the print options, press the Back button to exit the Print Settings screen.

- 1 When the Print Preview screen is displayed, hold your mobile device against the NFC logo on your Brother machine.
When the mobile device is connected to the Brother machine, you will hear a sound and **Touch to beam** will be displayed on the mobile device's screen.

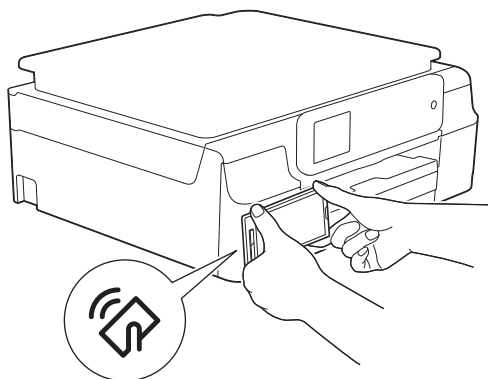


- 2 Hold your mobile device against the NFC logo, and tap the center of the screen on your mobile device.
The machine will start printing.

NOTE

If your mobile device is not recognized, reposition your mobile device over the NFC logo and try again.

- 6 To print using the Wi-Fi connection or Bluetooth connection, follow these steps:
 - 1 Make sure your machine is selected. The machine that is selected for the Wi-Fi connection is displayed under **Printer**. The machine that is selected for the Bluetooth connection is displayed under **Bluetooth Printer**.
If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on, and then tap **Printer** or **Bluetooth Printer**. Select your machine from the available machine list.

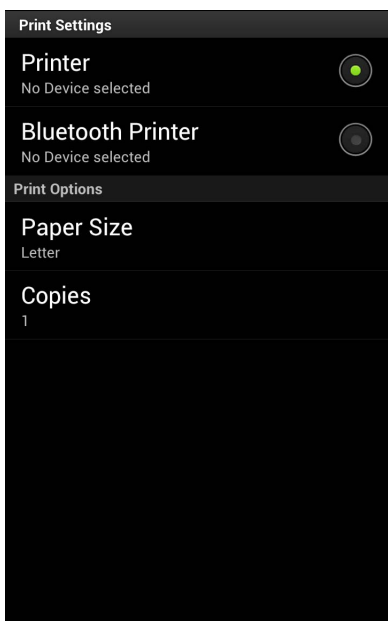

- 2 To change print options, see *Print Settings* on page 30. After changing the print options, press the Back button to exit the Print Settings screen.
- 3 Tap **Print**.
The machine will start printing.

Print Settings

You can change the following print settings when you print from a mobile device.

Print Options

- Paper Size
- Media Type
- Borderless
- Copies
- Layout
- Color/Mono
- 2-sided
- Density
- Feed Mode

Document Options (For Microsoft® Excel® files only)

- Scale
- Orientation

NOTE

Only settings that can be changed are displayed.

- 1 On the Print Settings screen, tap the print option that you want to change.
- 2 Choose an option.
Repeat steps 1 and 2 if you want to change other options.

Scanning documents

Scanning directly to your mobile device's memory card


3

Make sure there is enough available space on your mobile device's memory card.

- 1 Make sure the memory card has been inserted into the mobile device.
- 2 Load your document on to your machine.
- 3 Open the Launcher on the mobile device.
- 4 Tap the Brother iPrint&Scan icon.

NOTE

When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 5 Tap **Scan**.
- 6 Tap .


- 7 To scan using the NFC function, follow these steps:

NOTE

To change the scan options, see *Scan Settings* on page 40. After changing the scan options, press the Back button to exit the Scan Settings screen.

- 1 When the main scan screen is displayed, hold your mobile device against the NFC logo on your Brother machine.

When the mobile device is connected to the Brother machine, you will hear a sound and **Touch to beam** will be displayed on the mobile device's screen.

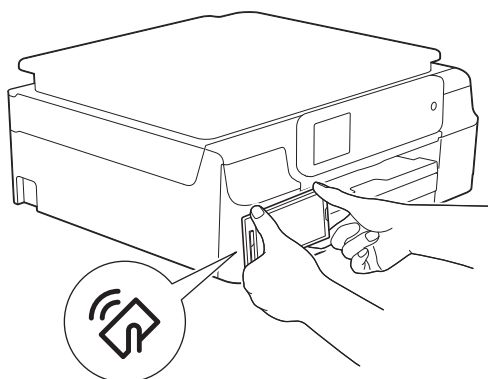

- 2 Hold your mobile device against the NFC logo, and tap the center of the screen on your mobile device. The machine will start to scan the document.


NOTE

If your mobile device is not recognized, reposition your mobile device over the NFC logo and try again.

8 To scan using the Wi-Fi connection, follow these steps:

1 Make sure your machine is selected.

If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on, and then tap **Scanner**. Select your machine from the available machine list.

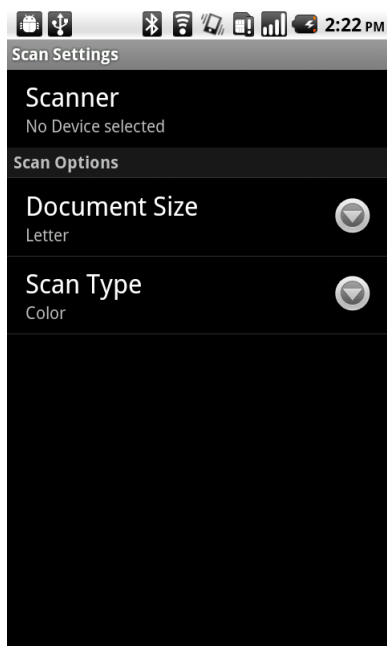

2 To change scan settings, see *Scan Settings* on page 40. After changing the settings, press the Back button to exit the Scan Settings screen.



3 Tap **Scan**.

The machine will start to scan the document.


- 9 The scanned image will be displayed on the screen. Confirm the scanned image.



NOTE

- Tap the screen to hide or show the operation buttons.
- Tap  or  to view the previous or next page.


- 10 Do one of the following:

- To crop the scanned image, tap  and then go to step 11.
- If you do not want to crop the scanned image, go to step 13.

- 11 The area inside the box will be cropped.

- To change the size of the box, drag the edge of the box.
- To move the position of the box, tap inside the box and drag the box.

When finished, tap **Done**.

- 12 Confirm the cropped image. To start over and select the size of the box again, tap  and then go back to step 11.

- 13 Tap **Save**.

- 14 Choose the file format (JPEG or PDF) used for the saved file.
The scanned image will be saved on the memory card in the specified file format.

NOTE

- If you chose “JPEG”, each page is saved as a separate file. If you chose “PDF”, all pages of the document are saved in one file.
- File names are automatically created based on the current date and time. For example, the first image scanned at 10:33 PM and 55 seconds on July 1, 2011 would be named Scan07012011223355_001.jpg. Note that the region setting also determines the date format of the file name. (A sequential number may not be included in the file name.)
- Scanned images are saved in the following folder on the memory card: /sdcard/Brother/scan.


Opening scanned images in other applications

Photos and documents scanned with your Brother machine can be opened with other applications. For example, if an email application that supports JPEG and PDF files is installed on your mobile device, scanned images can be attached to outgoing email messages and sent using your mobile device by selecting the email application.

- 1 Load your document on to your machine.
- 2 Open the Launcher on the mobile device.
- 3 Tap the Brother iPrint&Scan icon.

NOTE

When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 4 Tap **Scan**.
- 5 Tap .


- 6 To scan using the NFC function, follow these steps:

NOTE

To change the scan options, see *Scan Settings* on page 40. After changing the scan options, press the Back button to exit the Scan Settings screen.

- 1 When the main scan screen is displayed, hold your mobile device against the NFC logo on your Brother machine.

When the mobile device is connected to the Brother machine, you will hear a sound and **Touch to beam** will be displayed on the mobile device's screen.

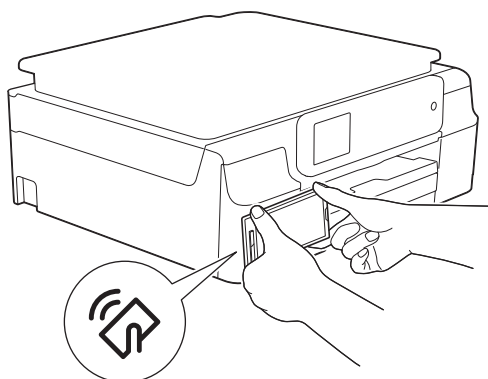

- 2 Hold your mobile device against the NFC logo, and tap the center of the screen on your mobile device. The machine will start to scan the document.


NOTE

If your mobile device is not recognized, reposition your mobile device over the NFC logo and try again.

7 To scan using the Wi-Fi connection, follow these steps:

1 Make sure your machine is selected.

If a different machine is selected or if **No Device selected** is displayed, make sure your machine is turned on, and then tap **Scanner**. Select your machine from the available machine list.

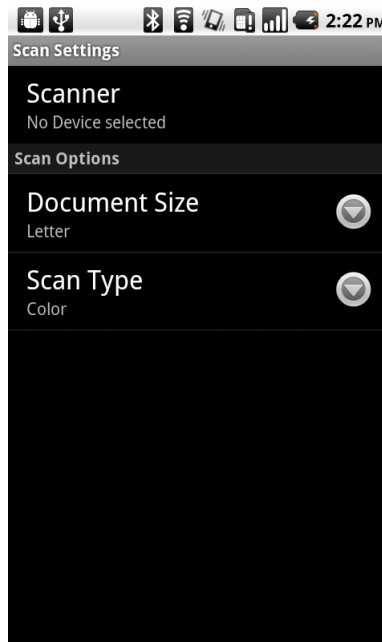

2 To change scan settings, see *Scan Settings* on page 40. After changing the settings, press the Back button to exit the Scan Settings screen.



3 Tap **Scan**.

The machine will start to scan the document.


- 8 The scanned image will be displayed on the screen. Confirm the scanned image.



NOTE

- Tap the screen to hide or show the operation buttons.
- Tap  or  to view the previous or next page.


- 9 Do one of the following:

- To crop the scanned image, tap  and then go to step 10.
- If you do not want to crop the scanned image, go to step 12.

- 10 The area inside the box will be cropped.

- To change the size of the box, drag the edge of the box.
- To move the position of the box, tap inside the box and drag the box.

When finished, tap **Done**.

- 11 Confirm the cropped image. To start over and select the size of the box again, tap  and then go back to step 10.

- 12 Tap .

- 13 Choose the file format (JPEG or PDF) of the file that you want to open.

- 14 A list of applications that can open the file is displayed. Tap the desired application.
For information about operating the application, refer to the application's user's guide.

NOTE

File names are automatically created based on the current date and time. For example, the first image scanned at 10:33 PM and 55 seconds on July 1, 2011 would be named Scan07012011223355_001.jpg. Note that the region setting also determines the date format of the file name. (A sequential number may not be included in the file name.)

Scan Settings

You can change the following scan settings when you use your mobile device to scan.

- Document Size
- Scan Type
- 2-sided ¹

¹ Displayed only when your machine supports 2-sided scan.

NOTE

Only settings that can be changed are displayed.

- 1 On the Scan Settings screen, tap the scan option that you want to change.
- 2 Choose an option.
Repeat steps 1 and 2 if you want to change other options.



For iOS Devices

Introduction	42
Printing	47
Scanning	73

Overview

Brother iPrint&Scan allows you to use features of your Brother machine directly from your iPhone, iPod touch, iPad, and iPad mini.

Brother iPrint&Scan supports the following functions:

■ Printing

Even if your machine is not connected to your computer, you can print photos, documents and web pages directly from your mobile device (see *Printing* on page 47).

■ Scanning

Photos and documents scanned with your Brother machine can be used as follows:

- Saved directly to the photo album.
- Attached to outgoing email messages.
- Saved directly to iCloud.
- Opened with other applications.
- Uploaded directly to online services (iOS 6.0 or later required).

For more information, see *Scanning* on page 73.

NOTE

- For a list of models supported by Brother iPrint&Scan, please visit the Brother website at <http://www.brother.com/apps/iphone/>.
- If your machine does not have a printer or scanner, you cannot use the related print functions or scan functions of Brother iPrint&Scan.

Hardware requirement

Supported devices and operating systems

For information about the supported devices and operating systems, please refer to the Brother iPrint&Scan web page in the App Store.

Device connections

To use Brother iPrint&Scan, connect your mobile device to your Brother machine using one of the following connection methods:

- Wi-Fi
- Wi-Fi Direct™ (supported Brother machines only)

To configure your mobile device for a Wi-Fi connection, please refer to your mobile device's user's guide. You can find a link to your mobile device's user's guide in Safari's Bookmarks folder.

NOTE

Depending on your Brother machine and mobile device, the supported connection methods may vary.


Wi-Fi connection

Brother iPrint&Scan supports wireless connections that use infrastructure mode or ad-hoc mode.

To configure your Brother machine for a Wi-Fi connection, please refer to your machine's Quick Setup and Network User's Guide (or Software and Network User's Guide, depending on your model).

■ Ad-hoc mode

Connect your mobile device to your machine without a wireless access point/router.

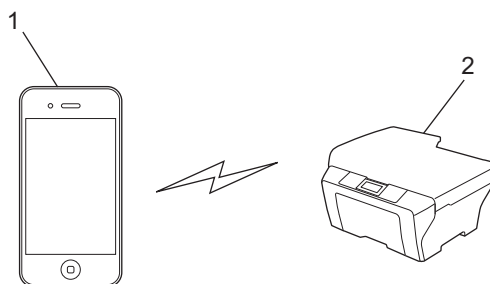


1 Mobile device

2 Wireless network machine (your machine)

■ Infrastructure mode

Connect your mobile device to your machine through a wireless access point/router.

- When the Brother machine is connected to the wireless access point/router using Wi-Fi:

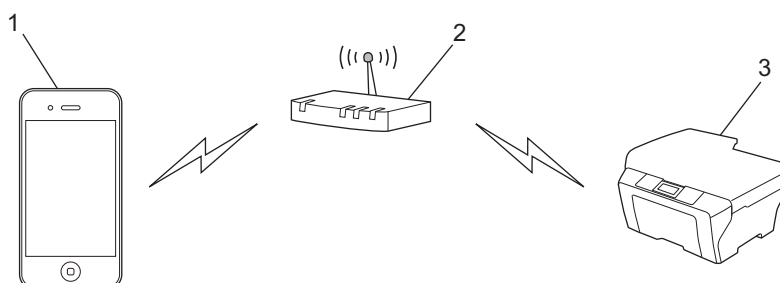


1 Mobile device

2 Wireless access point/router

3 Wireless network machine (your machine)

- When the Brother machine is connected to the wireless access point/router using a network cable:

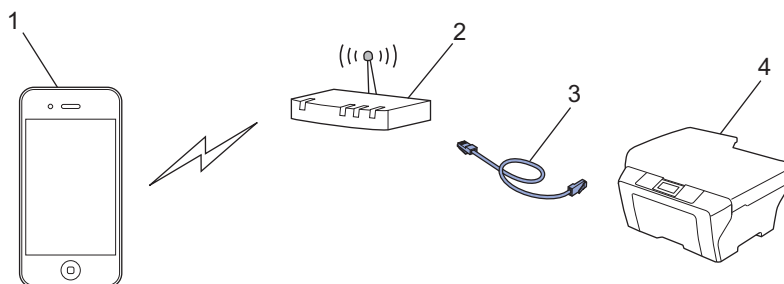


- 1 Mobile device**
- 2 Wireless access point/router**
- 3 Network cable**
- 4 Network machine (your machine)**

Wi-Fi Direct™ connection (supported Brother machines only)

Connect your mobile device to your Brother machine using Wi-Fi Direct™. Wi-Fi Direct™ allows you to configure a secured wireless network between your Brother machine and a mobile device without using an access point.

If your Brother machine supports Wi-Fi Direct™ and you want to configure your Brother machine for a Wi-Fi Direct™ network, please download the Wi-Fi Direct™ Guide from the Brother Solutions Center at <http://solutions.brother.com/>.

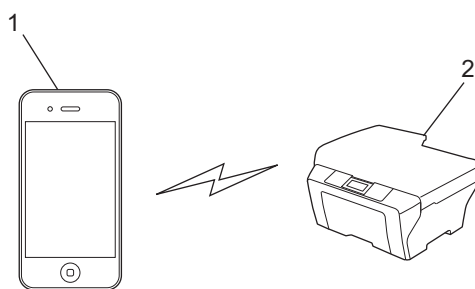

- 1 Mobile device**
- 2 Your Brother machine**

Downloading Brother iPrint&Scan from the App Store

You can download and install Brother iPrint&Scan from the App Store. To take advantage of all the features supported by Brother iPrint&Scan, make sure you are using the latest version.

To download and install or uninstall Brother iPrint&Scan, please refer to the user's guide for your mobile device. A link to your mobile device's user's guide, which can be viewed on the Apple website, can be found in the Bookmarks folder of Safari by default.

Printing photos from your mobile device's photo album

You can print photos that are stored in your mobile device's photo album.


For iPhone and iPod touch

- 1 Tap the Brother iPrint&Scan icon on the Home screen.
If the **Scan** screen is displayed, switch to the print function by tapping **Print**.
- 2 Tap **Photo Albums**.
- 3 Choose the photo album from the list.
- 4 Thumbnails of the photos in the selected album are displayed. Tap the desired photo.
- 5 Confirm the image on the Print Preview screen.



NOTE

Tap the screen to hide or show the operation buttons.

- 6 Tap .
The Print Settings screen appears.

- 7 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 9.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 8.



- 8 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Print Settings**.
- 9 Do one of the following:
 - To change other print settings, see *Print Settings* on page 72. After changing the settings, go to step 10.
 - If you do not want to change any other settings, tap **Done** and then go to step 10.
- 10 Tap **Print**.
The machine will start printing.

For iPad and iPad mini

- 1 Tap the Brother iPrint&Scan icon on the Home screen.
If the screen for another function is displayed, switch to the photo print function by tapping **Photo**.
- 2 Tap **Photo Albums**.
- 3 Choose a photo album from the list.
- 4 Thumbnails of the photos in the selected album are displayed. Tap the desired photo.

- 5 Confirm the image on the Print Preview screen.



- 6 Tap **Settings**.
The Print Settings screen appears.
- 7 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 9.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 8.



- 8 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Print Settings**.
- 9 Do one of the following:
 - To change other print settings, see *Print Settings* on page 72. After changing the settings, go to step 10.
 - If you do not want to change any other settings, tap outside of the Print Settings screen to close the screen, and then go to step 10.
- 10 Tap **Print**.
The machine will start printing.

Printing from the document file list

You can access the following files from the document file list:

- Files saved to iCloud using the scan functions of Brother iPrint&Scan
- Files saved to Brother iPrint&Scan using iTunes File Sharing
- Files from other applications that were opened using Brother iPrint&Scan (maximum of the latest 10 files)
(See *Printing photos or documents from other applications* on page 68)

Files in the following formats can be displayed in the document file list.

- PDF
- Microsoft® Word (DOC/DOCX)
- Microsoft® Excel® (XLS/XLSX)
- Microsoft® PowerPoint® (PPT/PPTX)
- Text
- Images (JPEG/PNG/TIFF)

For iPhone and iPod touch

- 1 Tap the Brother iPrint&Scan icon on the Home screen.
If the **Scan** screen is displayed, switch to the print function by tapping **Print**.
- 2 Tap **Documents**.
- 3 The document folders appear. Tap the folder that contains the file you want to print.
- 4 The document file list appears. Tap the file that you want to print.
- 5 For the remaining procedure, go to step 2 in *For iPhone and iPod touch* on page 68.

For iPad and iPad mini

- 1 Tap the Brother iPrint&Scan icon on the Home screen.
- 2 Tap **Documents**.
- 3 The document folders appear. Tap the folder that contains the file you want to print.
- 4 The document file list appears. Tap the file that you want to print.
- 5 For the remaining procedure, go to step 2 in *For iPad and iPad mini* on page 70.

Printing from a web browser

For iPhone and iPod touch

Printing web pages

You can directly print web pages using the web browser that is installed in Brother iPrint&Scan.

- 1 Tap the Brother iPrint&Scan icon on the Home screen.
If the **Scan** screen is displayed, switch to the print function by tapping **Print**.
- 2 Tap **Web Page**.
- 3 The web browser is displayed.



You can view a web page using one of the following methods:

- Enter the URL directly

Tap the address field, and then enter the URL of the web page that you want to view.

Tap **Go**, and then go to step 4.

- Search for a keyword

Tap .

The search screen will appear.

In the search field, enter the keywords that you want to search for.

Tap **Search**.

The search results are displayed in the web browser.


Tap the web page that you want to view, and then go to step 4.

■ Tap a bookmark

If you have already added a bookmark to the web page, tap .

Tap the bookmark of the web page that you want to view, and then go to step 4.

■ Tap the history

If you have viewed a web page previously, tap .

Tap **History**, and then tap the web page that you want to view.

Go to step 4.

NOTE


The bookmarks and browsing history of other web browsers on your mobile device are not available.

- 4 The web page is displayed.
Tap **Print Preview**.





NOTE

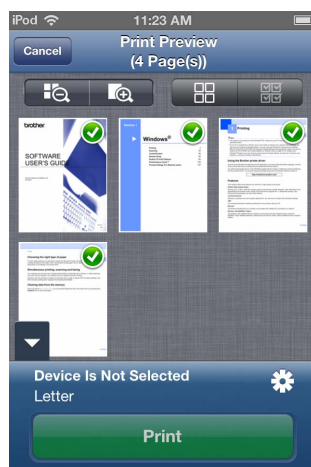To add a bookmark to the web page, see *Adding a bookmark to a web page* on page 54.

- 5 Confirm the image on the thumbnail Print Preview screen.
Pages marked with a check mark will be printed. Tap a page and remove the check mark if you do not want to print that page.



NOTE

- To select or deselect all pages, tap  to select or  to deselect.
- You can enlarge the thumbnails by tapping , and reduce them by tapping .

- 6 Tap .
- The Print Settings screen appears.


- 7 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 9.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 8.




- 8 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Print Settings**.
- 9 Do one of the following:
 - To change other print settings, see *Print Settings* on page 72. After changing the settings, go to step 10.
 - If you do not want to change any other settings, tap **Done** and then go to step 10.
- 10 Tap **Print**.
The machine will start printing.

Adding a bookmark to a web page

If you add a bookmark to your favorite web page, you can access the web page simply by tapping the bookmark.

- 1 When the web page that you want to add a bookmark to is displayed, tap .

- 2 Tap **Save**.

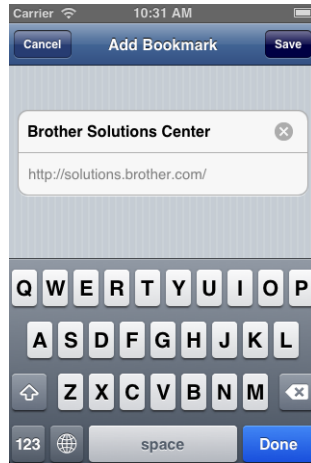



NOTE

You can change the title. However, the bookmark title cannot be blank.

Editing bookmarks

You can edit the bookmarks.

- 1 Tap .
 - 2 Tap **Edit**.
 - 3 Do one of the following:
 - To delete a bookmark, tap  on the left side of the title, and then tap **Delete** on the right side of the title.
- Go to step 4.

NOTE

If you tap  again before tapping **Delete**, the **Delete** icon will be hidden.

- To edit the title, tap it, and then edit the title.

Tap **Save**, and then go to step ④.




- ④ Repeat step ③ if you want to edit other bookmarks. Tap **Done**.

Deleting all of the browsing history

You can delete all of the browsing history.

NOTE

When deleting all of the browsing history, you cannot select and delete a single browsing history.


- ① Tap .
- ② Tap **History**.
- ③ Tap **Clear**. A message will appear to confirm if you want to delete the browsing history. Tap **Clear History**. All of the browsing history will be cleared.

For iPad and iPad mini

Printing web pages

You can directly print web pages using the web browser that is installed in Brother iPrint&Scan.

- 1 Tap the Brother iPrint&Scan icon on the Home screen.
If the screen for another function is displayed, switch to the web print function by tapping **Web**.
- 2 The web browser is displayed.

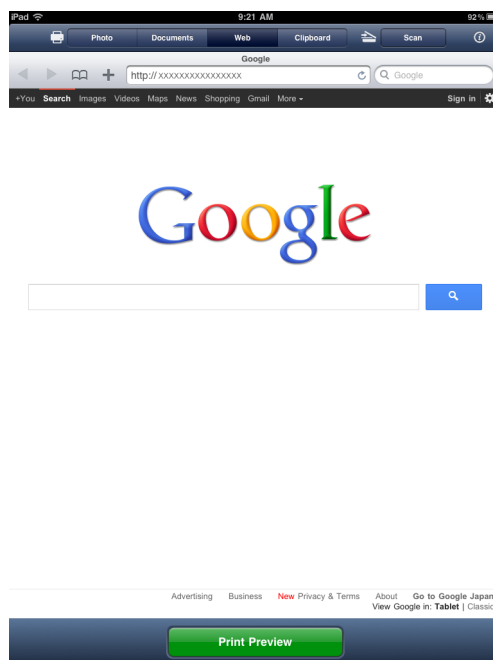

You can view a web page using one of the following methods:

- Enter the URL directly

Tap the address field, and then enter the URL of the web page that you want to view.

Tap **Go**, and then go to step ③.

- Search for a keyword

Tap


In the search field, enter the keywords that you want to search for.

Tap **Search**.

The search results are displayed in the web browser.


Tap the web page that you want to view, and then go to step ③.

- Tap a bookmark

If you have already added a bookmark to the web page, tap .

Tap the bookmark of the web page that you want to view, and then go to step ③.

- Tap the history

If you have viewed a web page previously, tap .

Tap **History**, and then tap the web page that you want to view.

Go to step ③.

NOTE


The bookmarks and browsing history of other web browsers on your mobile device are not available.

- ③ The web page is displayed.
Tap **Print Preview**.

NOTE

To add a bookmark to the web page, see *Adding a bookmark to a web page* on page 59.

- ④ Confirm the image on the Print Preview screen.
Depending on the web page, a thumbnail preview of the page appears at the top of the screen. To view a page, tap its thumbnail.
Pages marked with a check mark will be printed. If you do not want to print a page, tap its check mark to remove the check mark.

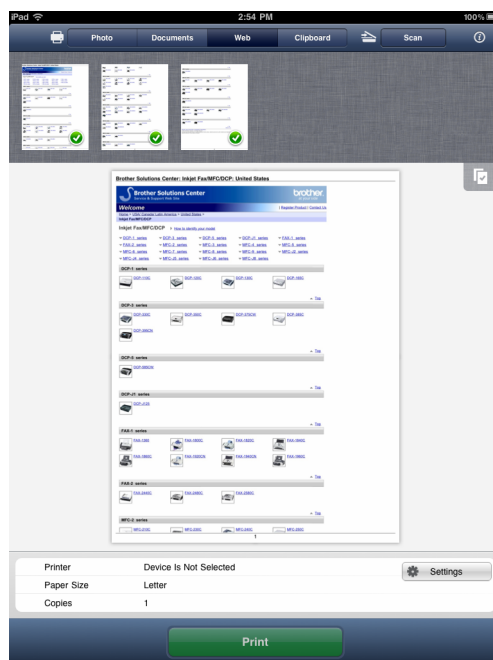

NOTE

Tap  and then **Select All** or **Deselect All** to select or deselect all pages.

- ⑤ Tap **Settings**.
The Print Settings screen appears.


- 6 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 8.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 7.




- 7 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Print Settings**.
- 8 Do one of the following:
 - To change other print settings, see *Print Settings* on page 72. After changing the settings, go to step 9.
 - If you do not want to change any other settings, tap outside of the Print Settings screen to close the screen, and then go to step 9.
- 9 Tap **Print**.
The machine will start printing.

Adding a bookmark to a web page

If you add a bookmark to your favorite web page, you can access the web page simply by tapping the bookmark.

- 1 When the web page that you want to add a bookmark to is displayed, tap .

2 Tap **Save**.

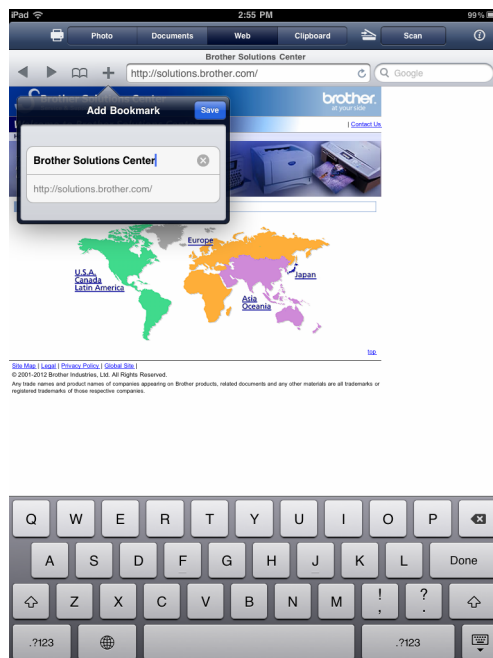



NOTE

You can change the title. However, the bookmark title cannot be blank.

Editing bookmarks


You can edit the bookmarks.

- 1 Tap .
 - 2 Tap **Edit**.
 - 3 Do one of the following:
 - To delete a bookmark, tap  on the left side of the title, and then tap **Delete** on the right side of the title.
- Go to step 4.

NOTE

If you tap  again before tapping **Delete**, the **Delete** icon will be hidden.

- To edit the title, tap it, and then edit the title.
Tap **Save**, and then go to step ④.

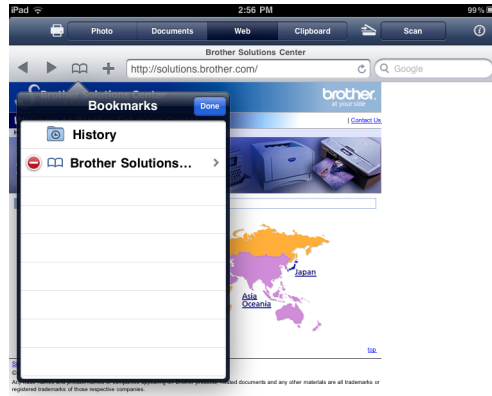


- ④ Repeat step ③ if you want to edit other bookmarks.
Tap **Done**.

Deleting all of the browsing history

You can delete all of the browsing history.

NOTE

When deleting all of the browsing history, you cannot select and delete a single browsing history.

- ① Tap .
- ② Tap **History**.
- ③ Tap **Clear**. A message will appear to confirm if you want to delete the browsing history. Tap **Clear History**.
All of the browsing history will be cleared.

Printing data from the Clipboard

You can directly print data, such as photos, text, and selected portions of web pages, that is copied to the Clipboard by other applications.


For iPhone and iPod touch

- 1 Use the desired application to copy the data to the Clipboard.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
If the **Scan** screen is displayed, switch to the print function by tapping **Print**.
- 3 Tap **Clipboard**.
The data in the Clipboard will be loaded.
- 4 Depending on the data, a Print Preview screen (A) or thumbnail Print Preview screen (B) appears.
Confirm the image.
If screen (B) is displayed, make sure the pages that you want to print are marked with a check mark. Tap a page and remove the check mark if you do not want to print that page.





(A)

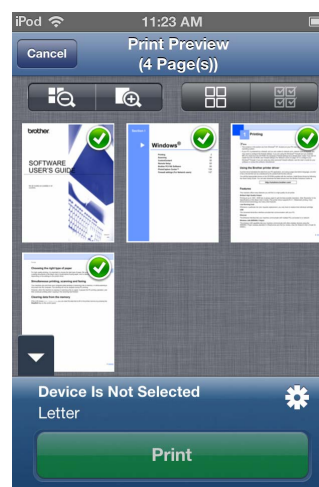


(B)



NOTE

- To select or deselect all pages, tap  to select or  to deselect.
- You can enlarge the thumbnails by tapping , and reduce them by tapping .

- 5 Tap .
The Print Settings screen appears.


- 6 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 8.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 7.



- 7 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Print Settings**.
- 8 Do one of the following:
 - To change other print settings, see *Print Settings* on page 72. After changing the settings, go to step 9.
 - If you do not want to change any other settings, tap **Done** and then go to step 9.
- 9 Tap **Print**.
The machine will start printing.

For iPad and iPad mini

- 1 Use the desired application to copy the data to the Clipboard.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
If the screen for another function is displayed, switch to the Clipboard print function by tapping **Clipboard**.
The data in the Clipboard will be loaded.
Do one of the following:
 - To print photos, go to step 5 in *For iPad and iPad mini* on page 48.
 - To print text or a selected portion of a web page, go to step 3.
- 3 Confirm the image on the Print Preview screen.
Depending on the data, a thumbnail preview of the page appears at the top of the screen. To view a page, tap its thumbnail.
Pages marked with a check mark will be printed. If you do not want to print a page, tap its check mark to remove the check mark.

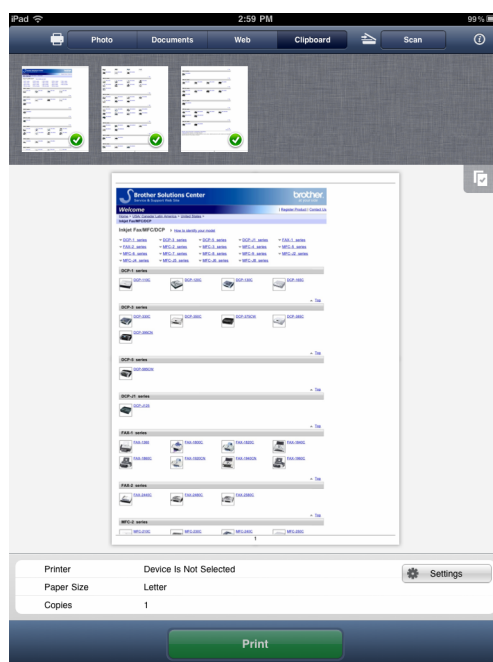

NOTE

Tap  and then **Select All** or **Deselect All** to select or deselect all pages.

- 4 Tap **Settings**.
The Print Settings screen appears.


- 5 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 7.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 6.



- 6 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Print Settings**.
- 7 Do one of the following:
 - To change other print settings, see *Print Settings* on page 72. After changing the settings, go to step 8.
 - If you do not want to change any other settings, tap outside of the Print Settings screen to close the screen, and then go to step 8.
- 8 Tap **Print**.
The machine will start printing.

Printing photos taken with Brother iPrint&Scan


When using the built-in camera in your iPhone or iPod touch, photos can be taken using Brother iPrint&Scan and printed directly.

- 1 Tap the Brother iPrint&Scan icon on the Home screen.
If the **Scan** screen is displayed, switch to the print function by tapping **Print**.
- 2 Tap **Camera**.
- 3 Take a photo by tapping .
- 4 The photo is displayed.
Do one of the following:
 - To print the photo, tap **Use**, and then go to step 5.
 - To retake the photo, tap **Retake**, and then go back to step 3.

NOTE


The photo is automatically added to the mobile device's photo album.

- 5 Confirm the image on the Print Preview screen.

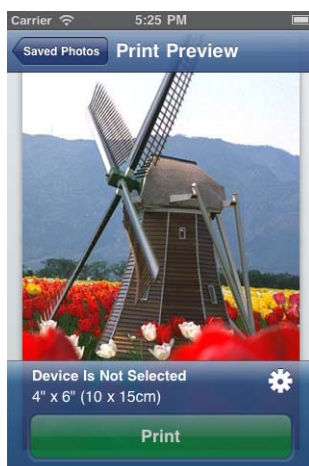

NOTE

Tap the screen to hide or show the operation buttons.

- 6 Tap .
- The Print Settings screen appears.

- 7 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 9.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 8.



- 8 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Print Settings**.
- 9 Do one of the following:
 - To change other print settings, see *Print Settings* on page 72. After changing the settings, go to step 10.
 - If you do not want to change any other settings, tap **Done** and then go to step 10.
- 10 Tap **Print**.
The machine will start printing.

Printing photos or documents from other applications

Brother iPrint&Scan can print files from other applications. The following file formats are supported:

- PDF
- Microsoft® Word (DOC/DOCX)
- Microsoft® Excel® (XLS/XLSX)
- Microsoft® PowerPoint® (PPT/PPTX)
- Text
- Images (JPEG, PNG and TIFF)

5


For iPhone and iPod touch

- 1 Use the desired application to select the file that you want to print, and open it in Brother iPrint&Scan. For example, if you are viewing a PDF using Safari, tap **Open in...** and then select Brother iPrint&Scan from the application list.
- 2 When printing a Microsoft® Excel® file, a list of the worksheets appears. Select the worksheet that you want to print.
- 3 Depending on the data, a Print Preview screen (A) or thumbnail Print Preview screen (B) appears. Confirm the image.
If screen (B) is displayed, make sure the pages that you want to print are marked with a check mark. Tap a page and remove the check mark if you do not want to print that page.





(A)

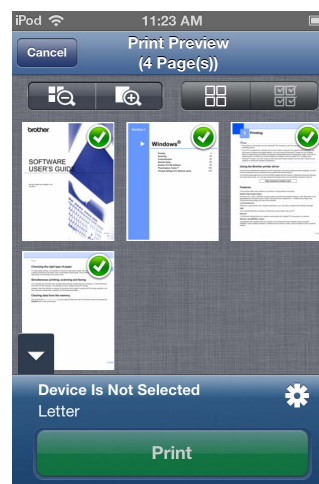

(B)



NOTE

- To select or deselect all pages, tap  to select or  to deselect.
- You can enlarge the thumbnails by tapping , and reduce them by tapping .
- Secure PDF files that are configured to not allow printing cannot be printed. If a password-protected PDF file is opened, enter the password when prompted and tap **OK**.

4 Tap .

The Print Settings screen appears.

5 Make sure your machine is selected.
Do one of the following:

- If your machine is selected, go to step 7.
- If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 6.



6 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Print Settings**.

7 Do one of the following:

- To change other print settings, see *Print Settings* on page 72. After changing the settings, go to step 8.
- If you do not want to change any other settings, tap **Done** and then go to step 8.


8 Tap **Print**.
The machine will start printing.

For iPad and iPad mini

- 1 Use the desired application to select the file that you want to print, and open it in Brother iPrint&Scan. For example, if you are viewing a PDF using Safari, tap **Open in...** and then select Brother iPrint&Scan from the application list.
- 2 Confirm the image on the Print Preview screen. Depending on the file, a thumbnail preview of the page appears at the top of the screen. To view a page, tap its thumbnail. Pages marked with a check mark will be printed. If you do not want to print a page, tap its check mark to remove the check mark.



NOTE

- When printing a Microsoft® Excel® file, a list of the worksheets appears. Select the worksheet that you want to print.
 - Tap  and then **Select All** or **Deselect All** to select or deselect all pages.
 - Secure PDF files that are configured to not allow printing cannot be printed. If a password-protected PDF file is opened, enter the password when prompted and tap **OK**.
- 3 Tap **Settings**.
The Print Settings screen appears.

- 4 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 6.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed printer name or **Device Is Not Selected**. Go to step 5.



- 5 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Print Settings**.
- 6 Do one of the following:
 - To change other print settings, see *Print Settings* on page 72. After changing the settings, go to step 7.
 - If you do not want to change any other settings, tap outside of the Print Settings screen to close the screen, and then go to step 7.
- 7 Tap **Print**.
The machine will start printing.

Print Settings

You can change the following print settings when you print from a mobile device.

Print Options

- Paper Size
- Media Type
- Borderless
- Copies
- Layout
- Color/Mono
- 2-sided

Document Options (For Microsoft® Excel® files only)

- Scale
- Orientation

NOTE

Only settings that can be changed are displayed.

- 1 On the Print Settings screen, tap the print option that you want to change.
- 2 Choose an option and tap **Print Settings**.
Repeat steps 1 and 2 if you want to change other options.
- 3 (For iPhone and iPod touch)
Tap **Done**.
(For iPad and iPad mini)
Tap outside of the Print Settings screen to close the screen.


Scanning documents

Scanning documents and saving them in your mobile device's photo album

Make sure there is enough available space on your mobile device.

For iPhone and iPod touch

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
If the **Print** screen is displayed, switch to the scan function by tapping **Scan**.
- 3 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 5.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 4.

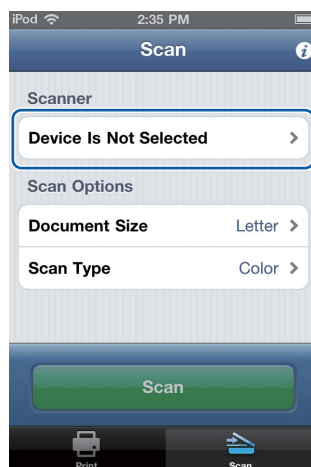


- 4 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Scan Settings**.
- 5 Do one of the following:
 - To change other scan settings, see *Scan Settings* on page 91. After changing the settings, go to step 6.
 - If you do not want to change any other settings, go to step 6.


- 6 Tap **Scan**.
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.



NOTE

- Tap the screen to hide or show the operation buttons.
- Flick left or right to view the previous or next page.
- Tap  to rotate the scanned image 90° counterclockwise.


- 7 Do one of the following:

- To crop the scanned image, tap  and then go to step 8.
- If you do not want to crop the scanned image, go to step 10.

- 8 The area inside the box will be cropped.

- To change the size of the box, drag the arrows on the edge of the box.
- To move the position of the box, tap inside the box and drag the box.
- To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.

When finished, tap **Done**.

- 9 Confirm the cropped image. To start over and select the size of the box again, tap  and then go back to step 8.

- 10 Tap .

- 11 Tap **Save To Photo Albums**.
The scanned image is saved in the photo album.

NOTE

Each page is saved as a separate file.


For iPad and iPad mini

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
If the screen for another function is displayed, switch to the scan function by tapping **Scan**.
- 3 Tap **Settings**.
The Scan Settings screen appears.
- 4 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 6.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 5.




- 5 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Scan Settings**.
- 6 Do one of the following:
 - To change other scan settings, see *Scan Settings* on page 91. After changing the settings, go to step 7.
 - If you do not want to change any other settings, tap outside of the Scan Settings screen to close the screen, and then go to step 7.


- 7 Tap **Scan**.
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

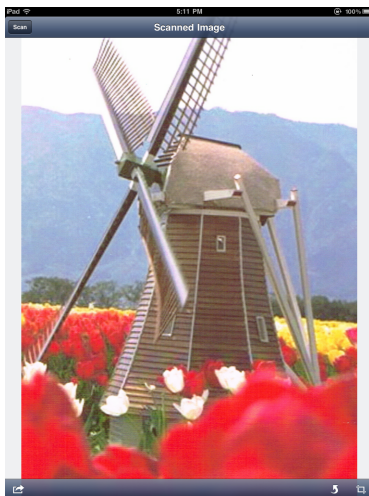

NOTE

- Flick left or right to view the previous or next page.
- Tap  to rotate the scanned image 90° counterclockwise.


- 8 Do one of the following:

- To crop the scanned image, tap  and then go to step 9.
- If you do not want to crop the scanned image, go to step 11.

- 9 The area inside the box will be cropped.

- To change the size of the box, drag the arrows on the edge of the box.
- To move the position of the box, tap inside the box and drag the box.
- To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.

When finished, tap **Done**.

- 10 Confirm the cropped image. To start over and select the size of the box again, tap  and then go back to step 9.

- 11 Tap .

- 12 Tap **Save To Photo Albums**.
The scanned image is saved in the photo album.


NOTE

Each page is saved as a separate file.

Sending by email

For iPhone and iPod touch

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
If the **Print** screen is displayed, switch to the scan function by tapping **Scan**.
- 3 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 5.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 4.

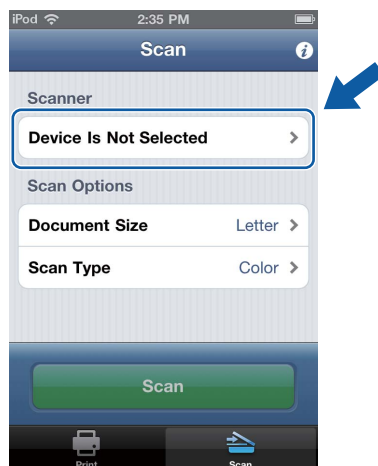


- 4 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Scan Settings**.
- 5 Do one of the following:
 - To change other scan settings, see *Scan Settings* on page 91. After changing the settings, go to step 6.
 - If you do not want to change any other settings, go to step 6.


- 6 Tap **Scan**.
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.



NOTE

- Tap the screen to hide or show the operation buttons.
- Flick left or right to view the previous or next page.
- Tap  to rotate the scanned image 90° counterclockwise.


- 7 Do one of the following:

- To crop the scanned image, tap  and then go to step 8.
- If you do not want to crop the scanned image, go to step 10.

- 8 The area inside the box will be cropped.

- To change the size of the box, drag the arrows on the edge of the box.
- To move the position of the box, tap inside the box and drag the box.
- To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.

When finished, tap **Done**.

- 9 Confirm the cropped image. To start over and select the size of the box again, tap  and then go back to step 8.

- 10 Tap .

- 11 Tap **Email as JPEG** or **Email as PDF**.

The email application automatically opens, a new outgoing email message is created, and the scanned image is attached to the message.

NOTE

- Images may not be able to be attached to an email message depending on the size of the images or the number of images. If an alert is displayed, you can choose to either continue or to save the scanned images in the mobile device's photo album.
- File names are automatically created based on the current date. For example, the first image scanned on July 1, 2011 would be named Scan07012011_001.jpg. Note that the region setting also determines the date format of the file name. (A sequential number may not be included in the file name.)

- 12 Enter the destination, subject, the message content, and then send the message.

NOTE

For information about operating the email application, refer to the application's user's guide.


For iPad and iPad mini

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
If the screen for another function is displayed, switch to the scan function by tapping **Scan**.
- 3 Tap **Settings**.
The Scan Settings screen appears.
- 4 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 6.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 5.





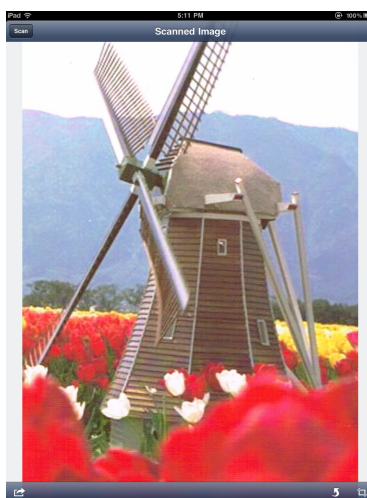

- 5 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Scan Settings**.

- 6 Do one of the following:
- To change other scan settings, see *Scan Settings* on page 91. After changing the settings, go to step 7.
 - If you do not want to change any other settings, tap outside of the Scan Settings screen to close the screen, and then go to step 7.
- 7 Tap **Scan**.
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.



NOTE

- Flick left or right to view the previous or next page.
- Tap  to rotate the scanned image 90° counterclockwise.

- 8 Do one of the following:
- To crop the scanned image, tap  and then go to step 9.
 - If you do not want to crop the scanned image, go to step 11.
- 9 The area inside the box will be cropped.
- To change the size of the box, drag the arrows on the edge of the box.
 - To move the position of the box, tap inside the box and drag the box.
 - To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.
- When finished, tap **Done**.
- 10 Confirm the cropped image. To start over and select the size of the box again, tap  and then go back to step 9.
- 11 Tap .

12 Tap **Email as JPEG** or **Email as PDF**.

The email application automatically opens, a new outgoing email message is created, and the scanned image is attached to the message.

NOTE

- Images may not be able to be attached to an email message depending on the size of the images or the number of images. If an alert is displayed, you can choose to either continue or to save the scanned images in the mobile device's photo album.
- File names are automatically created based on the current date. For example, the first image scanned on July 1, 2011 would be named Scan07012011_001.jpg. Note that the region setting also determines the date format of the file name. (A sequential number may not be included in the file name.)

13 Enter the destination, subject, the message content, and then send the message.

NOTE

For information about operating the email application, refer to the application's user's guide.


Scanning documents and saving them to iCloud

Scanned images can be saved to iCloud and viewed from a computer running OS X v10.7.x or 10.8.x. The images saved to iCloud can be viewed on an iOS device from **Documents** in Brother iPrint&Scan. See *Printing from the document file list* on page 51.

You need to enable iCloud on an iOS device.

For iPhone and iPod touch

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
If the **Print** screen is displayed, switch to the scan function by tapping **Scan**.
- 3 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 5.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 4.

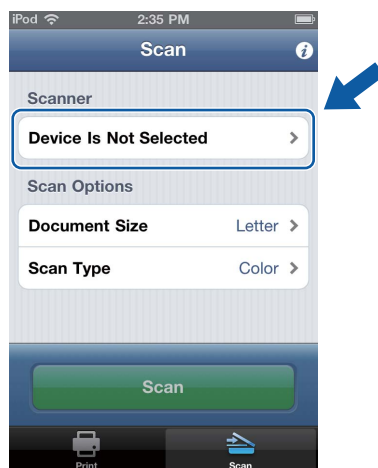


- 4 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Scan Settings**.
- 5 Do one of the following:
 - To change other scan settings, see *Scan Settings* on page 91. After changing the settings, go to step 6.
 - If you do not want to change any other settings, go to step 6.


- 6 Tap **Scan**.
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.



NOTE

- Tap the screen to hide or show the operation buttons.
- Flick left or right to view the previous or next page.
- Tap  to rotate the scanned image 90° counterclockwise.


- 7 Do one of the following:

- To crop the scanned image, tap  and then go to step 8.
- If you do not want to crop the scanned image, go to step 10.

- 8 The area inside the box will be cropped.

- To change the size of the box, drag the arrows on the edge of the box.
- To move the position of the box, tap inside the box and drag the box.
- To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.

When finished, tap **Done**.

- 9 Confirm the cropped image. To start over and select the size of the box again, tap  and then go back to step 8.

- 10 Tap .


- 11 Tap **Save To iCloud as JPEG** or **Save To iCloud as PDF**.
The scanned image will be saved to iCloud.

NOTE

- If you chose **Save To iCloud as JPEG**, each page is saved as a separate file. If you chose **Save To iCloud as PDF**, all pages of the document are saved in one file.
- File names are automatically created based on the current date. For example, the first image scanned on July 1, 2011 would be named Scan07012011_001.jpg. Note that the region setting also determines the date format of the file name. (A sequential number may not be included in the file name.)


For iPad and iPad mini

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
If the screen for another function is displayed, switch to the scan function by tapping **Scan**.
- 3 Tap **Settings**.
The Scan Settings screen appears.
- 4 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 6.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 5.

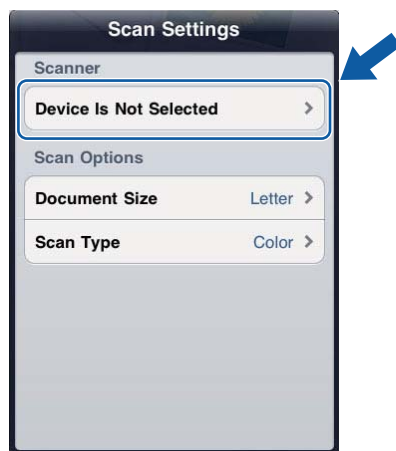


- 5 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Scan Settings**.
- 6 Do one of the following:
 - To change other scan settings, see *Scan Settings* on page 91. After changing the settings, go to step 7.
 - If you do not want to change any other settings, tap outside of the Scan Settings screen to close the screen, and then go to step 7.


- 7 Tap **Scan**.
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.

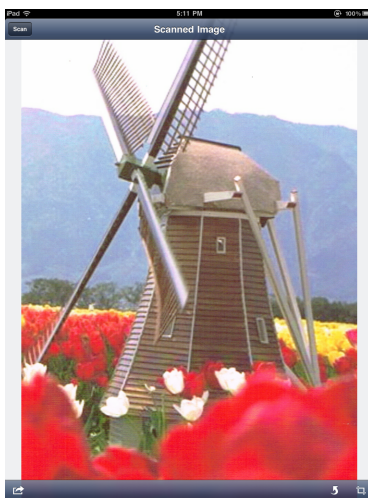

NOTE

- Flick left or right to view the previous or next page.
- Tap  to rotate the scanned image 90° counterclockwise.


- 8 Do one of the following:

- To crop the scanned image, tap  and then go to step 9.
- If you do not want to crop the scanned image, go to step 11.

- 9 The area inside the box will be cropped.

- To change the size of the box, drag the arrows on the edge of the box.
- To move the position of the box, tap inside the box and drag the box.
- To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.

When finished, tap **Done**.

- 10 Confirm the cropped image. To start over and select the size of the box again, tap  and then go back to step 9.

- 11 Tap .

- 12 Tap **Save To iCloud as JPEG** or **Save To iCloud as PDF**.
The scanned image will be saved to iCloud.

NOTE

- If you chose **Save To iCloud as JPEG**, each page is saved as a separate file. If you chose **Save To iCloud as PDF**, all pages of the document are saved in one file.
- File names are automatically created based on the current date. For example, the first image scanned on July 1, 2011 would be named Scan07012011_001.jpg. Note that the region setting also determines the date format of the file name. (A sequential number may not be included in the file name.)

Opening scanned images in other applications or uploading to online services


Scanned images can be opened using other applications or uploaded to iOS-supported online services.

To open using other applications, make sure an application that can open PDF files is installed on your mobile device.

To upload to online services, iOS 6.0 or later is required. In addition, an online service account must be set up for your mobile device.

For iPhone and iPod touch

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
If the **Print** screen is displayed, switch to the scan function by tapping **Scan**.
- 3 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 5.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 4.

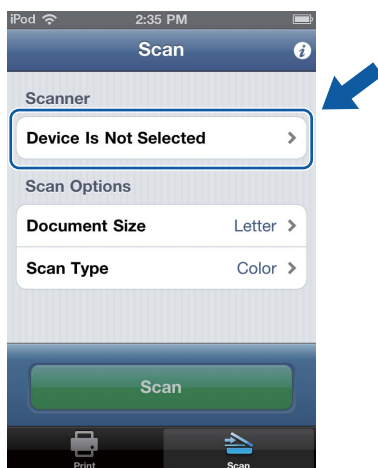


- 4 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Scan Settings**.
- 5 Do one of the following:
 - To change other scan settings, see *Scan Settings* on page 91. After changing the settings, go to step 6.
 - If you do not want to change any other settings, go to step 6.


- 6 Tap **Scan**.
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.



NOTE

- Tap the screen to hide or show the operation buttons.
- Flick left or right to view the previous or next page.
- Tap  to rotate the scanned image 90° counterclockwise.


- 7 Do one of the following:

- To crop the scanned image, tap  and then go to step 8.
- If you do not want to crop the scanned image, go to step 10.

- 8 The area inside the box will be cropped.

- To change the size of the box, drag the arrows on the edge of the box.
- To move the position of the box, tap inside the box and drag the box.
- To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.

When finished, tap **Done**.

- 9 Confirm the cropped image. To start over and select the size of the box again, tap  and then go back to step 8.

- 10 Tap .

- 11 Do one of the following:
 - To open using other applications, tap **Open Using Another App**.
A list of applications that can open PDF files is displayed. Select an application.
The PDF file is opened in the selected application.
 - To upload to online services, tap **Upload to Online Services**.
A list of available online services is displayed. Select a service and follow the on-screen instructions.


For iPad and iPad mini

- 1 Load your document on to your machine.
- 2 Tap the Brother iPrint&Scan icon on the Home screen.
If the screen for another function is displayed, switch to the scan function by tapping **Scan**.
- 3 Tap **Settings**.
The Scan Settings screen appears.
- 4 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 6.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap the displayed scanner name or **Device Is Not Selected**. Go to step 5.





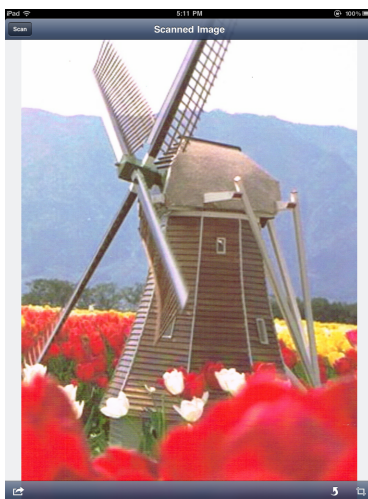

- 5 The application will search your network and display a list of available machines. Tap your machine in the list.
Tap **Scan Settings**.

- 6 Do one of the following:
- To change other scan settings, see *Scan Settings* on page 91. After changing the settings, go to step 7.
 - If you do not want to change any other settings, tap outside of the Scan Settings screen to close the screen, and then go to step 7.
- 7 Tap **Scan**.
The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.



NOTE

- Flick left or right to view the previous or next page.
- Tap  to rotate the scanned image 90° counterclockwise.

- 8 Do one of the following:
- To crop the scanned image, tap  and then go to step 9.
 - If you do not want to crop the scanned image, go to step 11.
- 9 The area inside the box will be cropped.
- To change the size of the box, drag the arrows on the edge of the box.
 - To move the position of the box, tap inside the box and drag the box.
 - To start over and select the size of the box again, tap outside the box to clear the box, and then tap and drag to select the area of the image you want to crop.
- When finished, tap **Done**.
- 10 Confirm the cropped image. To start over and select the size of the box again, tap  and then go back to step 9.
- 11 Tap .

12 Do one of the following:

- To open using other applications, tap **Open Using Another App**.

A list of applications that can open PDF files is displayed. Select an application.

The PDF file is opened in the selected application.

- To upload to online services, tap **Upload to Online Services**.

A list of available online services is displayed. Select a service and follow the on-screen instructions.

Scan Settings

You can change the following scan settings when you use your mobile device to scan.

- Document Size
- Scan Type
- 2-sided ¹
- Skip Blank Page ¹
- Bleed-through Prevention

¹ Displayed only when your machine supports 2-sided scan.

NOTE

Only settings that can be changed are displayed.

- 1 On the Scan Settings screen, tap the scan option that you want to change.
- 2 Choose an option and tap **Scan Settings**.
Repeat steps 1 and 2 if you want to change other options.
- 3 (For iPad and iPad mini only)
Tap outside of the Scan Settings screen to close the screen.



For Windows[®] Phone Devices

Introduction	93
Printing	97
Scanning	106

Overview

Brother iPrint&Scan allows you to use features of your Brother machine directly from your Windows® Phone, without using a computer.

Brother iPrint&Scan supports the following functions:

■ Printing

Even if your machine is not connected to your computer, you can print photos and documents directly from your mobile device or from an online file storage service (see *Printing* on page 97).

■ Scanning

Photos and documents scanned with your Brother machine can be saved directly to your mobile device or to an online file storage service (see *Scanning* on page 106).

NOTE

- For a list of models supported by Brother iPrint&Scan, please visit the Brother website at <http://www.brother.com/apps/wp/>.
- If your machine does not have a printer or scanner, you cannot use the related print functions or scan functions of Brother iPrint&Scan.

Hardware requirement

Supported operating systems

For information about the supported operating systems, please refer to the Brother iPrint&Scan web page on the Windows® Phone Store (Windows® Phone Marketplace).

Device connections

To use Brother iPrint&Scan, connect your mobile device to your Brother machine using one of the following connection methods:

- Wi-Fi
- Wi-Fi Direct™ (supported Brother machines only)

To configure your mobile device for a Wi-Fi connection, please refer to your mobile device's user's guide.

NOTE


Depending on your Brother machine and mobile device, the supported connection methods may vary.

Wi-Fi connection

Brother iPrint&Scan supports wireless connections that use infrastructure mode; ad-hoc mode is not supported.


To configure your Brother machine for a Wi-Fi connection, please refer to your machine's Quick Setup Guide.

- When the Brother machine is connected to the wireless access point/router using Wi-Fi:

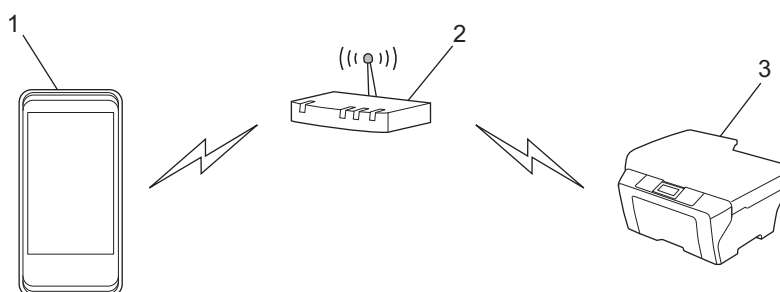

- 1 Mobile device
- 2 Wireless access point/router
- 3 Wireless network machine (your machine)

- When the Brother machine is connected to the wireless access point/router using a network cable:

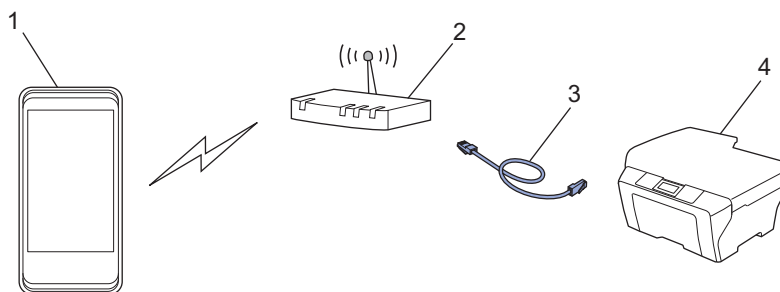


- 1 Mobile device
- 2 Wireless access point/router
- 3 Network cable
- 4 Network machine (your machine)

Wi-Fi Direct™ connection (supported Brother machines only)

Connect your mobile device to your Brother machine using Wi-Fi Direct™. Wi-Fi Direct™ allows you to configure a secured wireless network between your Brother machine and a mobile device without using an access point.

If your Brother machine supports Wi-Fi Direct™ and you want to configure your Brother machine for a Wi-Fi Direct™ network, please download the Wi-Fi Direct™ Guide from the Brother Solutions Center at <http://solutions.brother.com/>.

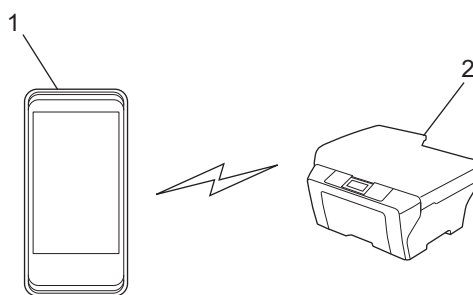

- 1 Mobile device
- 2 Your Brother machine

Downloading Brother iPrint&Scan from the Windows® Phone Store (Windows® Phone Marketplace)

You can download and install Brother iPrint&Scan from the Windows® Phone Store (Windows® Phone Marketplace). To take advantage of all the features supported by Brother iPrint&Scan, make sure you are using the latest version.

To download and install or to uninstall Brother iPrint&Scan, please refer to the user's guide for your mobile device.

Printing images stored in your mobile device


You can print photos that are stored in your mobile device.

- 1 Display the list of applications on your mobile device and tap the Brother iPrint&Scan icon.

NOTE

When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 2 Tap **Pictures**.
- 3 Choose the desired photo from the thumbnails.
- 4 Confirm the image on the print preview screen.

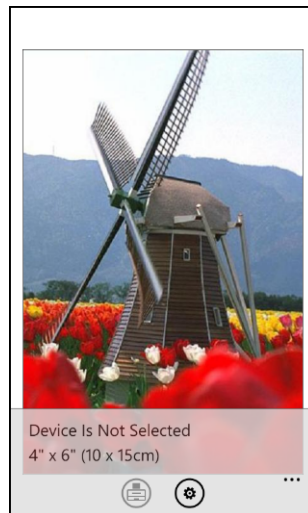

NOTE

Tap the upper portion of your mobile devices screen to show or hide the operation buttons.


- 5 Tap .


- 6 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 8.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 7.



- 7 The application will search your network and display a list of available machines. Tap your machine in the list.

NOTE

If your machine is not displayed in the list, you may be able to find your machine by tapping  and then entering your machine's IP address.

- 8 Do one of the following:
 - To change other print settings, see *Print Settings* on page 105. After changing the settings, go to step 9.
 - If you do not want to change any other settings, press the Back button and go to step 9.
- 9 Tap .
The machine will start printing.

Printing photos taken with Brother iPrint&Scan


If the mobile device features a camera, photos can be taken using Brother iPrint&Scan and printed directly.

- 1 Display the list of applications on your mobile device and tap the Brother iPrint&Scan icon.
- 2 Tap **Camera**.
- 3 Use the device to take a photo.
- 4 The photo is displayed.
Do one of the following:
 - To print the photo, tap **accept**, and then go to step 5.
 - To retake the photo, tap **retake**, and then go back to step 3.

NOTE

The procedure used to handle a photo may vary by device.

- 5 Confirm the image on the print preview screen.

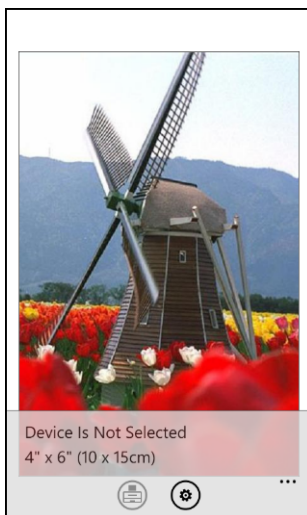

NOTE

Tap the upper portion of your mobile devices screen to show or hide the operation buttons.


- 6 Tap .


- 7 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 9.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 8.



- 8 The application will search your network and display a list of available machines. Tap your machine in the list.

NOTE


If your machine is not displayed in the list, you may be able to find your machine by tapping  and then entering your machine's IP address.


- 9 Do one of the following:
 - To change other print settings, see *Print Settings* on page 105. After changing the settings, go to step 10.
 - If you do not want to change any other settings, press the Back button and go to step 10.
- 10 Tap .
The machine will start printing.

Printing photos or documents from Microsoft® SkyDrive®

SkyDrive® is an online file storage service. You can use Brother iPrint&Scan to print files saved to SkyDrive® in the following file formats:

- PDF
- Microsoft® Word (DOC/DOCX)
- Microsoft® Excel® (XLS/XLSX)
- Microsoft® PowerPoint® (PPT/PPTX)
- Images (JPEG/PNG)

- 1 Display the list of applications on your mobile device and tap the Brother iPrint&Scan icon.
- 2 Tap **SkyDrive**.
- 3 A list displays the files that are saved to SkyDrive® in a file format that is supported by Brother iPrint&Scan. Select the desired file from the list.
- 4 Depending on the file, a thumbnail preview of the page appears. Select the desired pages from the thumbnails.
- 5 Tap .
- 6 A print preview will be displayed. Confirm the image on the print preview screen.

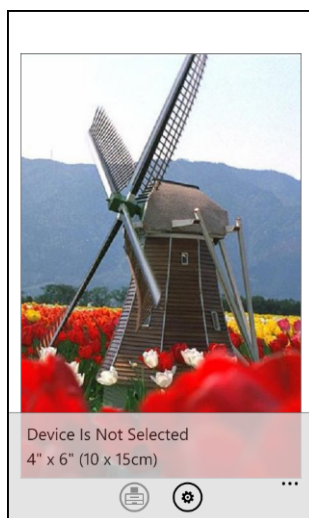

NOTE

- Tap the upper portion of your mobile devices screen to show or hide the operation buttons.
- Flick left or right to view the previous or next page.


- 7 Tap .

- 8 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 10.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 9.




- 9 The application will search your network and display a list of available machines. Tap your machine in the list.

NOTE

If your machine is not displayed in the list, you may be able to find your machine by tapping  and then entering your machine's IP address.

- 10 Do one of the following:
 - To change other print settings, see *Print Settings* on page 105. After changing the settings, go to step 11.
 - If you do not want to change any other settings, press the Back button and go to step 11.

- 11 Tap .

The machine will start printing.

Printing photos from other applications

Photos can be printed directly from pre-installed applications on your mobile device using Brother iPrint&Scan. For example, you can print photos that are saved in your mobile device's Pictures hub.

NOTE


You cannot print photos from third-party applications.

- 1 Use the desired application to select the photo that you want to print, and share the photo with Brother iPrint&Scan. For example, from the Pictures hub you can share a photo by tapping the sequential dots (⋮), and then tapping **apps...** If the list of applications appears, select Brother iPrint&Scan.

NOTE

- If **apps...** is not displayed though you have already downloaded Brother iPrint&Scan, your Brother iPrint&Scan may be the old version. Download the latest version from the Windows® Phone Store (Windows® Phone Marketplace).
- When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 2 A print preview will be displayed. Confirm the image on the print preview screen.

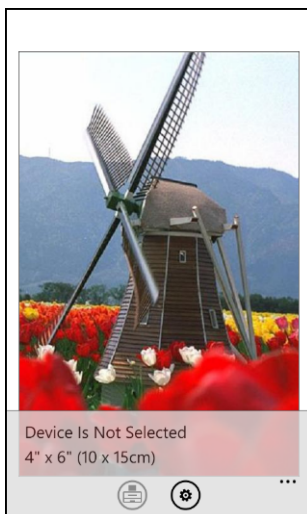

NOTE

Tap the upper portion of your mobile devices screen to show or hide the operation buttons.


- 3 Tap .

- 4 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 6.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap **Printer**. Go to step 5.




- 5 The application will search your network and display a list of available machines. Tap your machine in the list.

NOTE

If your machine is not displayed in the list, you may be able to find your machine by tapping  and then entering your machine's IP address.

- 6 Do one of the following:
 - To change other print settings, see *Print Settings* on page 105. After changing the settings, go to step 7.
 - If you do not want to change any other settings, press the Back button and go to step 7.

- 7 Tap .

The machine will start printing.

Print Settings

You can change the following print settings when you print from a mobile device.

- Paper Size
- Media Type
- Copies
- Color/Mono
- Layout
- 2-sided

NOTE

Only settings that can be changed are displayed.

- 1 On the Print Settings screen, tap the print option that you want to change.
- 2 Choose an option.
Repeat steps 1 and 2 if you want to change other options.
- 3 Press the Back button.

NOTE

- When you print photos

(Inkjet models)

Photos are printed borderless, and if the aspect ratios of the photos and the paper are different, the photos will be enlarged so that there is no margin on the printed photos. In this case, the portion of the photo that extends beyond the paper size is cut off and will not be printed.

(Laser models)

Photos are printed with borders, and if the aspect ratios of the photos and the paper are different, the photos will be reduced or enlarged so that the entire image is printed.

- Documents are printed with borders.
-

Scanning and saving documents to your mobile device or Microsoft® SkyDrive®

SkyDrive® is an online file storage service. Scanned images can be saved directly to your mobile device or to SkyDrive®.


When saving images to your mobile device, make sure there is enough storage space available on your mobile device.

- 1 Load your document on to your machine.
- 2 Display the list of applications on your mobile device and tap the Brother iPrint&Scan icon.

NOTE


When the license agreement screen appears, carefully read and accept the terms of the agreement.

- 3 Tap **Scan**.
- 4 Make sure your machine is selected.
Do one of the following:
 - If your machine is selected, go to step 6.
 - If a different machine is selected or if **Device Is Not Selected** is displayed, make sure your machine is turned on and then tap **Scanner**. Go to step 5.

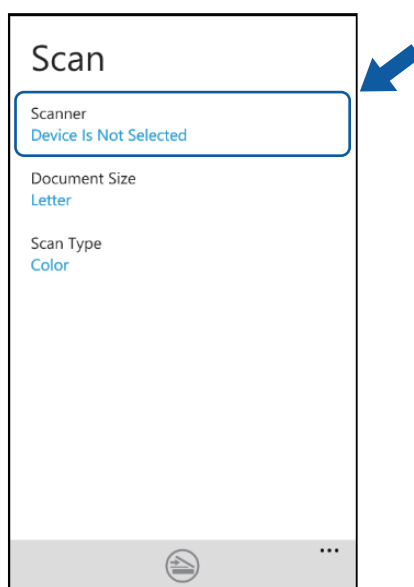

- 5 The application will search your network and display a list of available machines. Tap your machine in the list.

NOTE

If your machine is not displayed in the list, you may be able to find your machine by tapping  and then entering your machine's IP address.

- 6 Do one of the following:
- To change other scan settings, see *Scan Settings* on page 108. After changing the settings, go to step 7.
 - If you do not want to change any other settings, go to step 7.

- 7 Tap .

The machine will start to scan the document. The scanned image will then be displayed on the screen. Confirm the scanned image.



NOTE

Flick left or right to view the previous or next page.

- 8 Tap .

- 9 Do one of the following:

- To save the scanned image to your mobile device, tap **JPEG in phone**.
The scanned image will be saved in **Pictures/Saved Pictures**.
- To save the scanned image to SkyDrive®, tap **JPEG in SkyDrive** or **PDF in SkyDrive**.
The scanned image will be saved in the **Brother iPrint&Scan** folder on SkyDrive®.

NOTE

If you selected the JPEG format, each page is saved as a separate file. If you selected the PDF format, all pages of the document are saved in one file.

Scan Settings

You can change the following scan settings when you use your mobile device to scan.

- Document Size
- Scan Type
- 2-sided ¹

¹ Displayed only when your machine supports 2-sided scan.

NOTE

Only settings that can be changed are displayed.

- 1 On the Scan Settings screen, tap the scan option that you want to change.
- 2 Choose an option.
Repeat steps 1 and 2 if you want to change other options.

brother®

**Visit us on the World Wide Web
<http://www.brother.com/>**



www.brotherearth.com