



Front and Platen Base Cover Removal

These are two individual parts but should be removed as one part.

1. Eject the Platen and loosen the platen locking screw and remove the platen from the base.

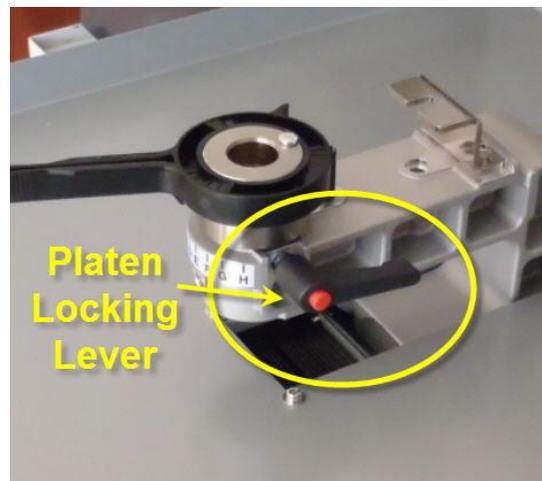


2. Remove the Black platen height adjustment lever by removing the silver screw that blocks the lever from being removed. Thread the screw back into place for safe keeping.
3. Remove the six Phillips screws from the platen tray and lift the tray from the tray rails.

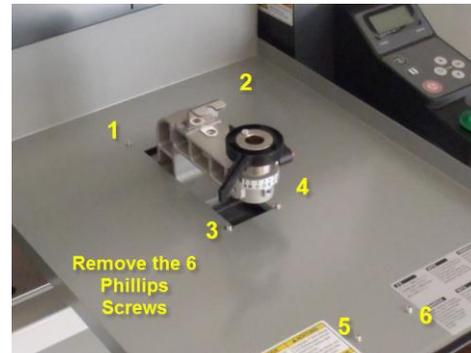

4. Lift the top cover if it is still in place (the top cover does not have to be removed in order to remove the front cover and platen base cover).
5. Remove the three black Phillip Screws from the top edge of the front cover.

6. Remove the four silver Phillips Screws along the bottom of the front cover. One of the four screws is on the left side.
7. Remove the two black Phillips Screws on the left and right side inside the platen tray bay.
8. Remove the four screws on the Platen Base cover; two on each side.

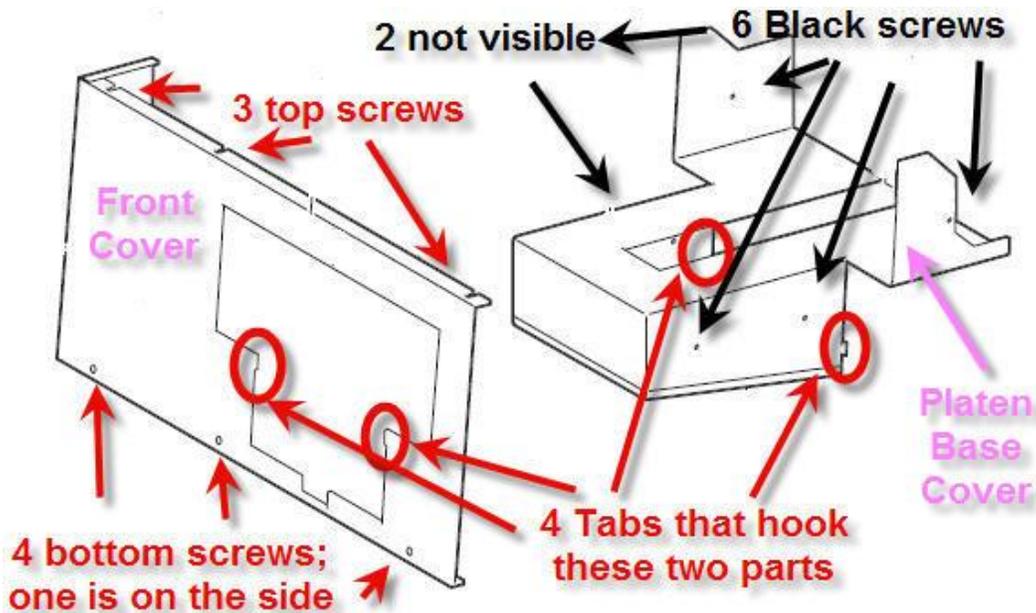

9. Grab both sides of the Platen Base Cover and pull outward from the front of the printer. The front cover should slide forward with the platen base cover. You may have to pull the front cover slightly so it pulls away from the printer with the Platen Base Cover. There are four tabs that keep these two covers connected. Try to keep the covers as one piece. The reassembly will be much easier if these two parts are still connected. Set the covers aside in a place where they will not be disturbed (separated).

Your dealer(s)-distributor(s) are your first line of support, please contact them for prompt assistance. If you do not have a dealer(s)-distributor(s) refer to our website <http://www.brother-usa.com>. For additional information contact Technical Support at 1-877-427-6843 or tsupport@brother.com. Any information within this document is subject to change.
