

Removing the Rear Cover

1. With the power on, eject the platen so it not partially in the rear cover.



2. Power off the machine and remove the power cord from the back of the printer.
3. Use a long Phillips Screwdriver to remove the single Phillips screw on the underside of the cover.
4. Lift the cover upward so it slides off of the mounting brackets.

