
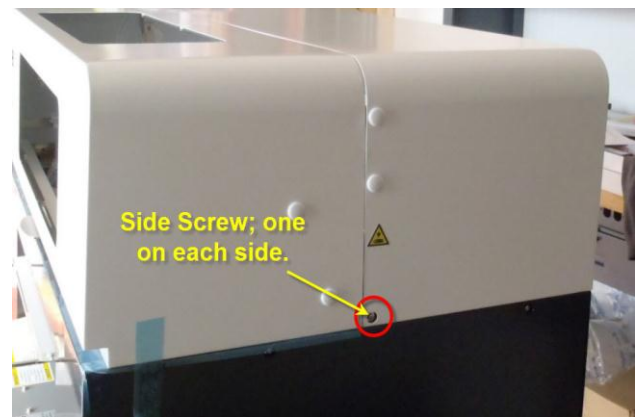


Removing the Top Covers

(both parts together)

1. Power off the machine and unplug the power cord from the back of the printer.
2. Open the front lid to the point that it locks in the open position.
3. Loosen the screw on each side but do not remove them; they will be removed last.
4. Remove the four screws along the bottom in the back of the cover.
5. Remove one of the two side screws and be careful not to let the cover slip.
6. You will likely need the help of someone to perform this last step; remove the last side screw and lift the cover holding both covers together and set the cover aside.

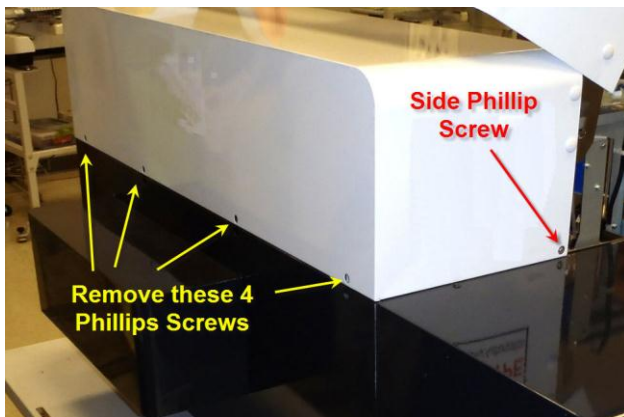

Note: Please do not attempt to remove this cover alone; help will likely be necessary to lift the cover assembly to avoid injury.