
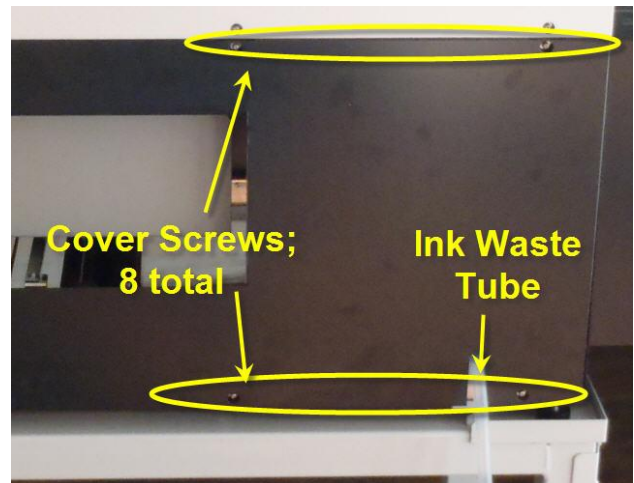


Back Cover Removal

Remove the Rear Cover (see Rear Cover Removal Guide for assistance)

1. The platen should be ejected and the power off.
2. Remove the power cord from the back of the printer if it is connected.
3. Remove the USB cable and Ethernet cable if it is attached.

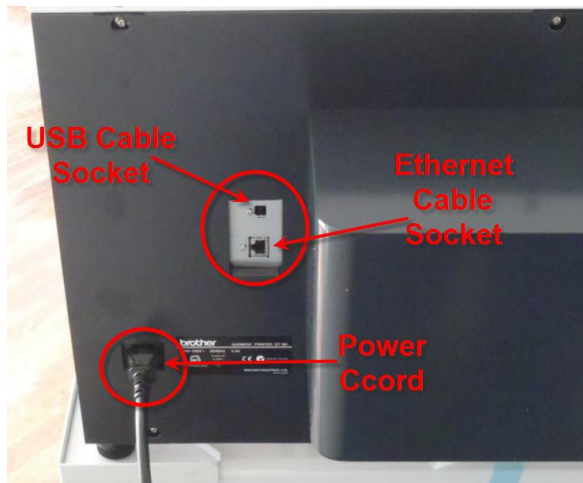

4. Remove the four screws along the bottom of the cover.
5. Remove the four screws along the top edge of the cover but hold on to the cover as you remove the last screw so it does not fall.
6. Lift the cover from the back of the machine; be careful not to pull the waste ink tube as you lift the cover from the machine.

Note: only the Rear Cover and Cables need to be removed for the Back Cover to be removed.