




(17) Remove the four screws truss (M4x6) and three washers (in the red circles shown below), and then remove the four screws pan (S/P washers) (M4x14) (shown in the red triangles below).

(18) Remove the Ink Cartridge Cover F.

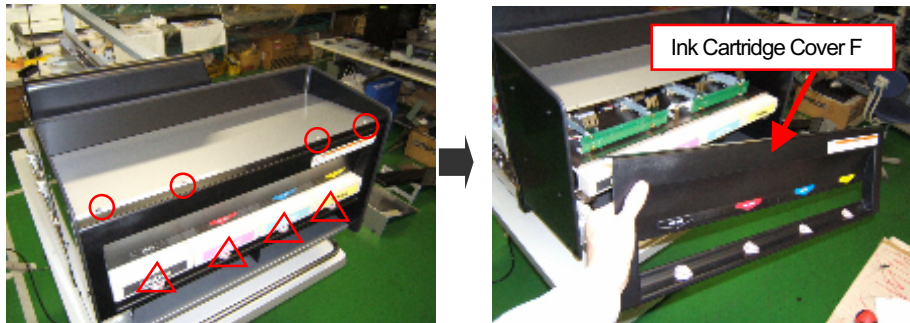

(19) Remove the four screws truss (M4x6) (in the red circles shown below) from both sides of the Ink Cartridge Cover R.

(20) Remove the Ink Cartridge Cover U and the two Cover Supports on both sides of the Ink Cartridge Cover U.

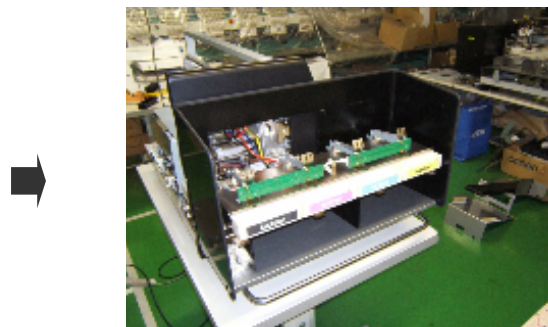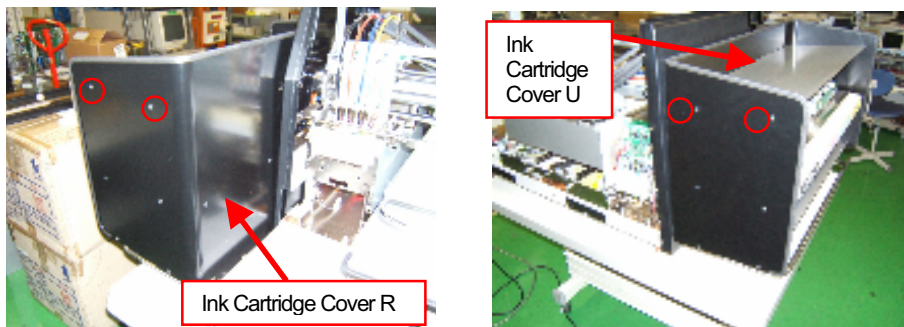


7. Disassembly

- (21) Remove the four screws truss (M4x6) (in the red circles shown below) from both sides of the Ink Cartridge Cover R.
- (22) Remove the Ink Cartridge Shelf Plate and the two Cover Supports on both sides of the Ink Cartridge Shelf Plate.



(23) Remove the six screws truss (M4x6) (in the red circles shown below) from the Ink Cartridge Cover R.

(24) Remove the Ink Cartridge Cover R.

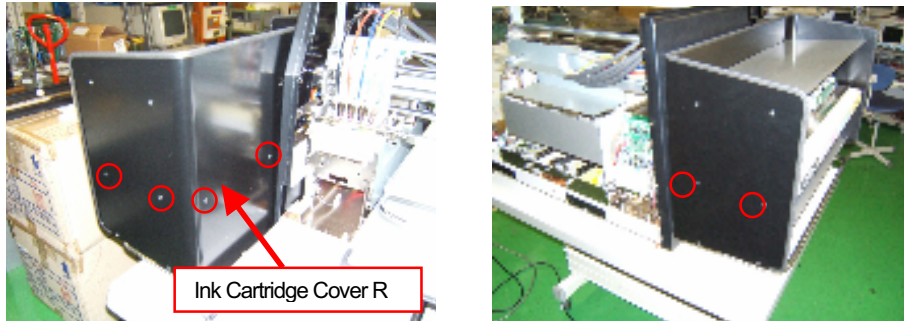

(25) Remove the three screws pan (S/P washers) (M4x14) (in the red circles shown below) from the Side Cover L.

