

Syringe Kit

The syringe Kit to flush the head is GT5SESKIT (when using this, flush the head first with air (refer to "Flush Kit SE tool Wash Liquid Manual PN GT5SESKIT.pdf"), to clear the head and lines, remove the head, then use the syringe kit, then force air through the head with no chemical, replace the head into carriage, reintroduce the ink, by do initial clean, then test, you

May have to do a powerful clean after also.

The Cleaning Cartridge for the tubes and head is SA5718201, GT5SESKIT syringe Kit