


Tutorials > Snowman™ Embroidery Positioning Marker Tutorial

Learn how to accurately position embroidery motifs using Brother's InnovEye™ technology along with the Snowman™ Embroidery Positioning Marker. Use this method to embroider the motifs used in the dining room ensemble.

Perfect positioning is easy and effortless with your Quattro™! You can align *any design* using this technique.

Materials and Supplies

- Quattro™ 6000D Sewing and Embroidery Machine.
- SAEPS1 Snowman™ Embroidery Positioning Markers.
- Design used in this example: Motif #35 from Brother Exclusives Vintage designs built in to Quattro 6000D.
- Fabric used in this example: **Bow trim** piece cut 4.5 inches wide by 8.5 inches long.
- SA-5810 Brother Medium Weight Tear Away Stabilizer.
- Temporary adhesive spray for embroidery.

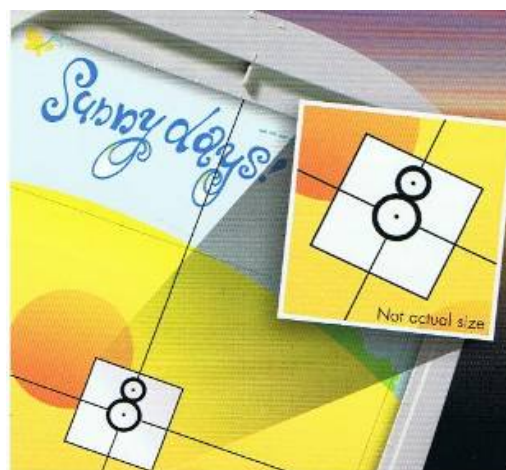

Note: Stabilize the fabric for embroidery using the tear away stabilizer. In this instance the stabilizer is hooped first, and then the fabric piece is secured to the stabilizer with temporary adhesive spray. Remove stabilizer when finished with embroidery.

Instructions for Positioning Designs Using the Snowman™ Embroidery Positioning Marker

1. Set up machine for embroidery. Select the Embroidery Edit mode. Select motif #35 from Brother Exclusives Vintage designs. Touch Set. Touch Rotate. Rotate design 90 degrees to the right. Touch Close. Touch Sewing.

*See **Figure#1**

2. Mark the **exact** location for the center of the embroidery design on your fabric. Hoop the stabilizer and secure the



Figure 1

Fabric on top, having the center markings located in the **approximate** center of the hoop. *See **Figure #2**.

- Place the adhesive backed Snowman™ Marker over the center markings, aligning the marker and having the small circle indicate the top of the design. *See **Figure #3**.

Figure #2



Figure #3



- Place the hoop on the machine. Touch the Embroidery Positioning icon on the screen. *See **Figure #4**.
- Touch Scan. Touch OK. The InnovEye™ will capture the precise position for the center of the embroidery and prompt you to remove the adhesive marker. *See **Figure #5**.
- Remove the marker. Touch Close. Embroider the design.



Embroidery Positioning Key

Figure 4

Figure #5

That is it! Your design is embroidered precisely where you wanted it!

