


## Confirm Nozzle Check Pattern White

1. Make sure the platen height is set to the “A” position.

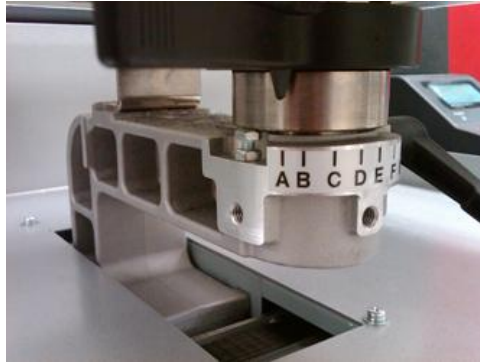


2. Place a piece of transparent acetate in the right hand corner of the platen making sure it is flat (not curled) on the platen.



3. Scroll down on the panel and locate test print, Press ok.



4. Select: Nozzle check white, press OK.

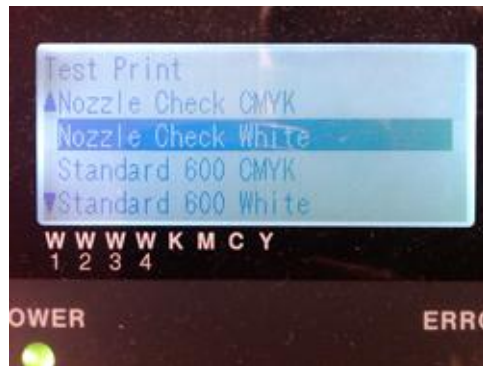

5. Press OK to start.
6. The Nozzle check should look like the image below. Perform Head cleanings as needed.

