



Home Sewing Machine

PARTS REFERENCE LIST

MODEL: LX-3125

LX-3125E

LS-3125

VX3240

FB1453

CONFIDENTIAL

©2003 Brother Industries, Ltd.
All rights reserved.

Published: Dec.,2003
Revised: Feb.,2016

MODEL LIST

Model	Countries (Added Date)
LX-3125	USA, CAN (Mar / 2011)
LX-3125E	USA (Mar / 2011)
LS-3125	RUS (Mar / 2011)
LX-3125	ARG, PRY (Sep / 2011)
VX3240	USA (Jul / 2013)
FB1453	USA (Oct / 2013)
LX-3125	CHL, PER (Mar / 2015)


CONTENTS

(1) MAIN FRAME / COVER	2
(2) UPPER SHAFT / NEEDLE BAR / TAKEUP LEVER / PRESSER FOOT MECHANISM	4
(3) HORIZONTAL / VERTICAL FEED / FEED CONTROL MECHANISM.....	6
(4) LOWER / SHUTTLE / ROTARY / ZIGZAG / PATTERN / BOBBIN WINDING MECHANISM	8
(5) LAMP / MAIN MOTOR UNIT	10
(6) ACCESSORY / USER MANUAL / OTHER PARTS / PACKAGE	12

Note on parts:

We keep performance parts for this sewing machine for at least 8 years after this model is discontinued. Performance parts are the necessary parts to maintain the function of the sewing machine.


(1) MAIN FRAME / COVER

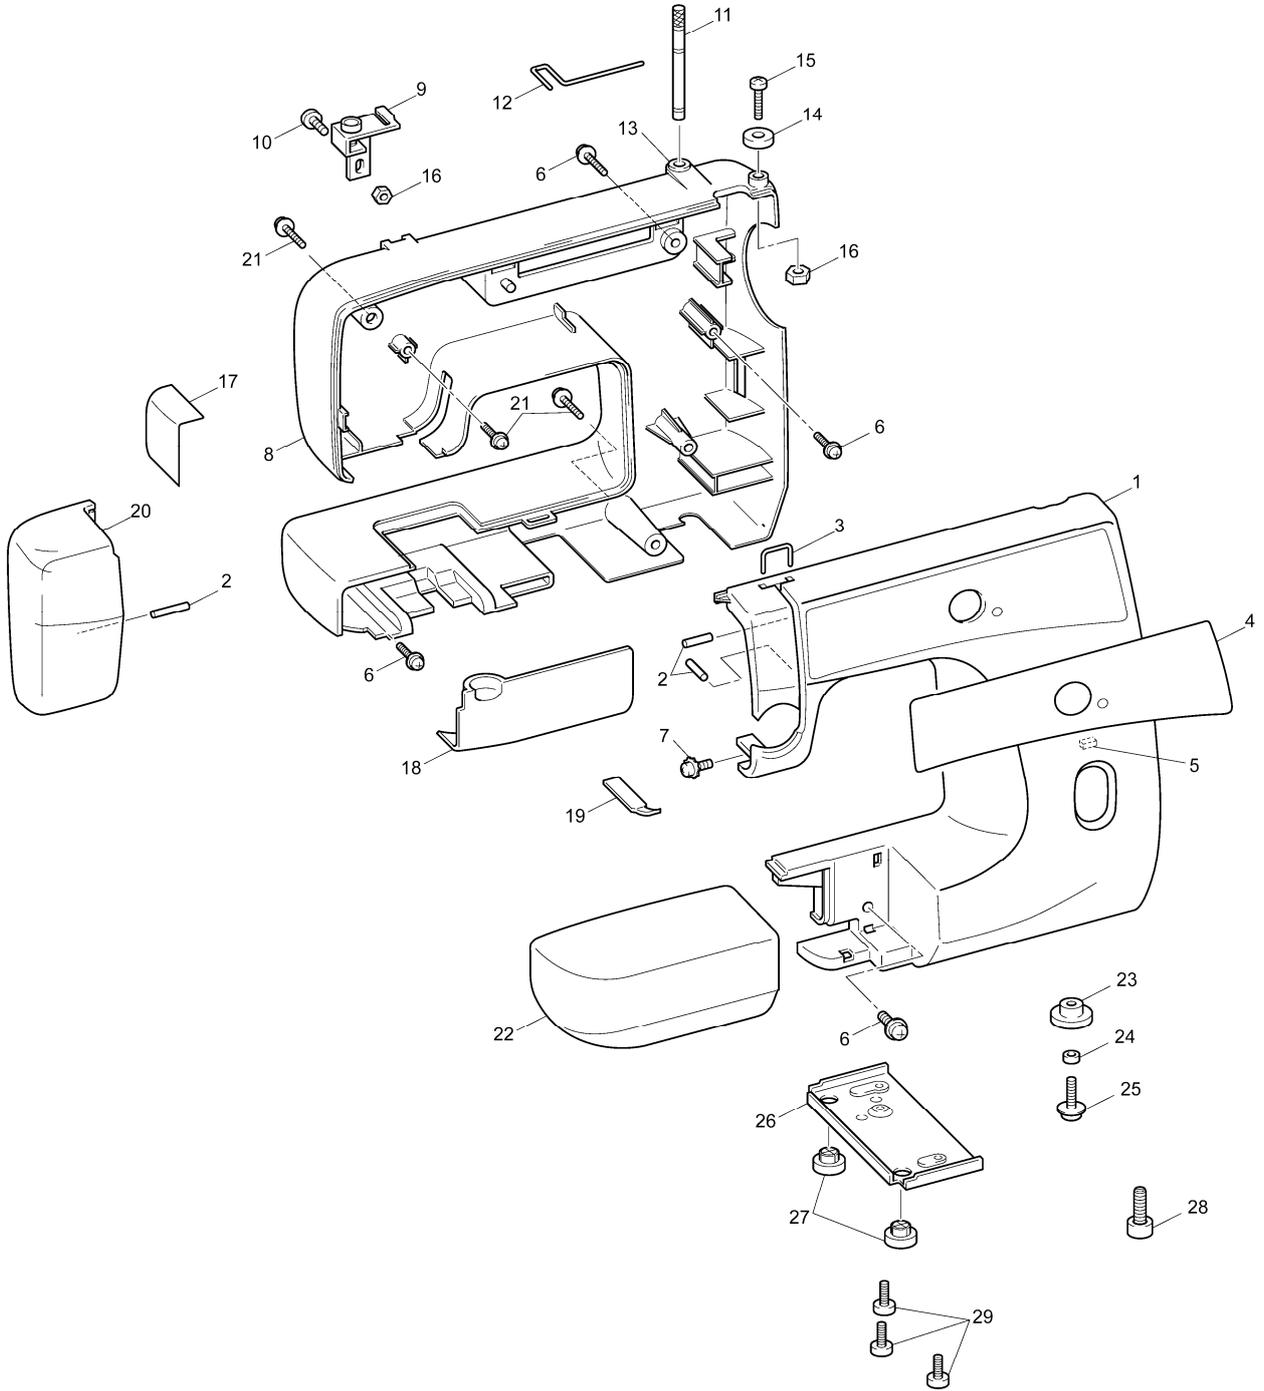


(1) MAIN FRAME / COVER

No.	CODE	NAME	REMARKS
1	XE2150001	FRONT COVER	
2	0A0211850	PIN SPRING ROLL BW2	
3	X53625121	UPPER COVER THREAD GUIDE	
4	XE2338001	DECORATION SHEET (LX-3125: USA, ARG, PRY, CHL, PER)	
	XE7599001	DECORATION SHEET (LX-3125: CAN, LX-3125E)	
	XE8902001	DECORATION SHEET (LS-3125)	
	XF7363001	DECORATION SHEET (VX3240)	1000037448
	XF8055001	DECORATION SHEET (FB1453)	1000039958
5	XA7769021	CUSHION	
6	138172021	SCREW, PAN (S/P WASHER) M4X10	
7	053400806	SCREW, PAN (T WASHER) M4X8	
8	XD0291221	REAR COVER	1000026816
9	XE7029001	THREAD GUIDE ASSY	
10	0A5301006	SCREW, PAN (S/P WASHER) M3X10	
11	XE6223001	SPOOL PIN	
12	XA0628121	SPOOL PIN SPRING	
13	XA8851021	SPOOL PIN STAND	
14	XE8912001	BOBBIN PRESSER	
15	052301606	SCREW, PAN (S/P WASHER) M3X16	
16	021300106	NUT 1 M3	
17	X57891021	REFLECTOR	
18	XA7926021	HINGED DOOR	
19	X53638121	SPRING	
20	XE2217001	FACE PLATE	
21	XZ5164001	TAPTITE, CUP P M4X19	1000036733
22	XE2218001	ACCESSORY TABLE	
23	X58361021	RUBBER CUSHION	
24	X56474021	SPACER	
25	X57297021	SCREW	
26	XA7932021	BASE PLATE	
27	XA1805021	BASE RUBBER A	
28	XA4687021	ADJUSTING SCREW ASSY	
29	060400816	SCREW BIND M4X8	


(2) UPPER SHAFT / NEEDLE BAR / TAKEUP LEVER / PRESSER FOOT MECHANISM

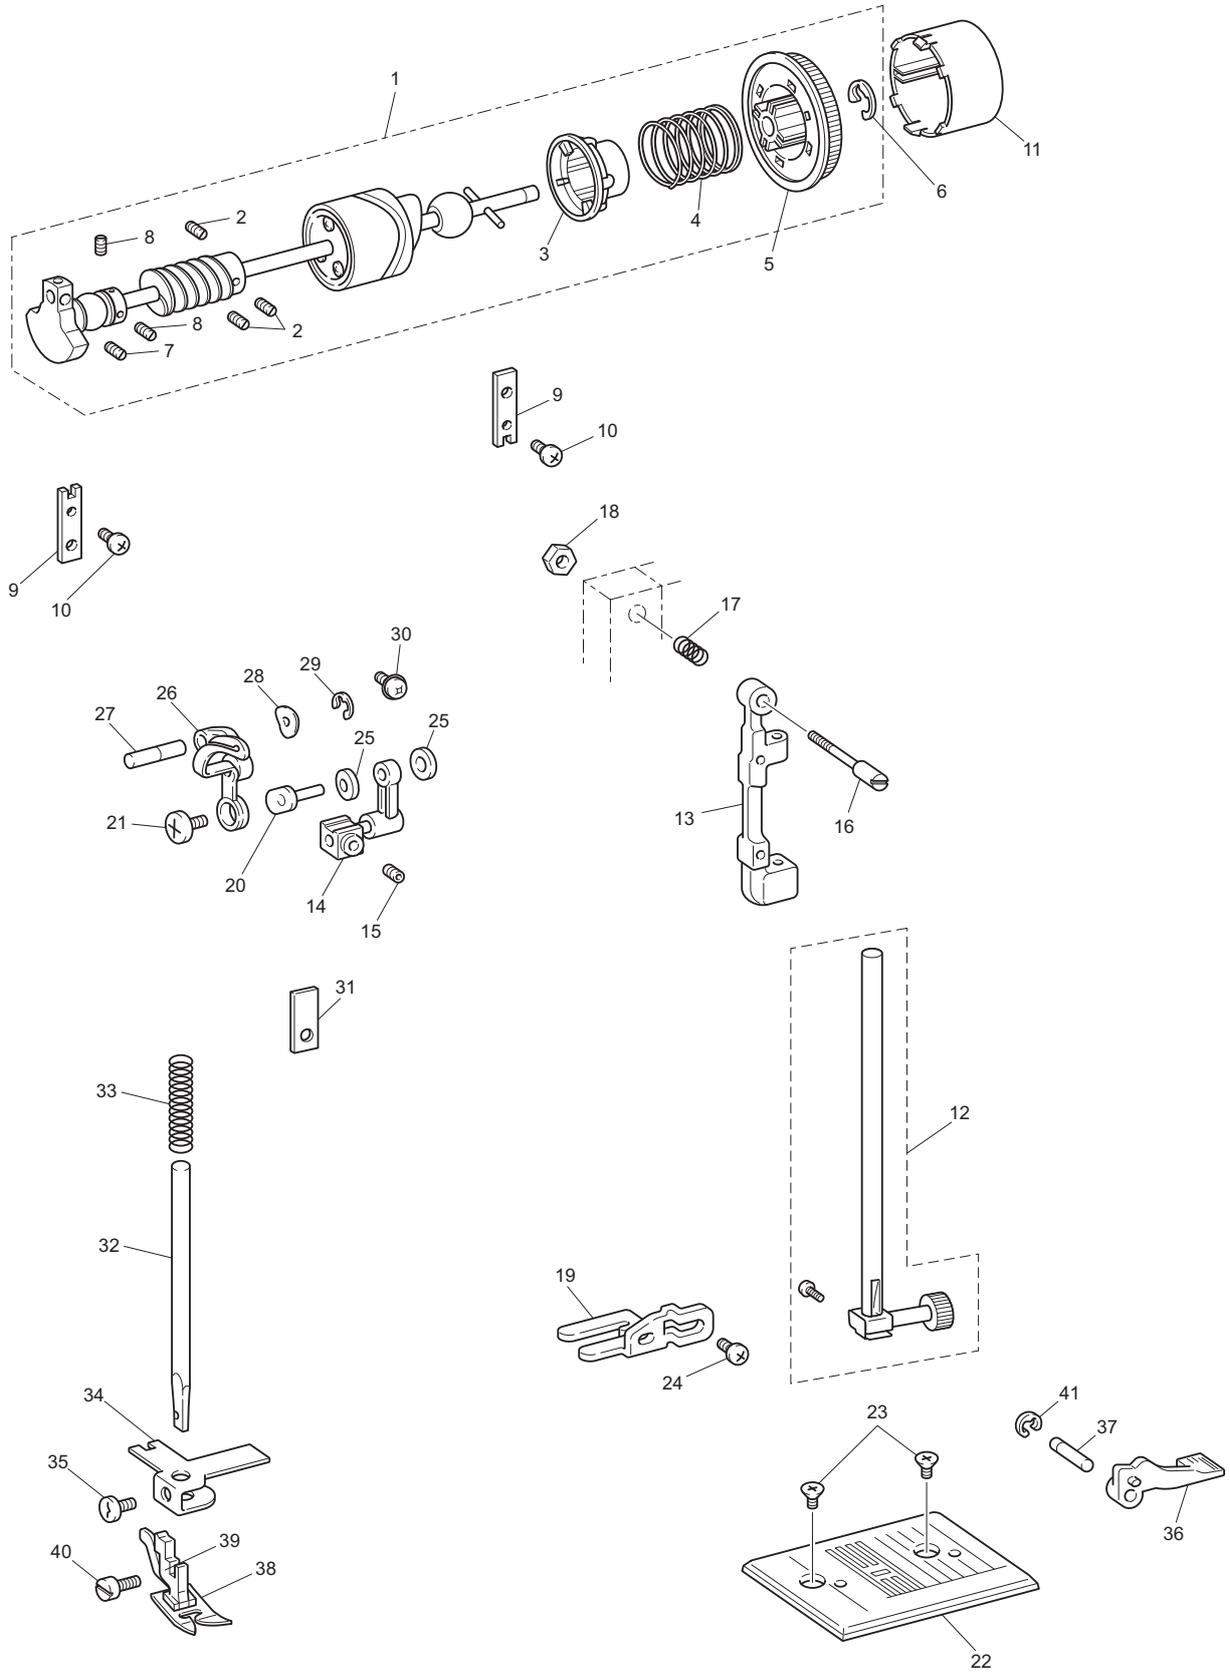

(3) HORIZONTAL / VERTICAL FEED / FEED CONTROL MECHANISM

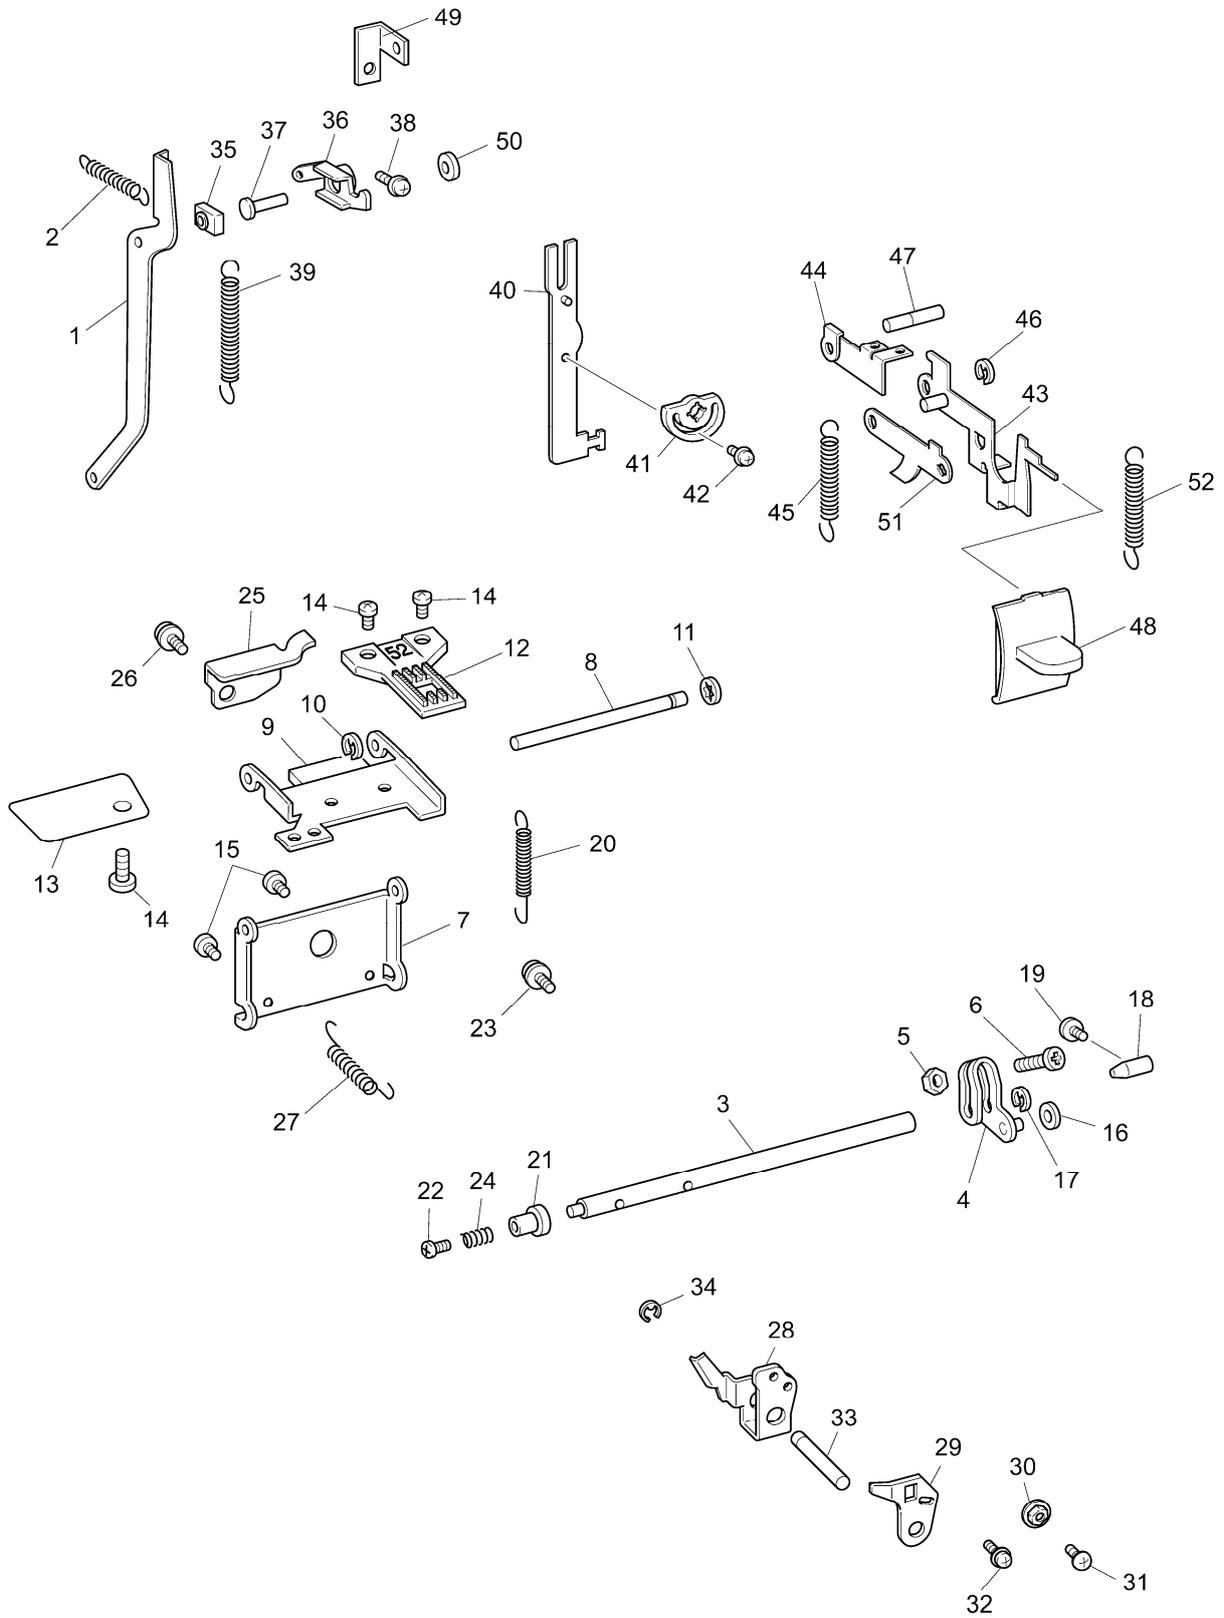


(4) LOWER / SHUTTLE / ROTARY / ZIGZAG / PATTERN / BOBBIN WINDING MECHANISM

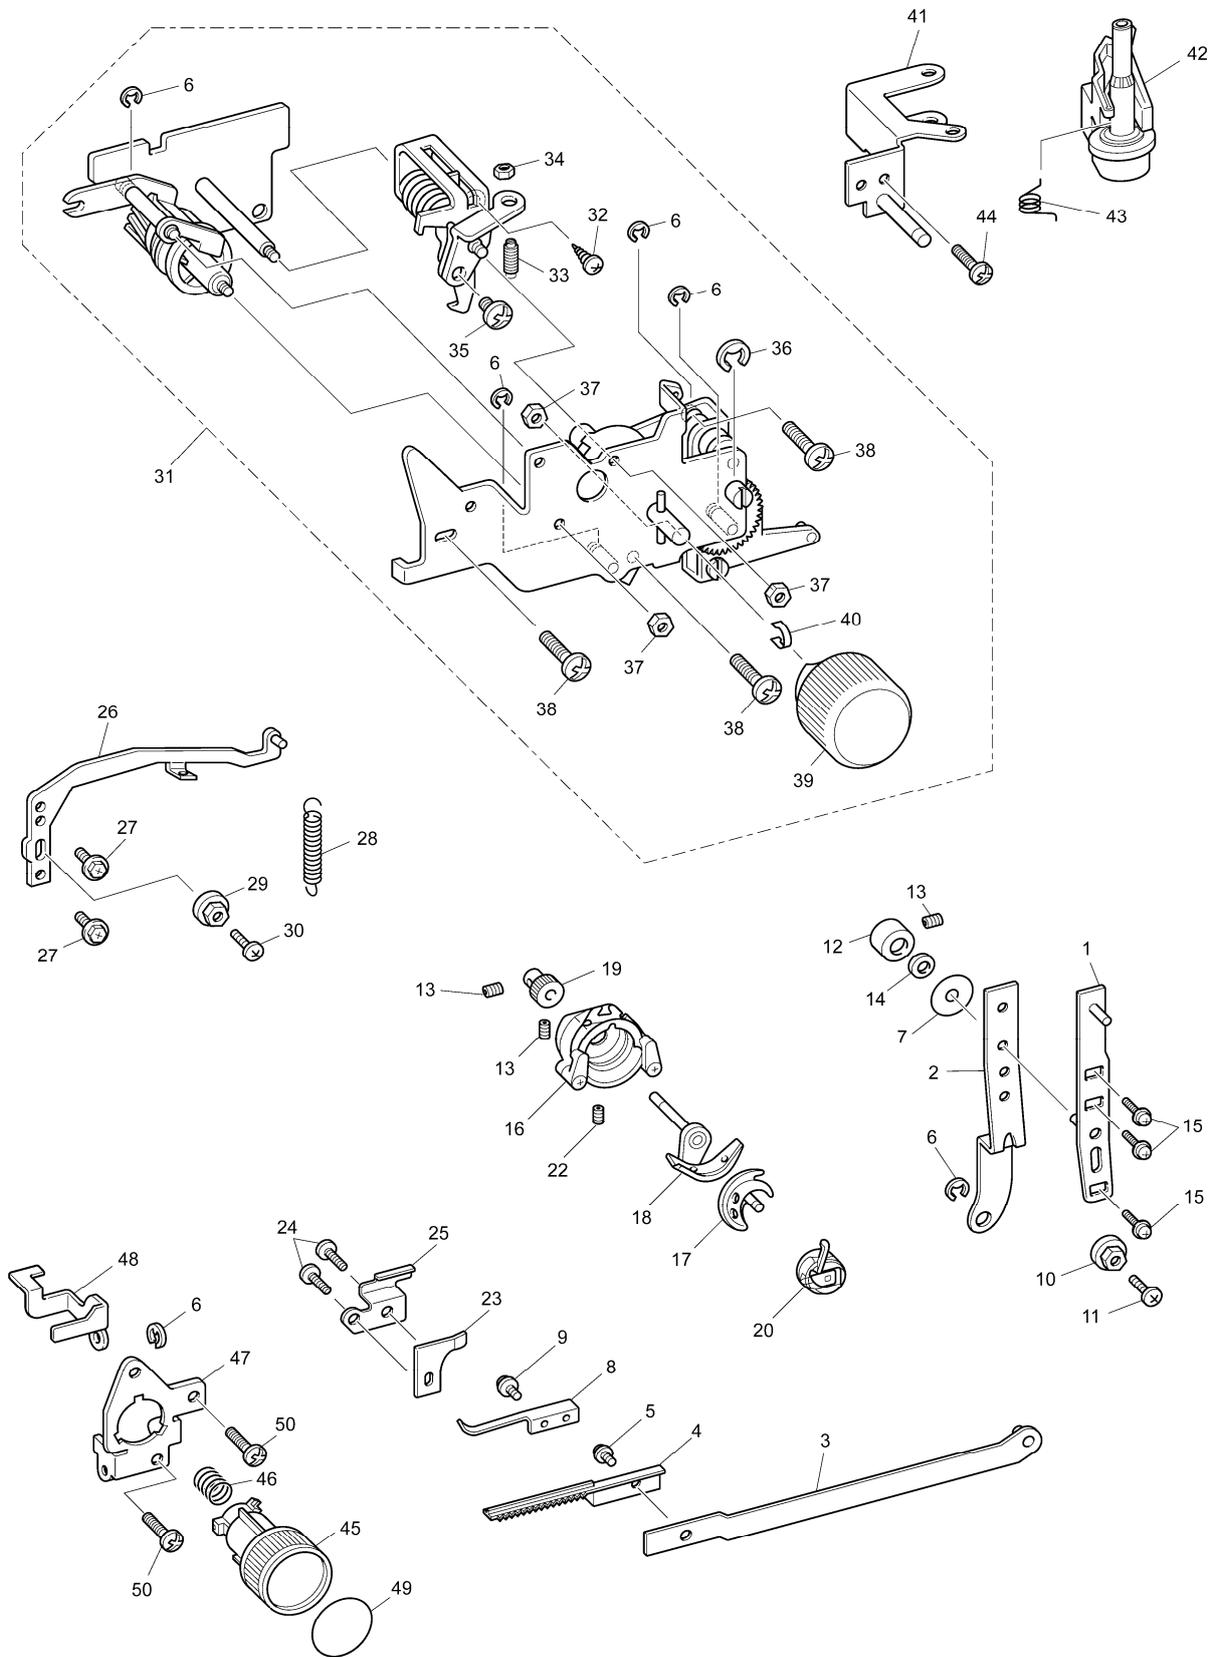

(4) LOWER / SHUTTLE / ROTARY / ZIGZAG / PATTERN / BOBBIN WINDING MECHANISM

No.	CODE	NAME	REMARKS	No.	CODE	NAME	REMARKS
LOWER SHAFT MECHANISM				BOBBIN WINDING MECHANISM			
1	XA4693121	CAM DRIVE CONNECTING ROD A		41	XA7986021	BOBBIN WINDER HOLDER SUB ASSY	
2	XA1012221	CAM DRIVE CONNECTING ROD B		42	XA1049021	BOBBIN WINDER SPINDLE ASSEMBLY	
3	XA1014021	CAM DRIVE ROD C SUB ASSY		43	X59939021	BOBBIN WINDER SPRING	
4	XA1017120	RACK		44	X57908021	TAPTITE, BIND S M4X10	
5	XC7564021	SCREW, PAN (S/P WASHER) M3X6		NEEDLE THREADING MECHANISM			
6	048040346	RETAINING RING E4		45	XE3453101	UPPER TENSION CONTROL DIAL	1000025308
7	131976020	WASHER, THRUST		46	X55821051	THREAD TAKE-UP SPRING	
8	XA1019021	RACK PLATE SPRING		47	XA4426021	TENSION CONTROL HOLDER ASSY	
9	XA8290021	TAPTITE, BIND S M4 x 8		48	XA1058021	UPPER TENSION CONTROL RELEASER	
10	X50559020	ZIGZAG ADJUSTING NUT		49	XA1255121	THREAD TENSION LABEL	
11	062301006	SCREW PAN M3X10		50	X57908021	TAPTITE, BIND S M4X10	
12	X52077121	COLLAR					
13	014400432	SET SCREW SOCKET (CP) M4X4					
14	X53330020	WASHER					
15	XA6907021	SCREW 4X8					
SHUTTLE HOOK / ROTARY HOOK							
16	XA1317022	SHUTTLE RACE ASSEMBLY					
17	128581022	SHUTTLE HOOK					
18	XA1021021	SHUTTLE DRIVE ASSY					
19	XA1025021	DRIVER SHAFT GEAR					
20	128582023	BOBBIN CASE ASSEMBLY					
21	X52800120	BOBBIN					
22	014400632	SET SCREW SOCKET (CP) M4X6					
23	X57313221	RACK STOPPER	1000029128				
24	X57908021	TAPTITE, BIND S M4X10					
25	XA5702021	RACK STOPPER A					
ZIGZAG MECHANISM							
26	XA4483121	ZIGZAG CONNECTING ROD ASSY					
27	XA8474021	UPSET 4 x12 DB					
28	XA1529021	SPRING					
29	X50559020	ZIGZAG ADJUSTING NUT					
30	062301006	SCREW PAN M3X10					
PATTERN SELECTTING MECHANISM							
31	XC0363021	SELECTING UNIT ASSY					
32	136681021	TAPTITE, BIND B M3X8					
33	XA1620051	ADJUSTING SCREW					
34	X56851021	LOCK NUT					
35	060400416	SCREW, BIND M4X4					
36	048050346	RETAINING RING E5					
37	021400202	NUT 2 M4					
38	X57908021	TAPTITE, BIND S M4X10					
39	XC0369021	SELECTING DIAL					
40	XC0549020	DIAL HOLD PLATE					


(5) LAMP / MAIN MOTOR UNIT

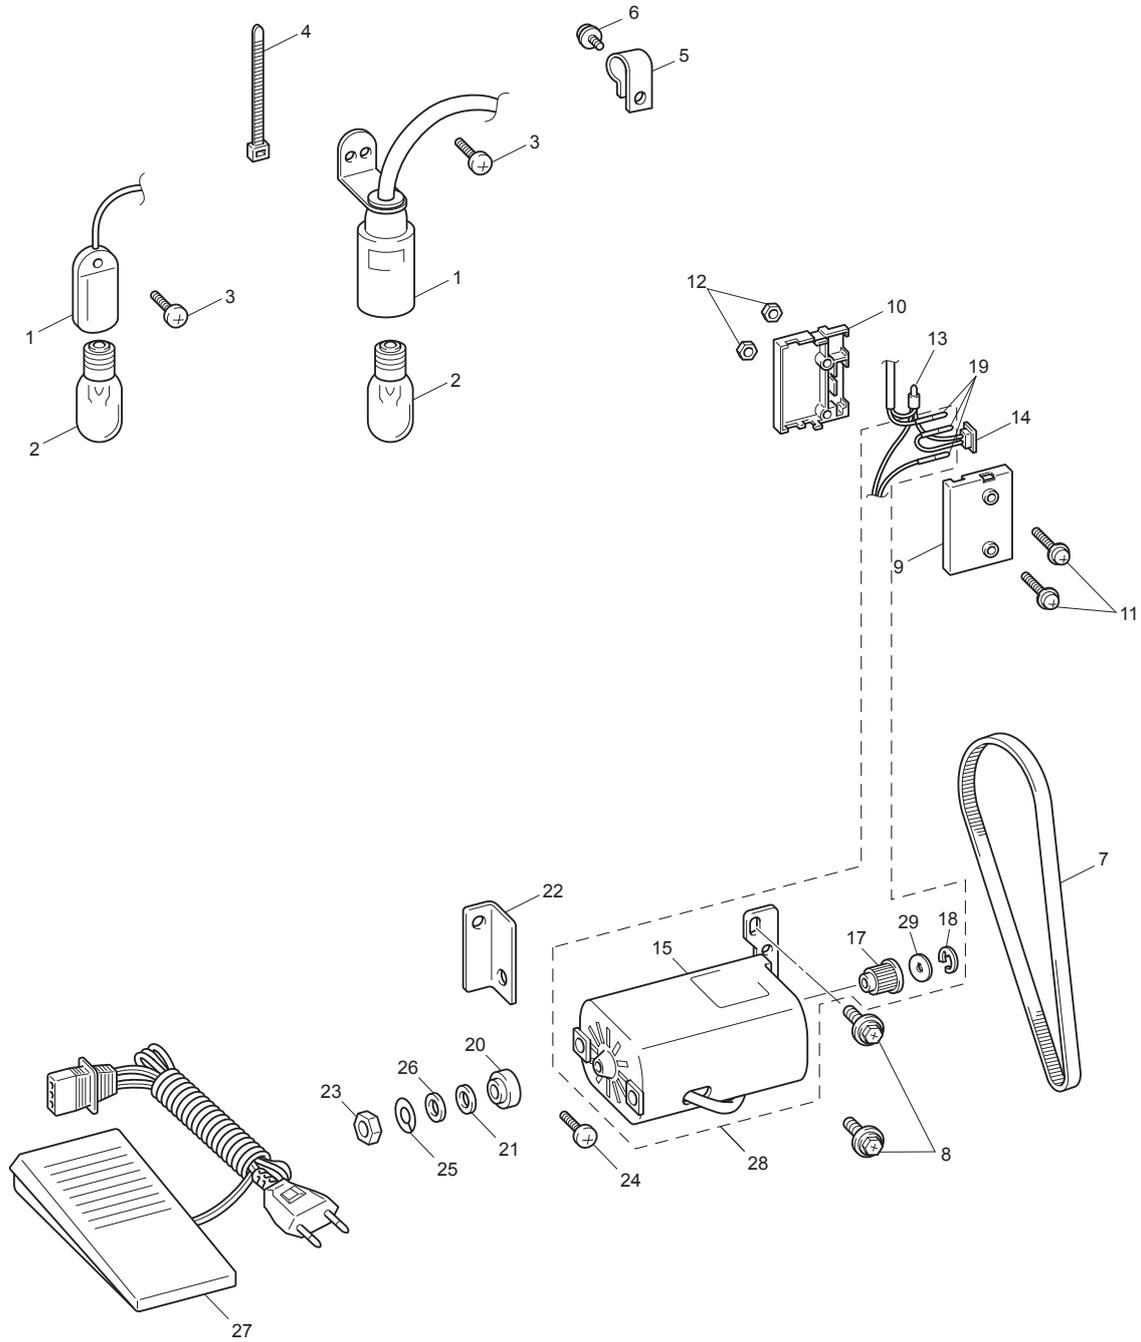

(5) LAMP / MAIN MOTOR UNIT

No.	CODE	NAME	REMARKS
LAMP UNIT			
1	XC6789021	ASSY: SEWING LAMP E12C#025 (100-120V)	
	XA1064021	SEW-LIGHT ASSY (220-240V)	
2	X53061030	SEW-LIGHT BULB (100-120V)	
	205336030	SEW-LIGHT BULB L-4 (220-240V)	
3	X57984021	TAPTITE, BIND S M3 x 20 (100-120V)	
	XA1623021	TAPTITE, BIND S M3 x 10 (220-240V)	
4	X53169020	BAND (220-240V)	
5	XA7678021	CORD CLAMP	
6	X57908021	TAPTITE, BIND S M4 x 10	
MAIN MOTOR UNIT			
7	XA1196021	T BELT B163XXL4.8	
8	XA3004021	BOLT, (S/P WASHER) M5 x 12	
9	XA8786021	3P SOCKET BODY	
10	XA8787021	3P SOCKET COVER	
11	052403006	SCREW, PAN (S/P WASHER) M4X30	
12	021400206	NUT 2 M4	
13	214808020	CONNECTOR: #3	
14	XA1070021	PW SWITCH ASSY (100-120V)	
	XA1073021	PW SWITCH ASSY (220-240V)	
15	XF7011001	MOTOR: HFA-07150 #2 (100-120V)	1000045932
	XC7436421	MOTOR: NS-70 FDM230V (220-240V)	
	XC7599521	MOTOR: NS-70 FDM220V (220V)	1000026810
16	XA1265120	MOTOR T-PULLEY A	1000045932
17	XF7358001	MOTOR T-PULLEY 9	1000045932
18	048030346	RETAINING RING E3	1000045932
19	138598021	SOCKET PIN	
20	XC2138020	SPACER (100-120V)	
21	XC2139020	WASHER (100-120V)	
22	XE2842001	MOTOR SUPPORTER (100-120V)	
23	021400206	NUT 2 M4 (100-120V)	
24	XA8474021	UPSET 4X12 DB (100-120V)	
25	028040242	WASHER SPRING 2-4 (100-120V)	
26	102707023	WASHER (100-120V)	
27	XC7359021	FOOT CONTROLLER: KD-1902 (100-120V)	
	XC7438521	FOOT CONTROLLER: KD-2902 (220-240V)	1000053083
	XD0112221	FOOT CONTROLLER:KD-2902IRAM (ARG)	1000053357
28	XF7370001	MOTOR: HFA-07150 #2 SUPPLY (100-120V)	1000045932
	XF2694001	MOTOR: NS-70 FDM230V SUPPLY (220-240V)	1000029464
	XF2695001	MOTOR: NS-70 FDM220V SUPPLY (220V)	1000029464
29	XE9183001	FRANGE	1000045932

(6) ACCESSORY / USER MANUAL / OTHER PARTS / PACKAGE

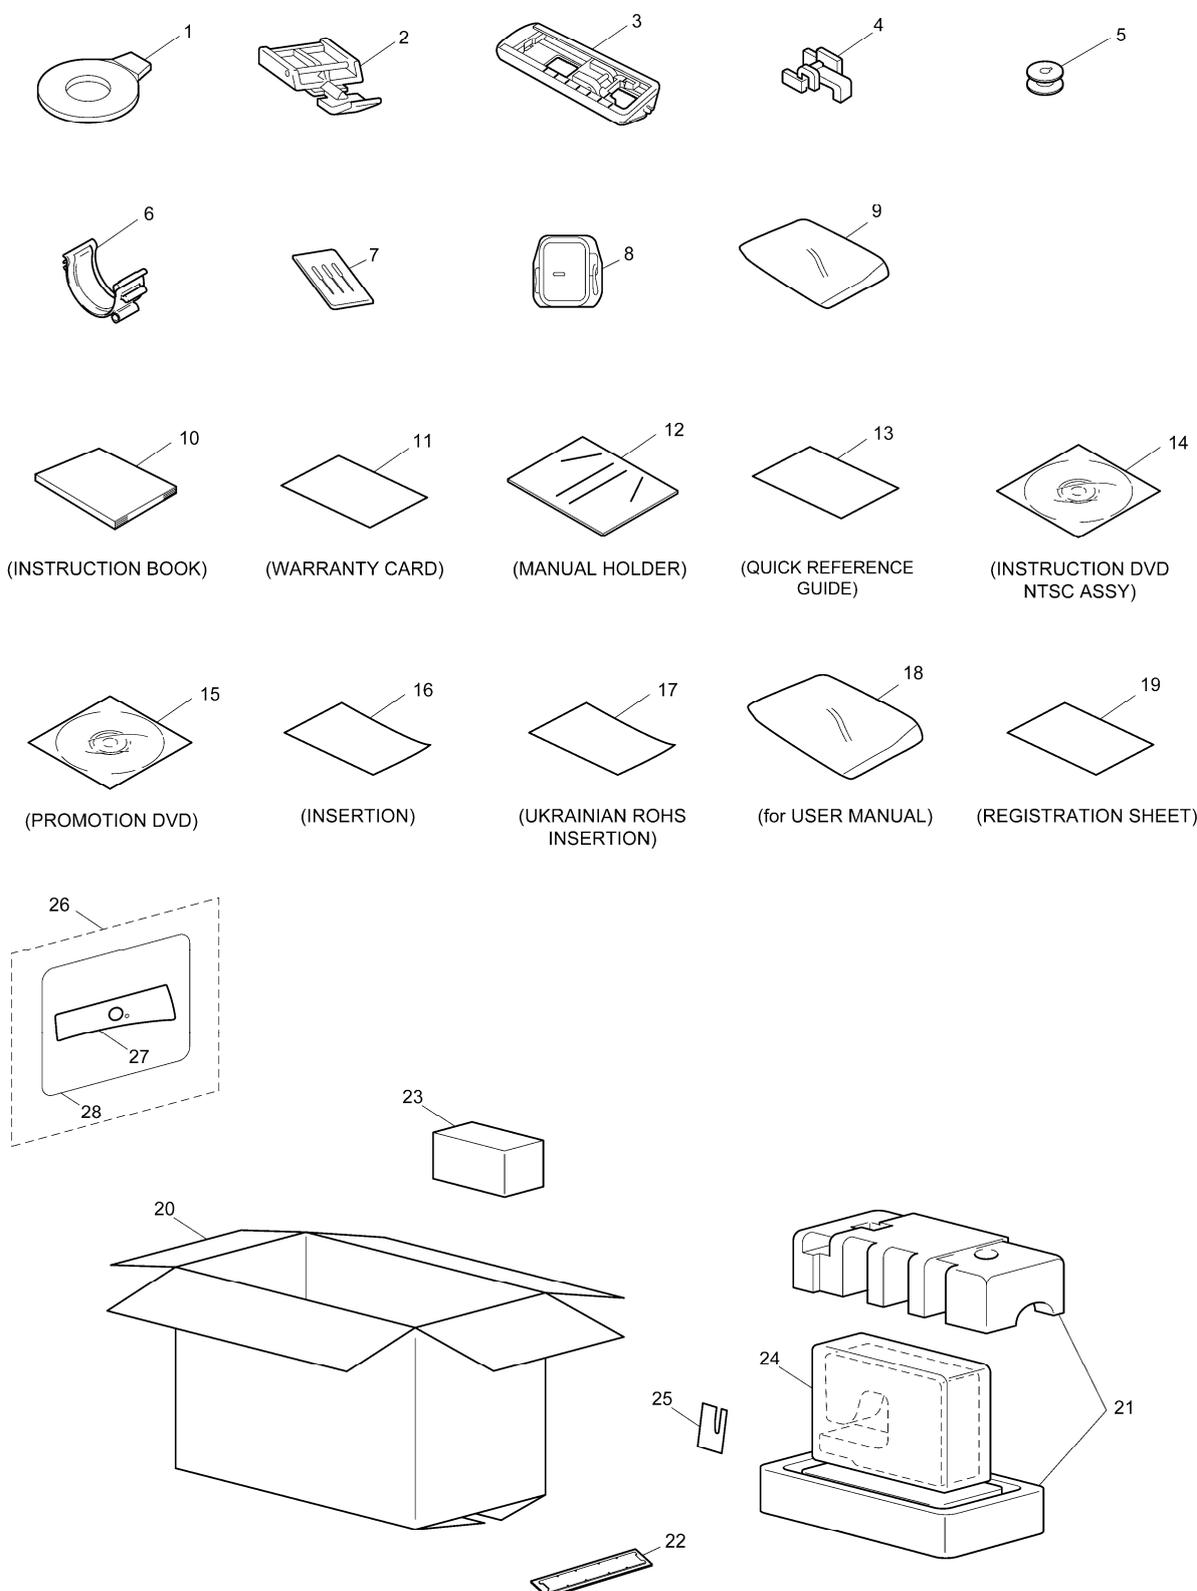

(6) ACCESSORY / USER MANUAL / OTHER PARTS / PACKAGE

No.	CODE	NAME	REMARKS	No.	CODE	NAME	REMARKS
ACCESSORY PARTS				21	XE2342101	PS FOAM PAD ASSY 407	
1	XE5241001	NEEDLE PLATE FIXING METAL		22	LA6041001	SECURITY TAG (USA, CAN)	
2	X59370021	ZIPPER FOOT		23	X60726020	FOOT CONTROLLER BOX	
3	X59369321	BUTTON HOLE FOOT ASSY		24	X60439121	BAG 630X630T	
4	XE2137001	BUTTON SEWING FOOT		25	XZ5028001	NEEDLE BAR PAD D	
5	X52800120	BOBBIN		26	XE8151101	DECORATION SHEET ASSY (LX-3125E)	
6	XE3060001	BOBBIN CLIP (LX-3125E)			XF7374001	DECORATION SHEET ASSY (VX3240)	1000037448
7	XE5328001	NEEDLE SET (3PCS)		27	XE7600101	DECORATION SHEET (LX-3125E)	
8	XA3442121	FEED DOG COVER			XE7601101	DECORATION SHEET (LX-3125E)	
9	XD0789021	BAG, 120X135C			XE7602101	DECORATION SHEET (LX-3125E)	
USER MANUAL / OTHER PARTS					XF7375001	DECORATION SHEET (VX3240)	1000037448
10	XE2346501	INSTRUCTION BOOK (English)	1000051142		XF7376001	DECORATION SHEET (VX3240)	1000037448
	XE8699001	INSTRUCTION BOOK (French)			XF7377001	DECORATION SHEET (VX3240)	1000037448
	XE8873101	INSTRUCTION BOOK (Russian)	1000042825	28	XE7709001	SHEET FOLDER (LX-3125E)	
11	XF5055001	STANDARD WARRANTY FOR US (USA)	1000038646		XF7378001	SHEET FOLDER (VX3240)	1000037448
	XE8671001	WARRANTY CARD BROTHER CANADA (CAN)			XE7297001	NEEDLE PAD D (USA, CAN)	
	XF6323101	2&5 WARRANTY FOR US (USA)	1000036117		XE6613001	GO GREEN STICKER (LX-3125: USA)	
12	XE5374001	MANUAL HOLDER (USA, CAN)			XE5479001	CONTROLLER RAD D (USA, CAN)	
13	XE5240201	QUICK REFERENCE GUIDE (USA)					
	XE8917001	QUICK REFERENCE GUIDE (CAN)					
	XA8545221	QUICK REFERENCE GUIDE (ARG, PRY, CHL, PER)	1000026810				
14	XE5844701	INSTRUCTION DVD NTSC ASSY (USA, CAN)	1000044264				
	XF1306001	INSTRUCTION DVD PAL ASSY (ARG, PRY)	1000026810				
15	XE6308001	INNOV-IS RANGE PROMOTION DVD (RUS)					
16	XF6550001	STOP INSERTION CANADA (CAN)	1000036767				
17	XE9897001	UKRAINIAN ROHS INSERTION (RUS)					
18	130800021	BAG 230X310H (RUS)					
19	XE9639001	REGISTRATION SHEET (USA)	1000029848				
PACKAGE							
20	XE6112001	COLOR CARTON (LX-3125: USA)					
	XE7603201	COLOR CARTON (LX-3125E)	1000025634				
	XE8696001	COLOR CARTON MODEL: LX-3125 (CAN)					
	XE8872001	COLOR CARTON MODEL: LS-3125 (RUS)					
	XF1307001	COLOR CARTON MODEL: LX-3125 (ARG, PRY, CHL, PER)	1000026810				
	XF7379001	COLOR CARTON: VX3240 (VX3240)	1000026810				
	XF8058001	COLOR CARTON: FB1453 (FB1453)	1000039958				

brother