



## Log copy to USB


1. Power on the printer. Press the down arrow on the printer menu to access the main menu.

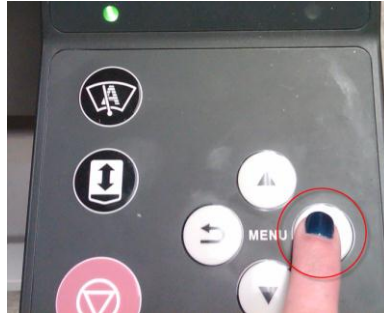

2. Scroll down to Maintenance in the menu. Then click OK.

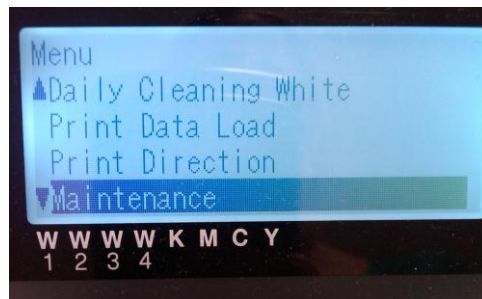


3. Scroll down to Log copy to USB and click OK.

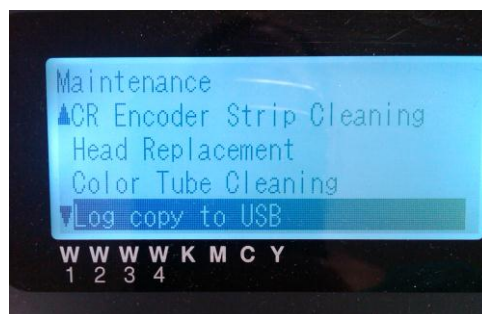


4. Insert a USB flash drive (16GB or less; FAT16/FAT32) into the USB port on the front of the printer.



5. Once you have inserted the USB flash drive follow the prompts on screen.

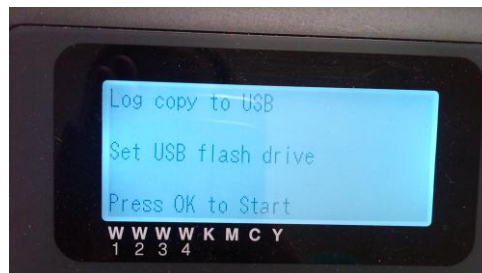

6. Once you hit OK the following screen should appear. Do not remove the USB flash drive until the download is complete.

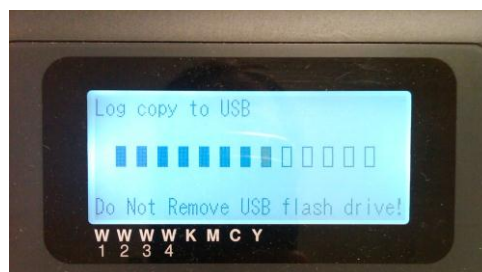

7. The log file is now saved onto your flash drive so it can be e-mail or stored for later review.

---

***Your dealer(s)-distributor(s) are your first line of support, please contact them for prompt assistance. If you do not have a dealer(s)-distributor(s) refer to our website <http://www.brother-usa.com>. For additional information contact Technical Support at 1-877-427-6843 or [tsupport@brother.com](mailto:tsupport@brother.com). Any information within this document is subject to change.***

---